

Tidy up. Cruise around.

# Sewing/Craft Cart

Model 5414873


**NOTE:** THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.


# Table of Contents

# Assembly Tools Required


Part Identification	3
Hardware Identification	4
Assembly Steps	5-18
Français	19-21
Español	22-25
Safety	26
Warranty	27

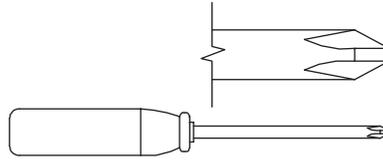

No. 2 Phillips Screwdriver  
Tip Shown Actual Size

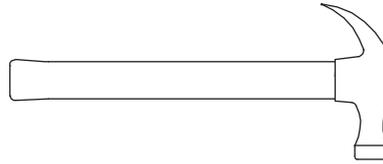

Hammer  
Not actual size 😊

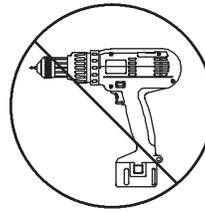

Skip the power trip.  
This time.


# Part Identification

Now you know  
our ABCs.



† While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.





A	RIGHT END (1)	F	BOTTOM (1)	K	RIGHT DOOR (1)
B	LEFT END (1)	G2	MODESTY PANEL (1)	L	BACK (1)
C2	UPRIGHT (1)	H2	SHELF (1)	MM	LEFT DOOR (1)
D	TOP (1)	I	ADJUSTABLE SHELF (2)		
E	FLIP-UP TOP (1)	J	CENTER DOOR (1)		

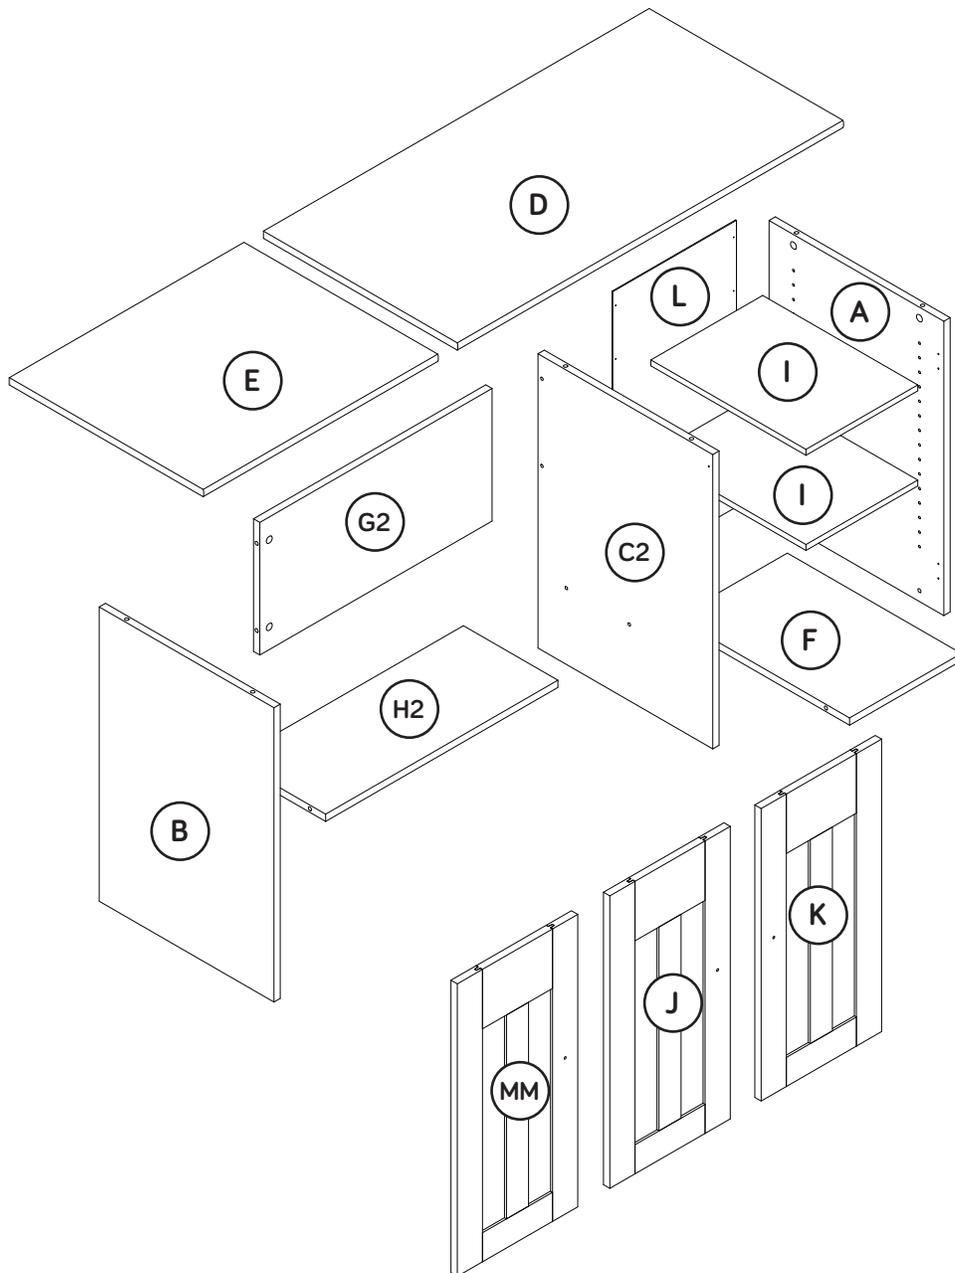




# Hardware Identification

† Screws are shown actual size. You may receive extra hardware with your unit.




- 2CL** LOCKING CASTER - 2    **2CN** CASTER - 4    **2D** TRAY - 2    **3D** TRAY DIVIDER - 8    **17E** CASTER BRACKET - 6

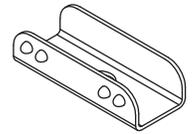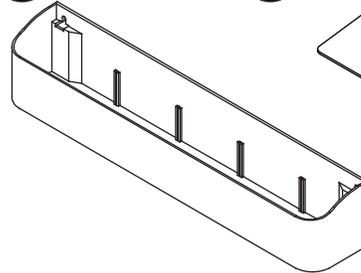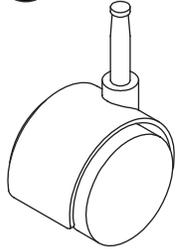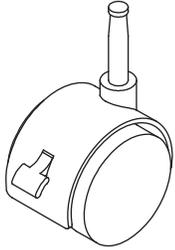


- 1F** HIDDEN CAM - 14    **2F** CAM DOWEL - 14    **2H** NON-ADJUSTABLE HINGE - 2    **3H** ADJUSTABLE HINGE - 2    **16H** HINGE - 5

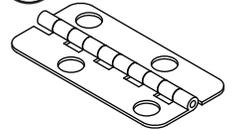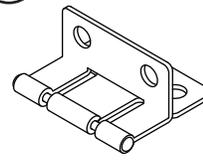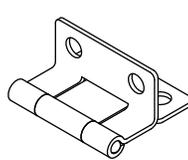

 
 
- 5I** MAGNETIC CATCH - 2    **6I** STRIKE PLATE - 2    **6J** SLIDE CATCH - 1    **72K** KNOB and BACKPLATE - 3

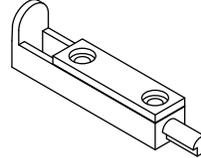

 
- 1N** NAIL - 13    **19P** CAM COVER - 4    **1R** METAL PIN - 8    **2R** RUBBER SLEEVE - 8



  
- 1S** BLACK 9/16" LARGE HEAD SCREW - 40    **9S** BLACK 1-1/8" PAN HEAD SCREW - 2



 - 11S** BLACK 1/2" FLAT HEAD SCREW - 2    **18S** BROWN 1" FLAT HEAD SCREW - 2





 
- 50S** GOLD 1" MACHINE SCREW - 3    **113S** BLACK 1-15/16" FLAT HEAD SCREW - 4



# Step 1

- ✚ Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- ✚ Push fourteen HIDDEN CAMS (1F) into the ENDS (A and B), UPRIGHT (C2), BOTTOM (F), MODESTY PANEL (G2), and SHELF (H2). Then, insert the metal end of a CAM DOWEL (2F) into each HIDDEN CAM.

Do not tighten the HIDDEN CAMS in this step.

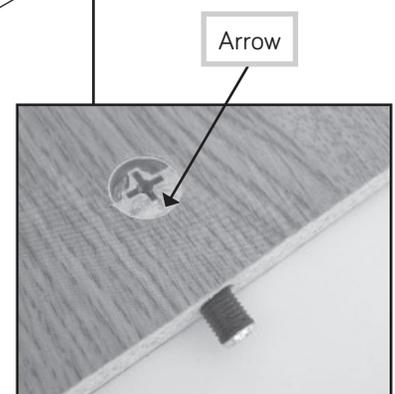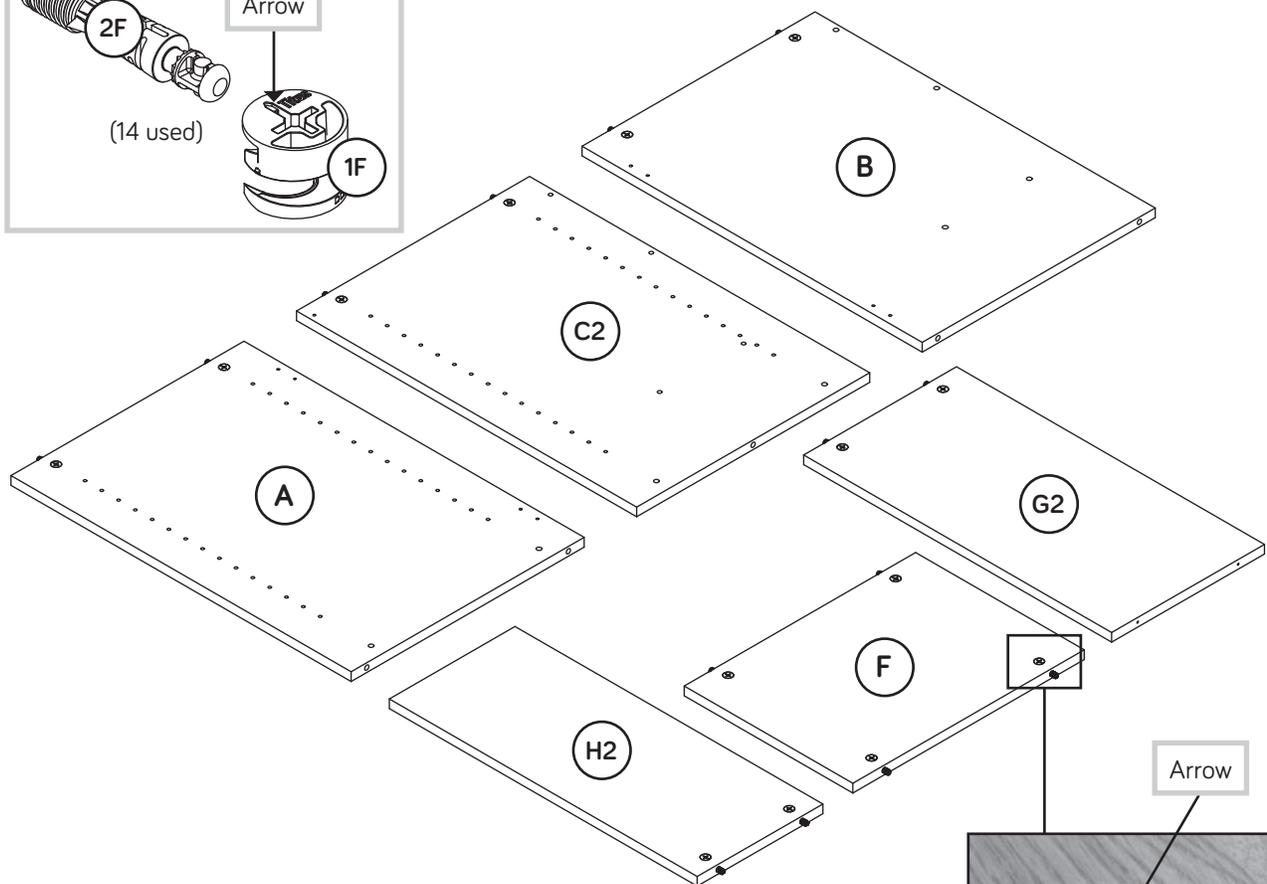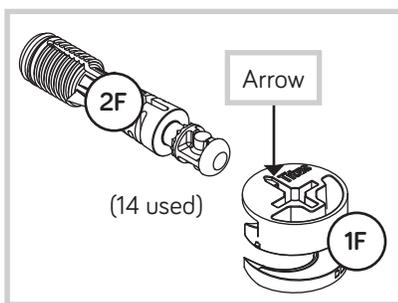


Insert the metal end of the CAM DOWEL into the HIDDEN CAM.

# Step 2

- Fasten the RIGHT END (A) to the TOP (D). Tighten two HIDDEN CAMS.
- Fasten the BOTTOM (F) to the RIGHT END (A). Tighten two HIDDEN CAMS.




Do not stand the unit upright without the BACK fastened. The unit may collapse.

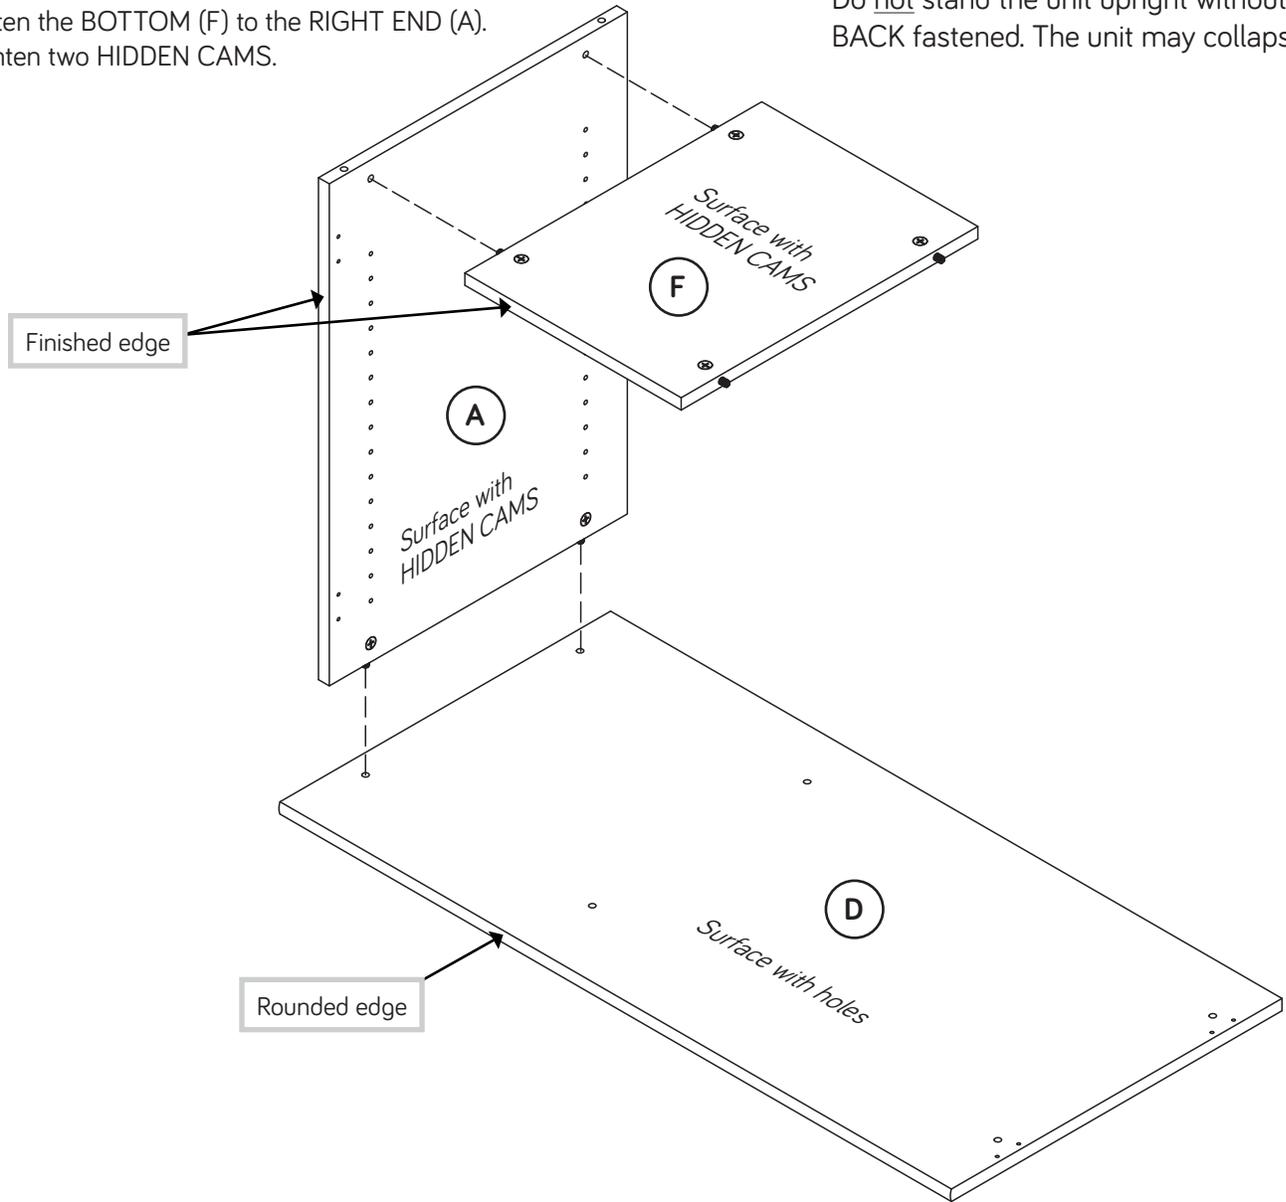

## Caution

Risk of damage or injury. HIDDEN CAMS must be completely tightened. HIDDEN CAMS that are not completely tightened may loosen, and parts may separate. To completely tighten:


### Start

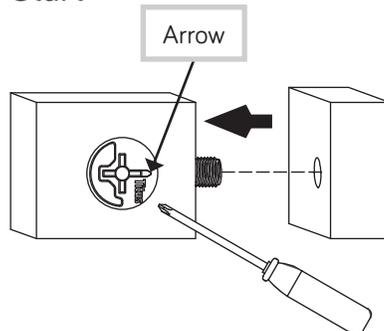

### Tighten



Maximum 210 degrees

Minimum 190 degrees

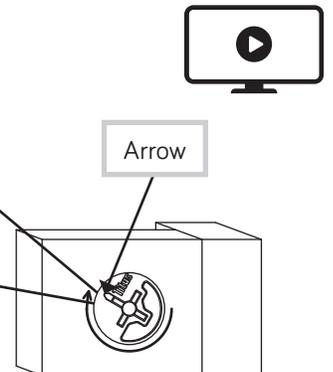



# Step 3

- Fasten the UPRIGHT (C2) to the TOP (D) and BOTTOM (F). Tighten four HIDDEN CAMS.
- Fasten the MODESTY PANEL (G2) to the UPRIGHT (C2). Use two BLACK 1-15/16" FLAT HEAD SCREWS (113S).
- Fasten two MAGNETIC CATCHES (5I) to the UPRIGHT (C2). Use two BLACK 1-1/8" PAN HEAD SCREWS (9S).

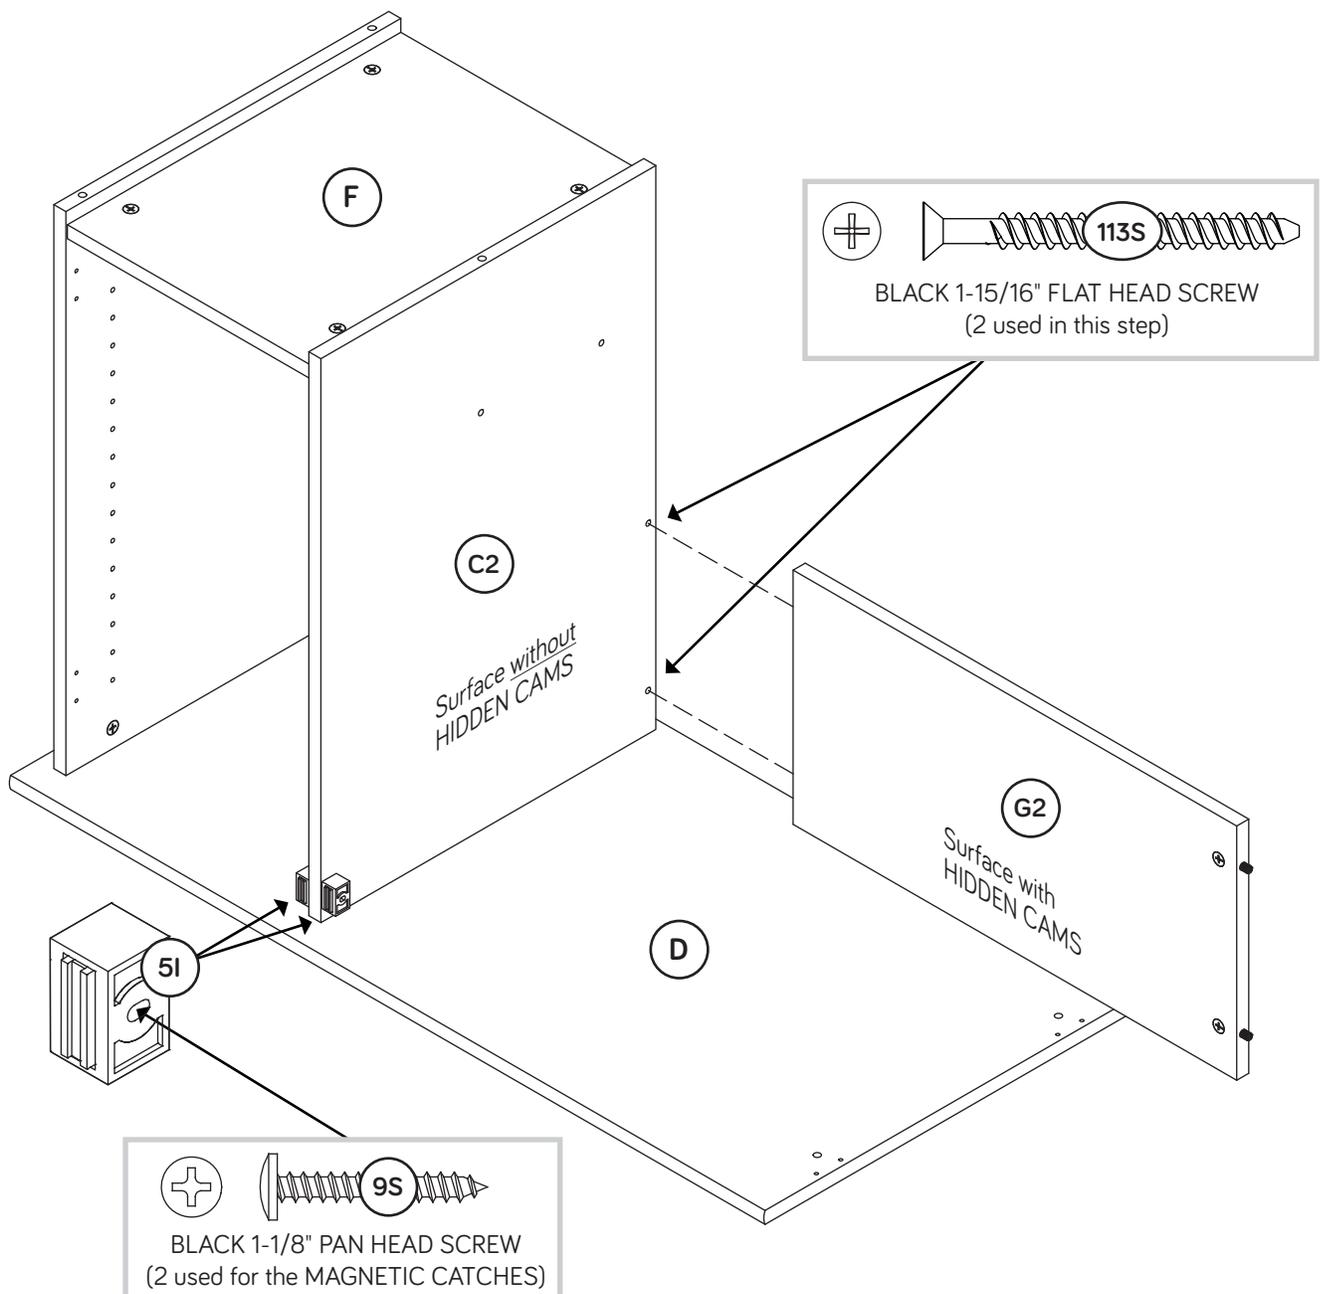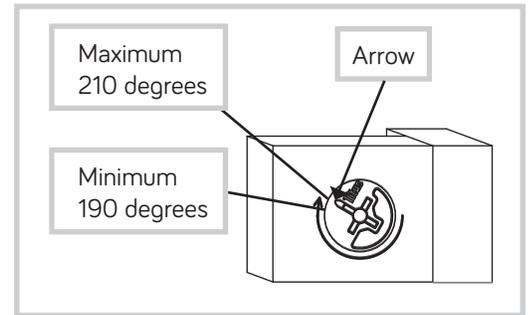




# Step 4

- Fasten the LEFT END (B) to the TOP (D) and MODESTY PANEL (G2). Tighten four HIDDEN CAMS.

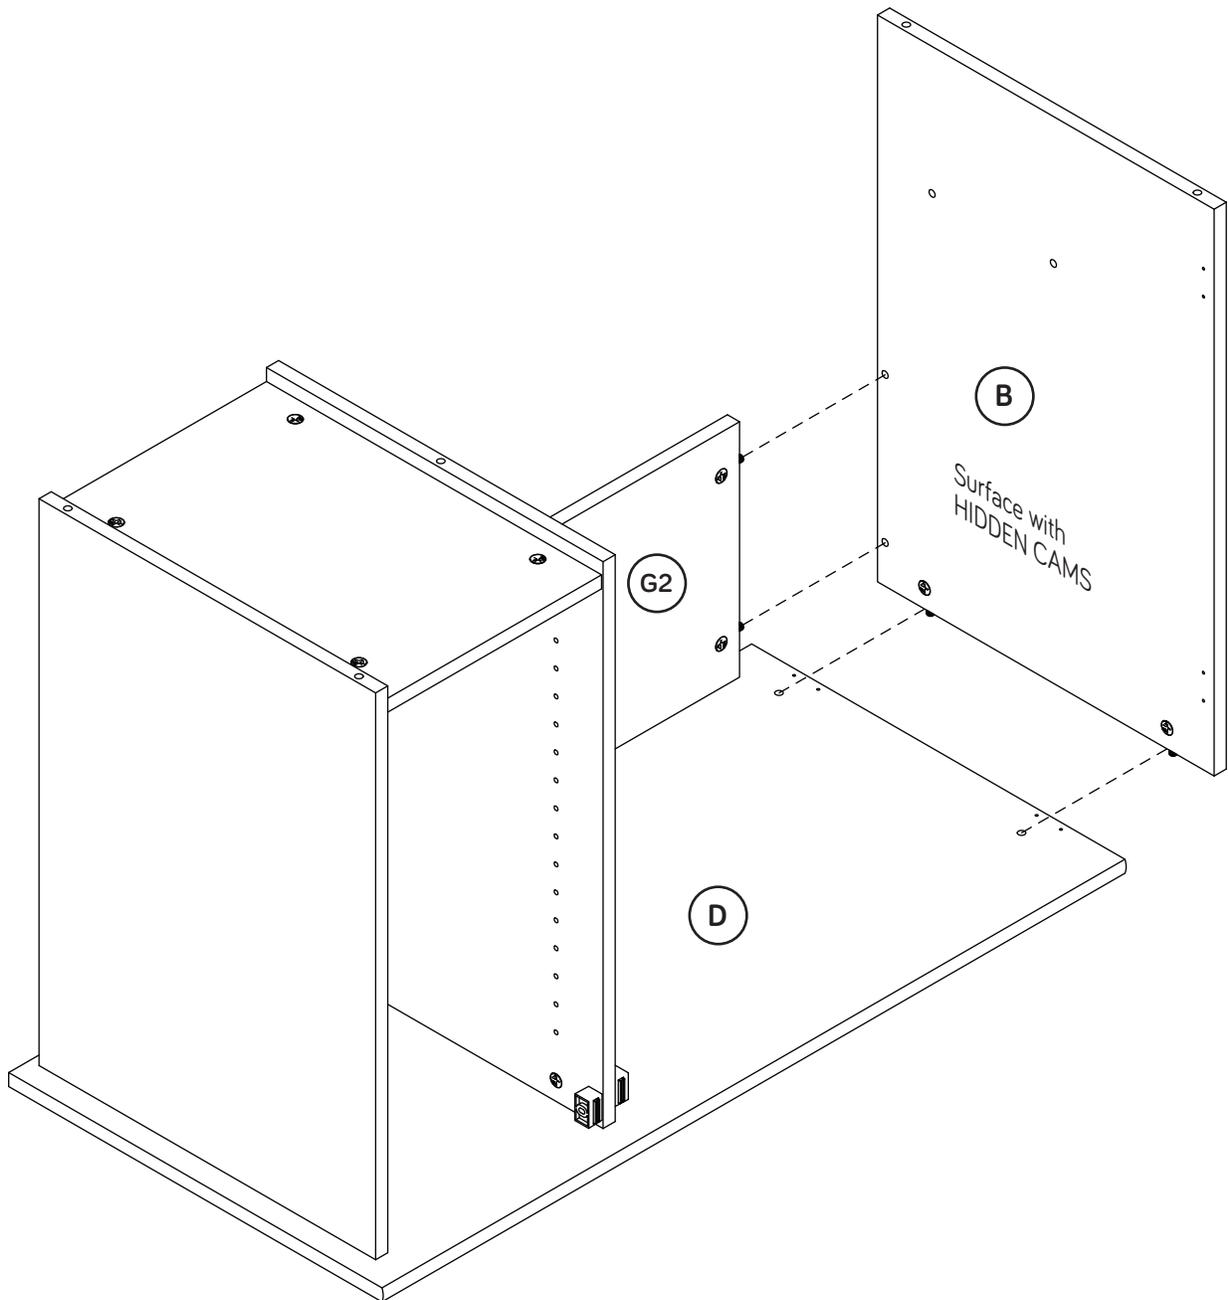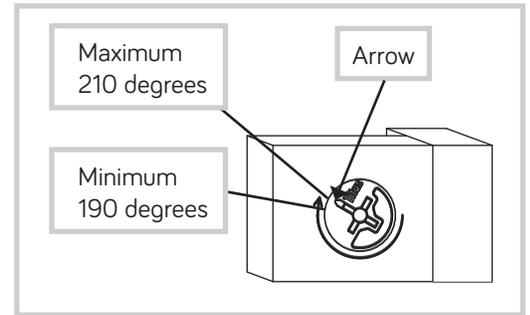

# Step 5

- Fasten the SHELF (H2) to the LEFT END (B). Tighten two HIDDEN CAMS.
- Fasten the SHELF (H2) to the UPRIGHT (C2). Use two BLACK 1-15/16" FLAT HEAD SCREWS (113S).

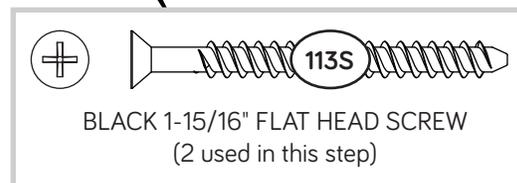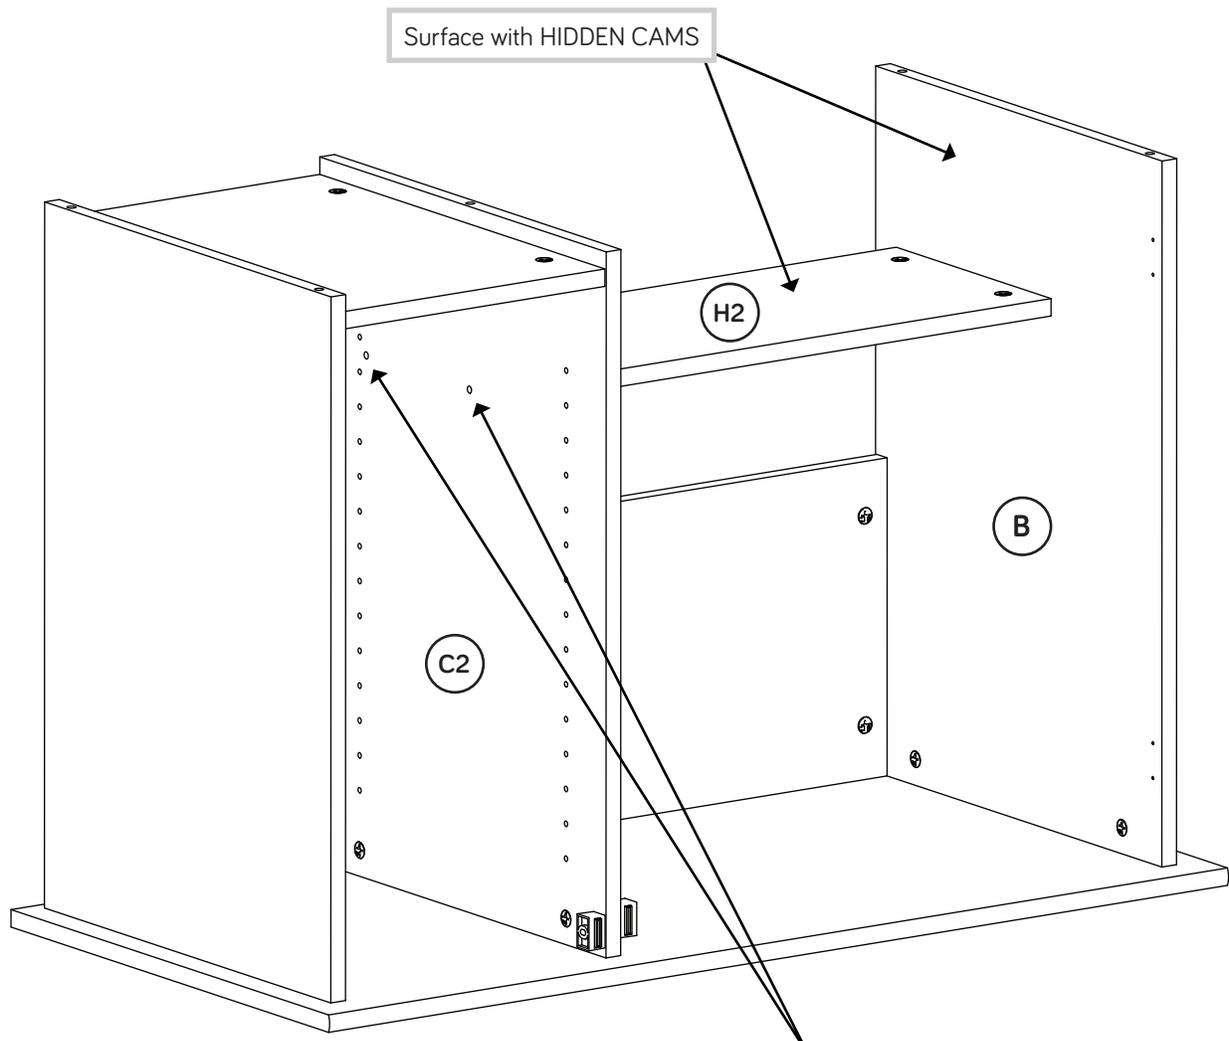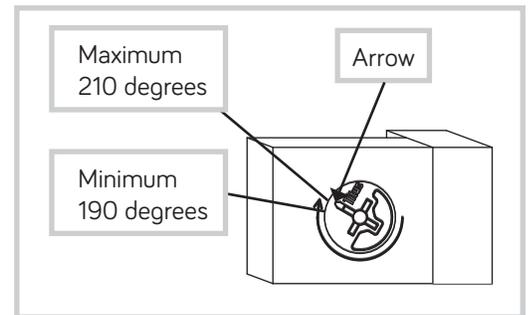


# Step 6

- ✚ Carefully turn your unit over onto its front edges. Lay the BACK (L) over your unit.
- ✚ Make equal margins along all four edges of the BACK (L). Push on opposite corners of your unit if needed to make it "square".
- ✚ Fasten the BACK (L) to your unit using the NAILS (1N).



**Caution**

Do not stand the unit upright without the BACK fastened. The unit may collapse.

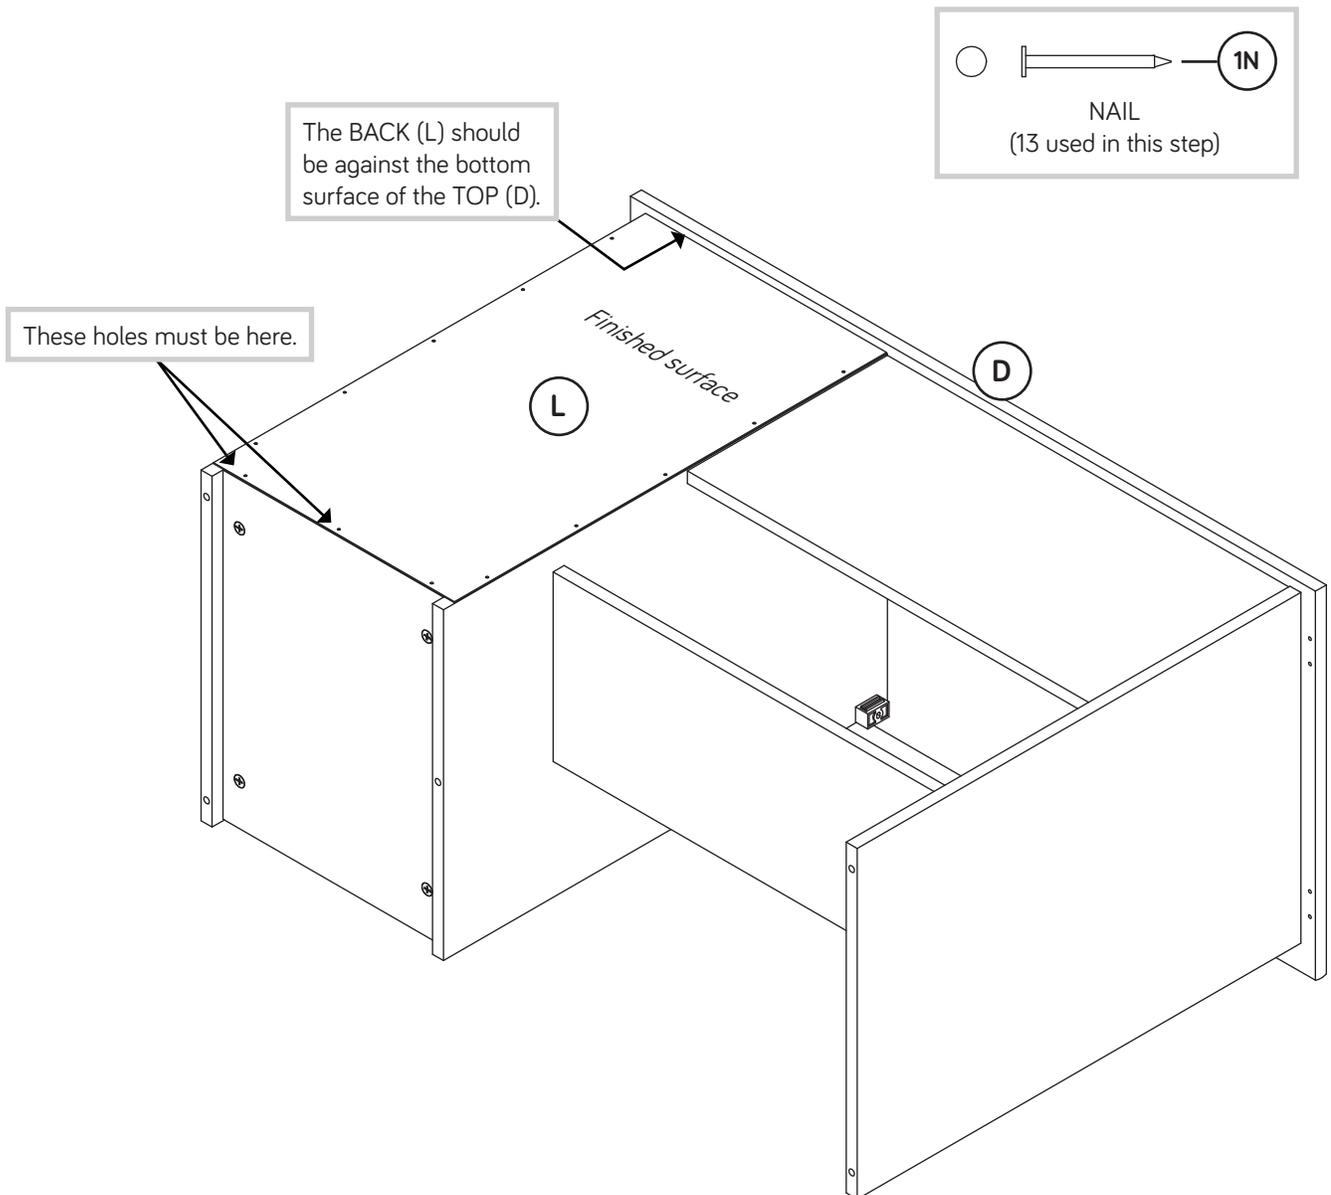

# Step 7

Fasten two HINGES (16H) to the TOP (D) and FLIP-UP TOP (E). Use eight BLACK 9/16" LARGE HEAD SCREWS (1S).




Remember:  
Righty tighty.  
Lefty loosey.




1S

BLACK 9/16" LARGE HEAD SCREW  
(8 used in this step)

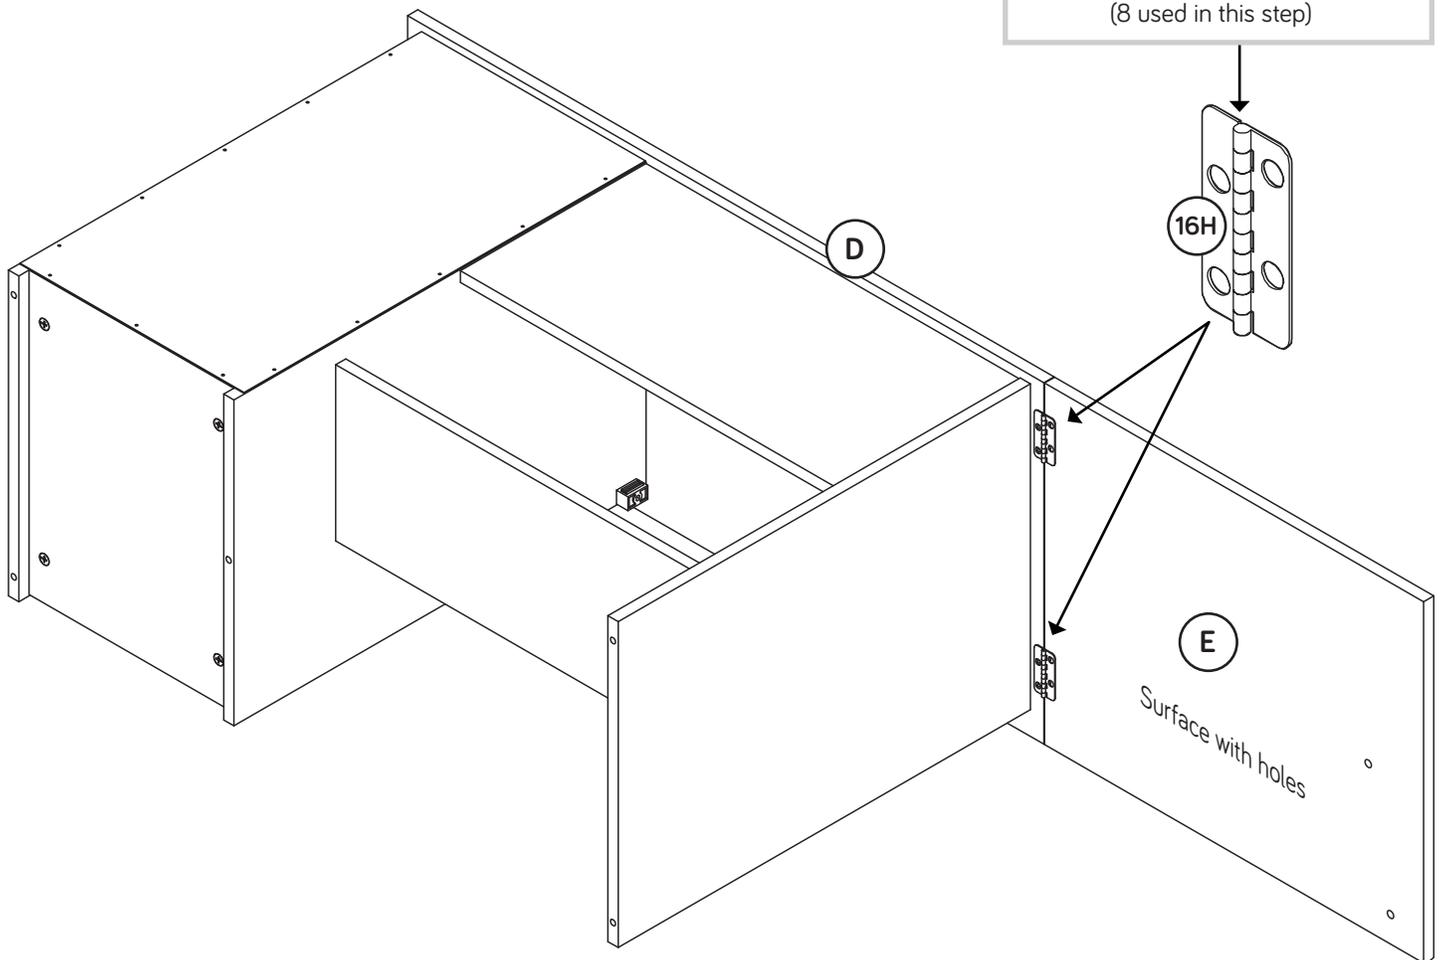


# Step 8

- Place five CASTER BRACKETS (17E) over the holes in the bottom edges of ENDS (A and B) and UPRIGHT (C2).
- Firmly push two LOCKING CASTERS (2CL) into the holes as shown in the CASTER BRACKETS (17E) and ENDS (A and B).
- Firmly push three CASTERS (2CN) into the remaining holes in the ENDS (A and B) and UPRIGHT (C2).

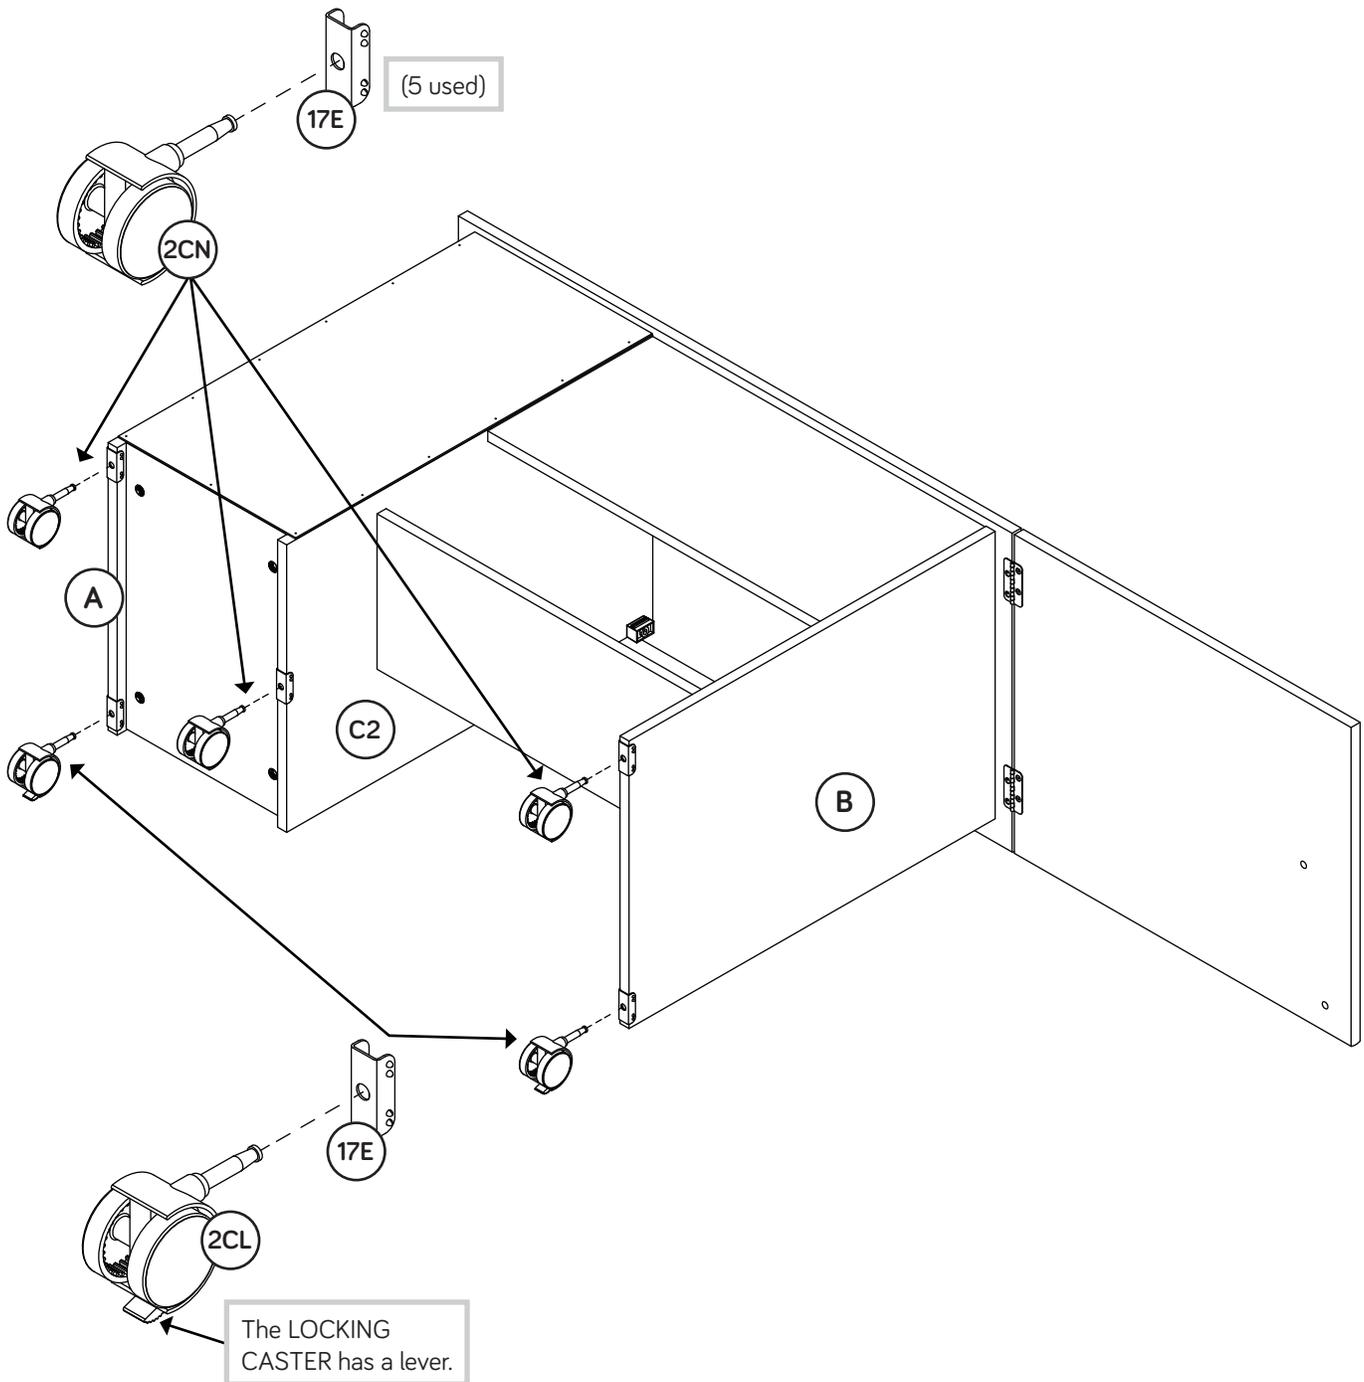

# Step 9

- Fasten a STRIKE PLATE (6I) to the RIGHT DOOR (K). Use a BLACK 1/2" FLAT HEAD SCREW (11S).
- Fasten two NON ADJUSTABLE HINGES (2H) to the RIGHT DOOR (K). Use four BLACK 9/16" LARGE HEAD SCREWS (1S).

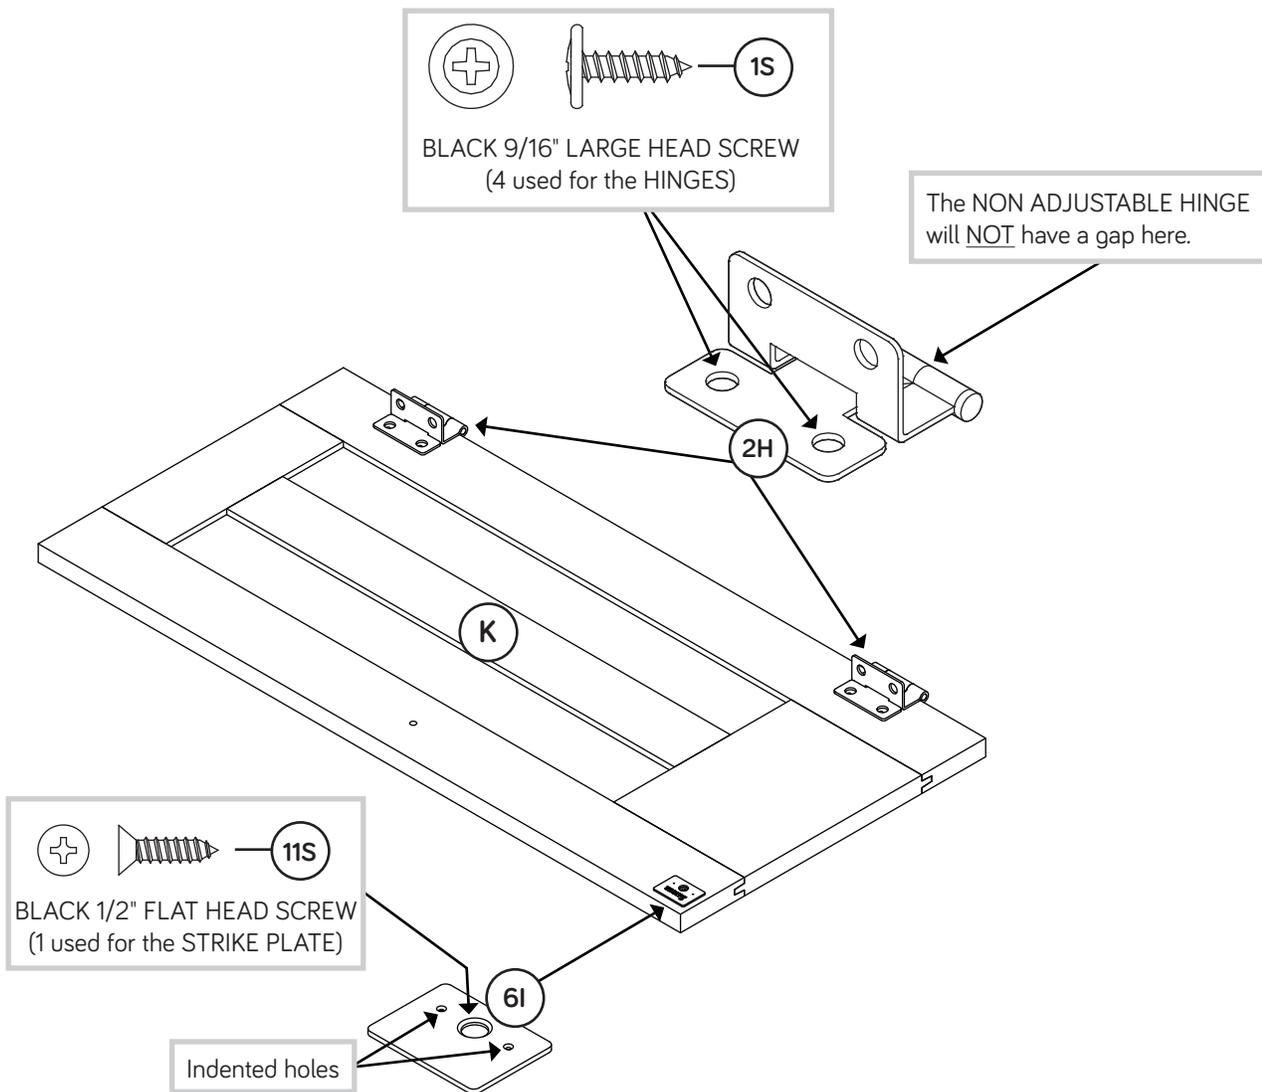


# Step 10



- ⚡ Carefully stand your unit upright.
- ⚡ Fasten the RIGHT DOOR (K) to the RIGHT END (A). Use four BLACK 9/16" LARGE HEAD SCREWS (1S).
- ⚡ Fasten a KNOB and BACKPLATE (72K) to the RIGHT DOOR (K). Use a GOLD 1" MACHINE SCREW (50S).



 Pro Tip: Lift with your legs. And, you know, your arms.



 
BLACK 9/16" LARGE HEAD SCREW  
(4 used for the HINGES)

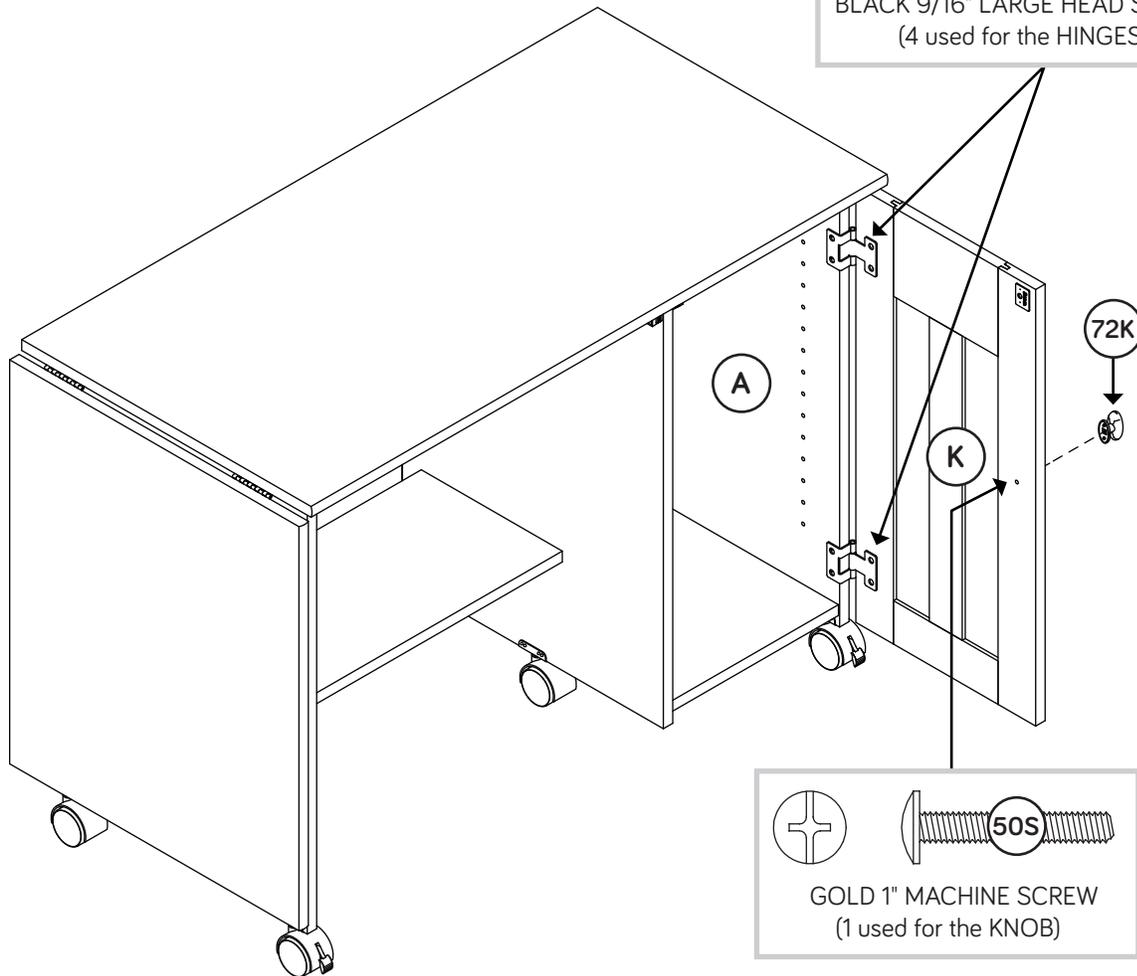

GOLD 1" MACHINE SCREW  
(1 used for the KNOB)


# Step 11

- Fasten the remaining HINGES (16H) to the DOORS (J and MM). Use twelve BLACK 9/16" LARGE HEAD SCREWS (1S).
- Fasten the ADJUSTABLE HINGES (3H) to the LEFT DOOR (MM). Use four BLACK 9/16" LARGE HEAD SCREWS (1S).
- Fasten the STRIKE PLATE (6I) to the CENTER DOOR (J). Use a BLACK 1/2" FLAT HEAD SCREW (11S).
- Fasten the SLIDE CATCH (6J) to the CENTER DOOR (J). Use two BROWN 1" FLAT HEAD SCREWS (18S).
- Place a CASTER BRACKET (17E) over the hole in the bottom edge of the CENTER DOOR (J).
- Firmly push the remaining CASTER (2CN) into the hole in the CASTER BRACKET (17E) and CENTER DOOR (J).

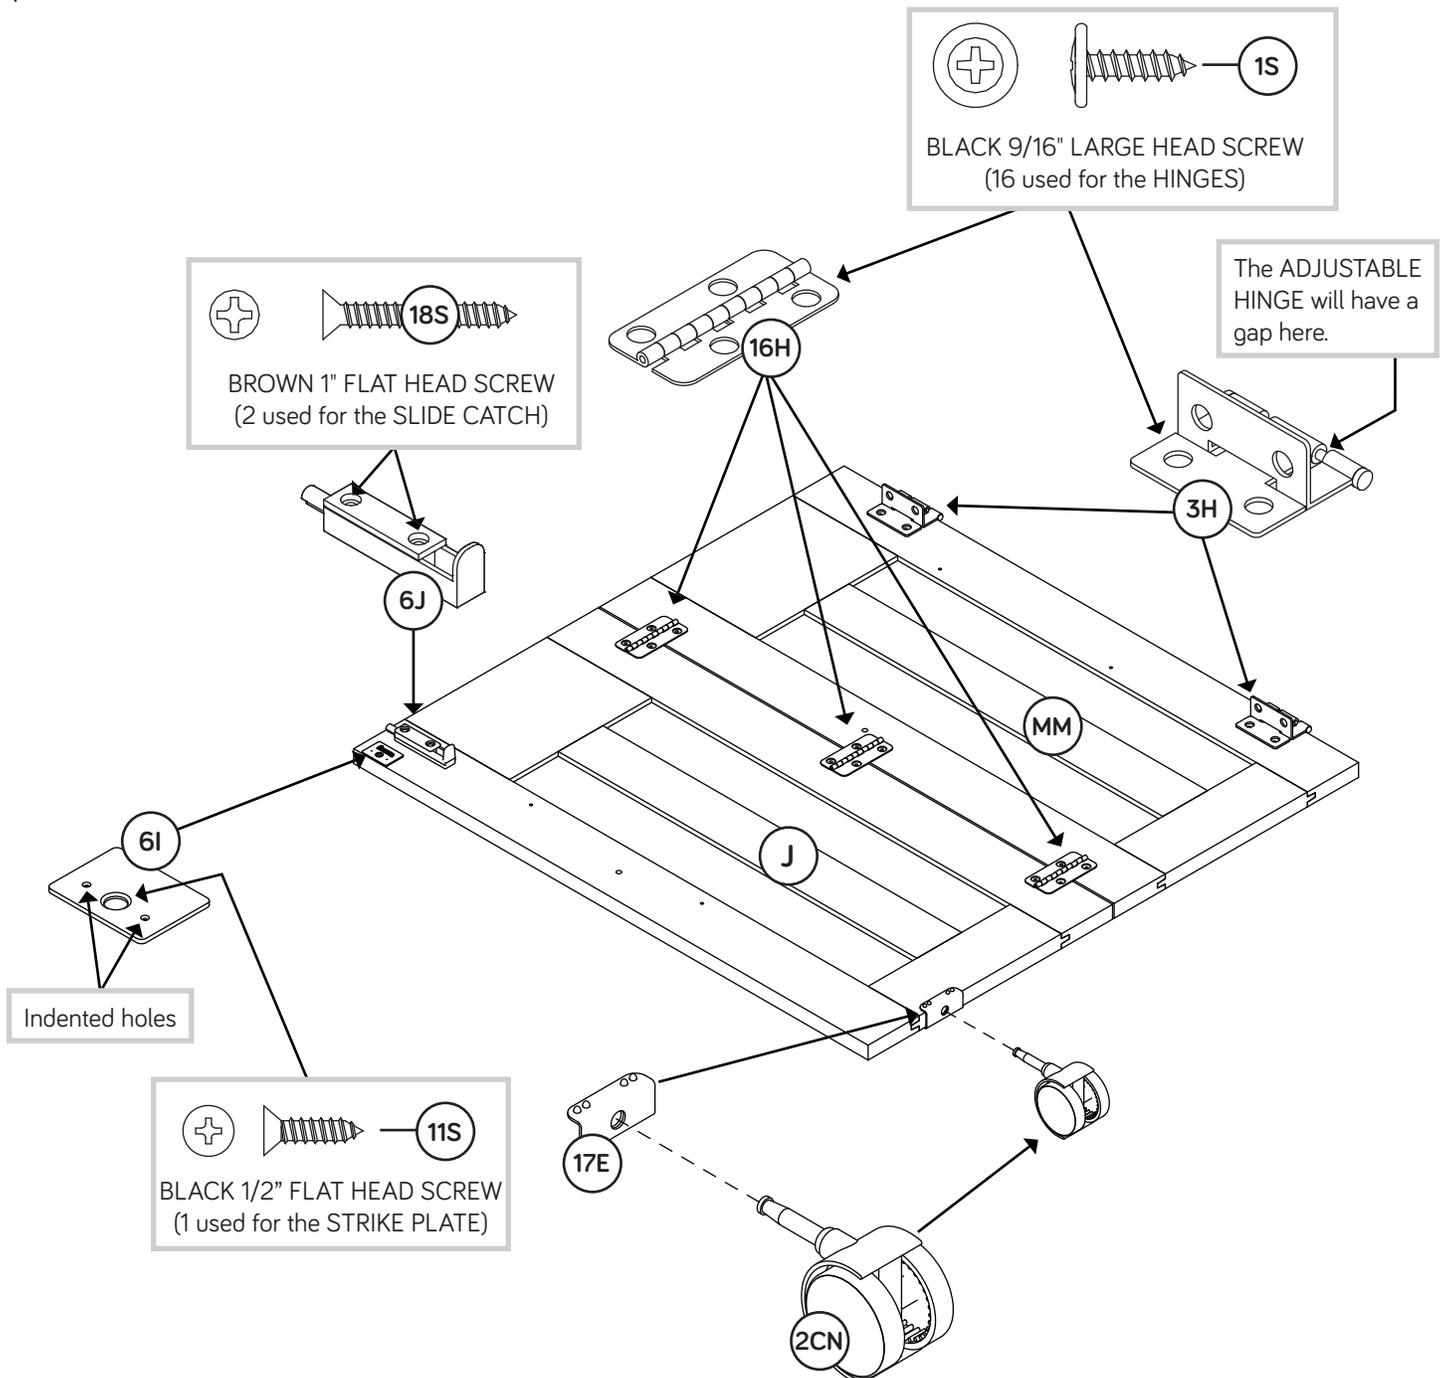


# Step 12

- Fasten the LEFT DOOR (MM) to the LEFT END (B). Use four BLACK 9/16" LARGE HEAD SCREWS (1S).
- Fasten a KNOB and BACKPLATE (72K) to each DOOR (J and MM). Use two GOLD 1" MACHINE SCREWS (50S).

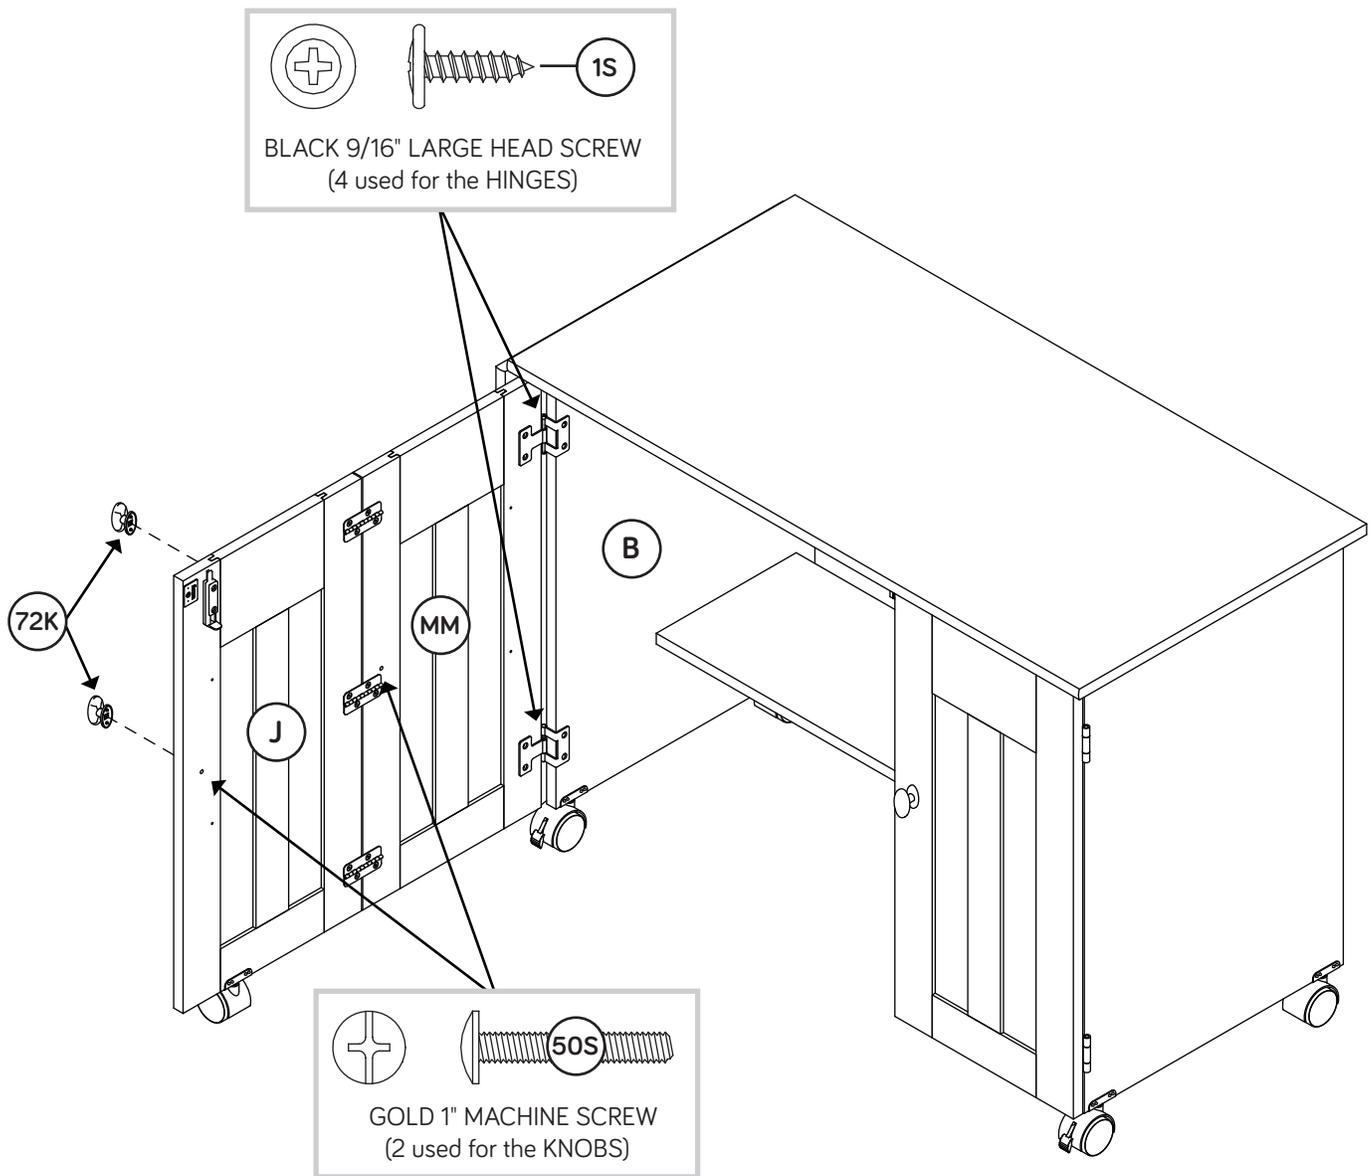


# Step 13

- NOTE: The FLIP-UP TOP (E) can be supported by the DOORS (J and MM). There are two holes in the bottom surface of the FLIP-UP TOP (E) for the bolt in the SLIDE CATCH (6J) to lock into.
- Fasten the TRAYS (2D) to the DOORS (J and MM). Use four BLACK 9/16" LARGE HEAD SCREWS (1S).
- Now, slide eight TRAY DIVIDERS (3D) into the TRAYS (2D) as shown.

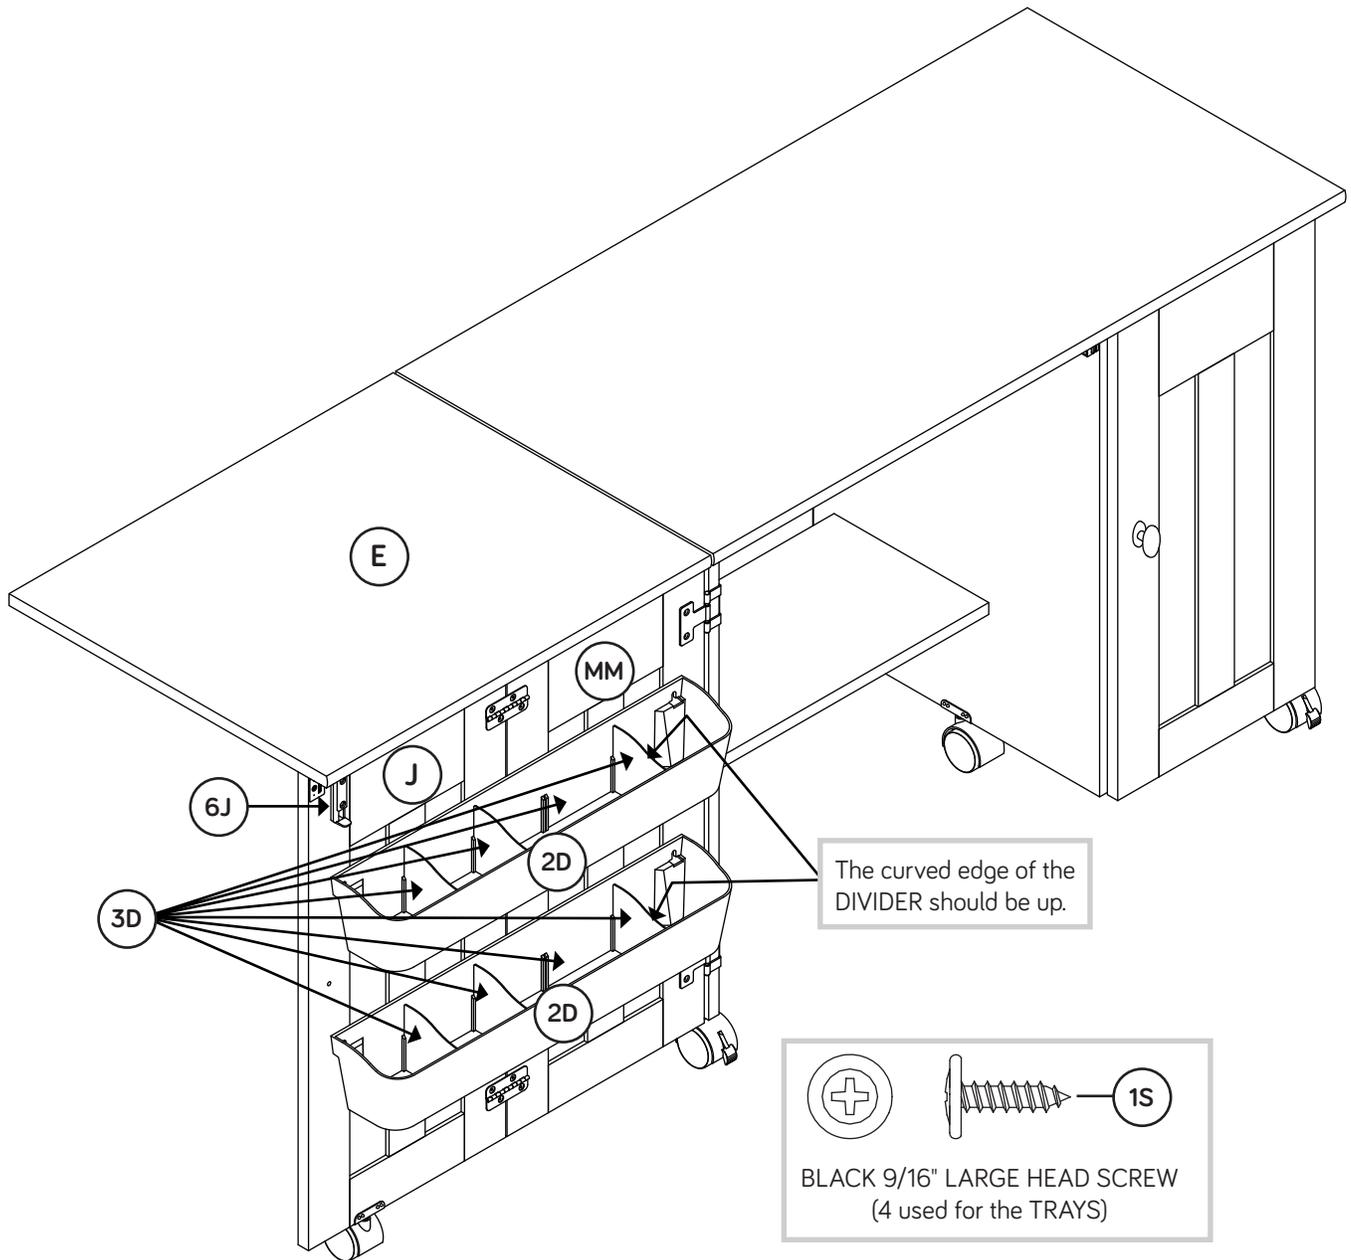

# Step 14

- ✚ Push the RUBBER SLEEVES (2R) over the METAL PINS (1R). Insert the METAL PINS into the hole locations of your choice in the RIGHT END (A) and UPRIGHT (C2). Set the ADJUSTABLE SHELVES (I) onto the METAL PINS.
- ✚ Push a CAM COVER (19P) onto each HIDDEN CAM.
- ✚ **NOTE:** Please read the back pages of the instruction booklet for important safety information.
- ✚ This completes assembly. Clean with a damp cloth. Wipe dry.

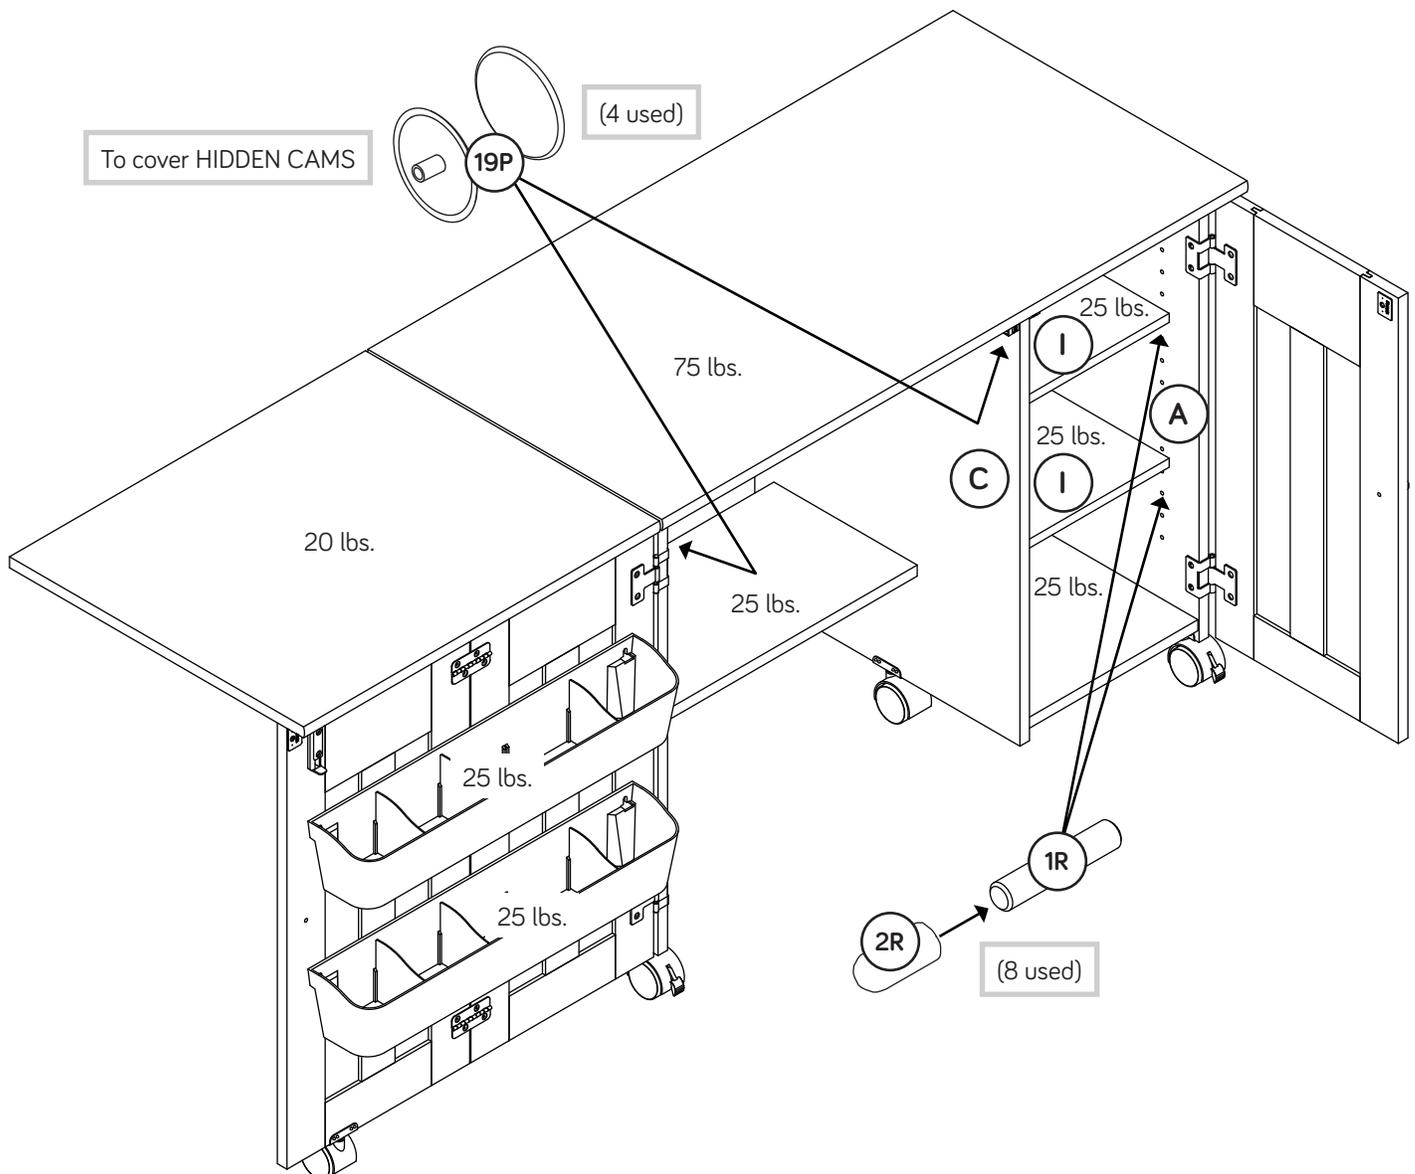

**⚠ WARNING**

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. ***Carefully read the following chart.***

Look out for:	What can happen:	How to avoid the problem:
<ul style="list-style-type: none"><li>Overloaded drawers and shelves.</li></ul>	<ul style="list-style-type: none"><li>Risk of injury.</li><li>Top-heavy furniture can tip over.</li><li>Overloaded drawers or shelves can break.</li></ul>	<ul style="list-style-type: none"><li>Never exceed the weight limits shown in the instructions.</li><li>Work from bottom to top when loading shelves and drawers. Place the heavier items on the lower shelves or in lower drawers.</li></ul>
<ul style="list-style-type: none"><li>Improperly moving the cart.</li></ul>	<ul style="list-style-type: none"><li>Risk of injury or equipment damage.</li><li>The cart can tip if not moved carefully over obstacles or across a changing floor surface (for example, from a wood floor to a carpeted floor).</li></ul>	<ul style="list-style-type: none"><li>Lift the cart so the casters clear any obstacles or abrupt changes in the floor surface.</li></ul>
<ul style="list-style-type: none"><li>Placing TVs on furniture items that are not designed to support a television is hazardous.</li></ul>	<ul style="list-style-type: none"><li>Risk of injury or death. TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward.</li></ul>	<ul style="list-style-type: none"><li>This product is not designed to support a television.</li></ul>

