
www.teknikoffice.co.uk

#### **Teknik**

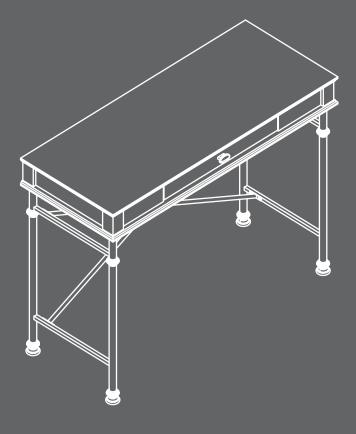

Sit and surf.

# Canal Heights Console Desk

5419231

**NOTE:** THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

#### Table of Contents

#### Assembly Tools Required

Part Identification  Hardware Identification	3	<b>&gt;</b>	No. 2 Phillips Screwdriver Tip Shown Actual Size
Assembly Steps	5-23		Hammer Not actual size 🙂
			Skip the power trip. This time.

#### Part Identification




While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

Α	END (2)
В	RIGHT UPRIGHT (1)
С	LEFT UPRIGHT (1)
D	TOP (1)
Е	BOTTOM (1)
F	BACK PANEL (1)
G	FRONT RIGHT PANEL (1)

Н	FRONT LEFT PANEL (1)
ı	FRONT CORNER (2)
J	RIGHT REAR CORNER (1)
K	LEFT REAR CORNER (1)
L	RIGHT LEG ASSEMBLY
М	LEFT LEG ASSEMBLY
Ν	BRACE (2)


Ο	CROSS BRACE (2)
Р	DRAWER RIGHT SIDE (1)
Q	DRAWER LEFT SIDE (1)
R	DRAWER FRONT (1)
S	DRAWER BACK (1)
Т	DRAWER BOTTOM (1)

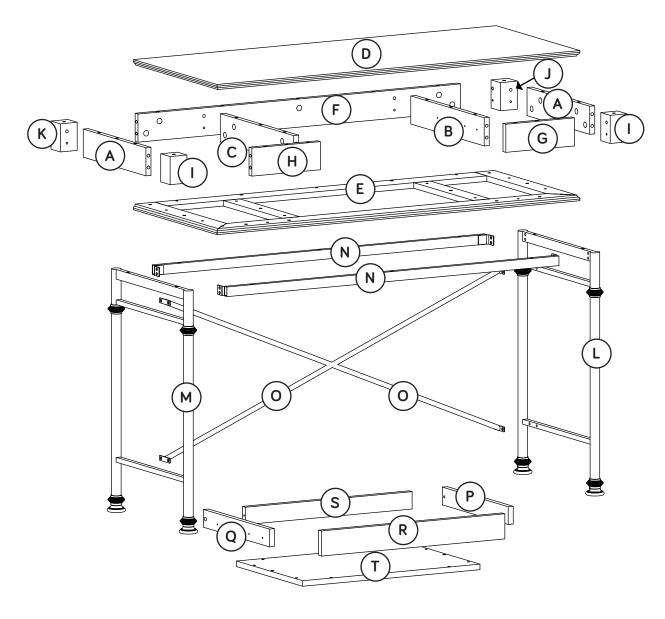

#### Hardware Identification

F Screws are shown actual size. You may receive extra hardware with your unit.



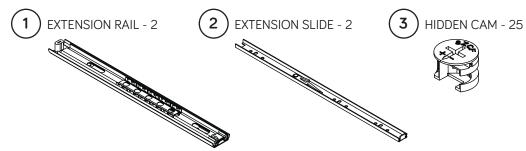
















 $ig(oldsymbol{9}ig)$  1-1/2" FLAT HEAD SCREW - 21

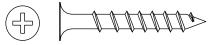





(11) 3/4" MACHINE SCREW - 2



12) 1/2" FLAT HEAD SCREW - 4



(13) 1/2" MACHINE SCREW - 16





(14) 9/16" LARGE HEAD SCREW - 2





(15) 1/2" PAN HEAD SCREW - 12








**(16)** ALLEN WRENCH - 1




- Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- Turn thirteen CAM SCREWS (4) into the exact holes shown in the TOP (D).

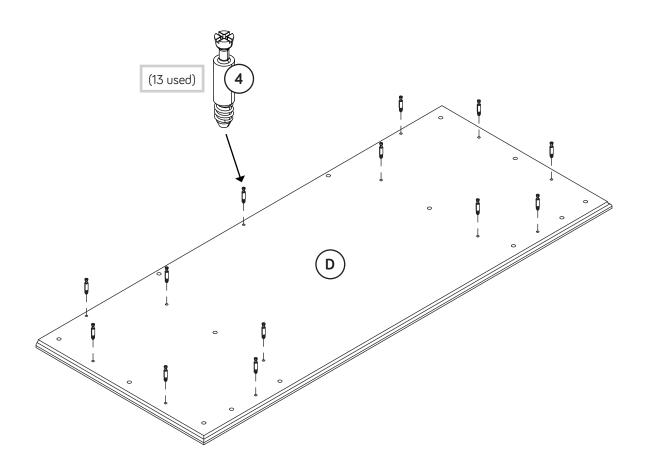


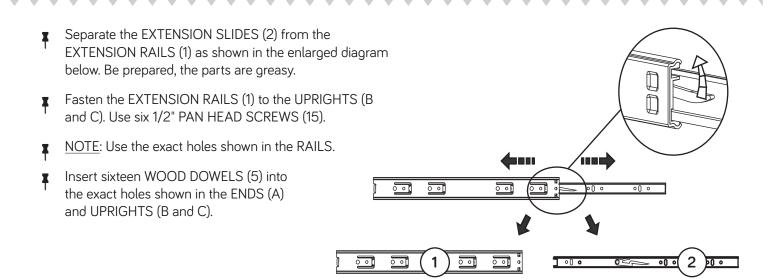

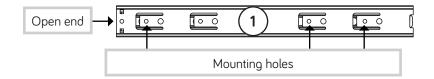


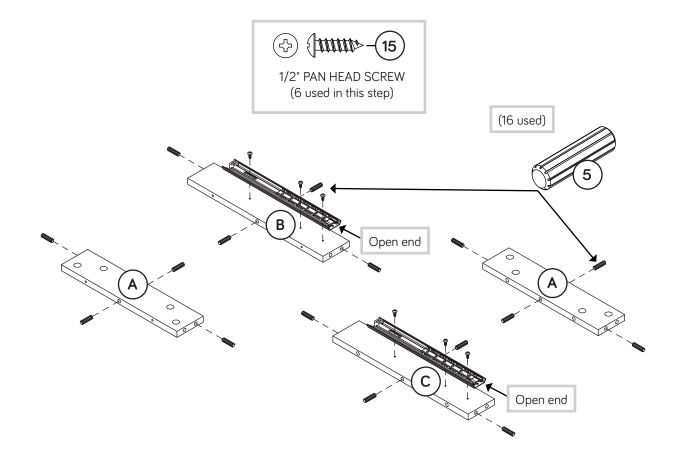


- Turn six CAM SCREWS (4) into the exact holes shown in the REAR CORNERS (J and K) and BACK PANEL (F).
- Insert ten WOOD DOWELS (5) into the exact holes shown in the REAR CORNERS (J and K) and BACK PANEL (F).

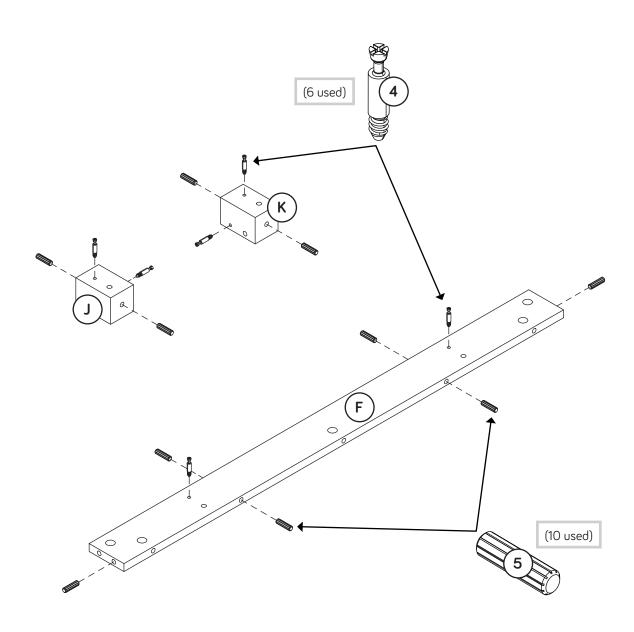


- Insert two HIDDEN CAMS (3) into the BACK PANEL (F).
- Fasten the BACK PANEL (F) to the CORNERS (J and K). Tighten two HIDDEN CAMS.
- NOTE: Be sure the WOOD DOWELS in the edges of the BACK PANEL insert into the CORNERS.

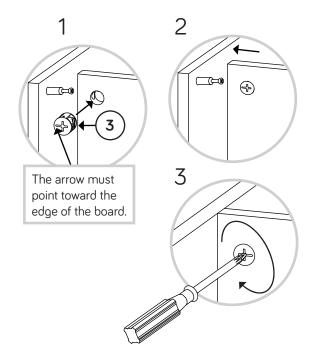


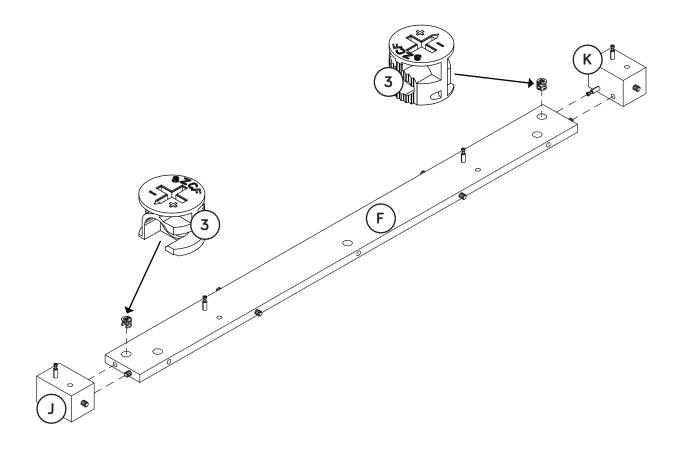



- Turn six CAM SCREWS (4) into the exact holes shown in the FRONT PANELS (G and H) and FRONT CORNERS (I).
- Insert fourteen WOOD DOWELS (5) into the exact holes shown in the FRONT PANELS (G and H) and FRONT CORNERS (I).

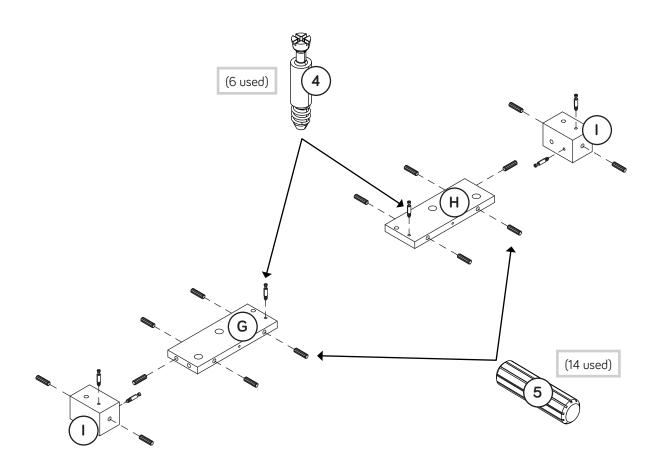



- Insert two HIDDEN CAMS (3) into the FRONT PANELS (G and H).
- Fasten the FRONT PANELS (G and H) to the FRONT CORNERS (I). Tighten two HIDDEN CAMS.
- NOTE: Be sure the WOOD DOWELS in the edges of the FRONT PANELS insert into the FRONT CORNERS.

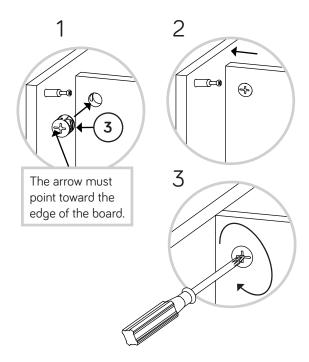

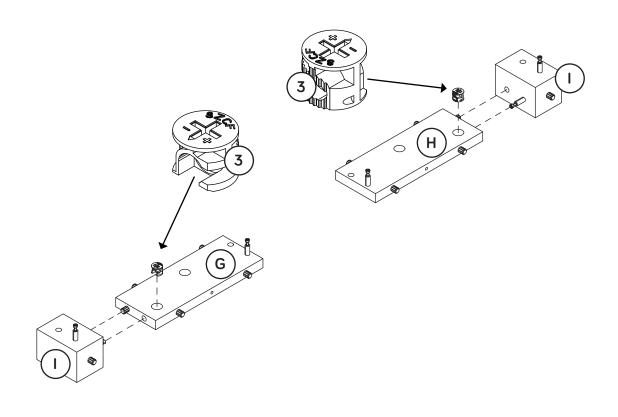

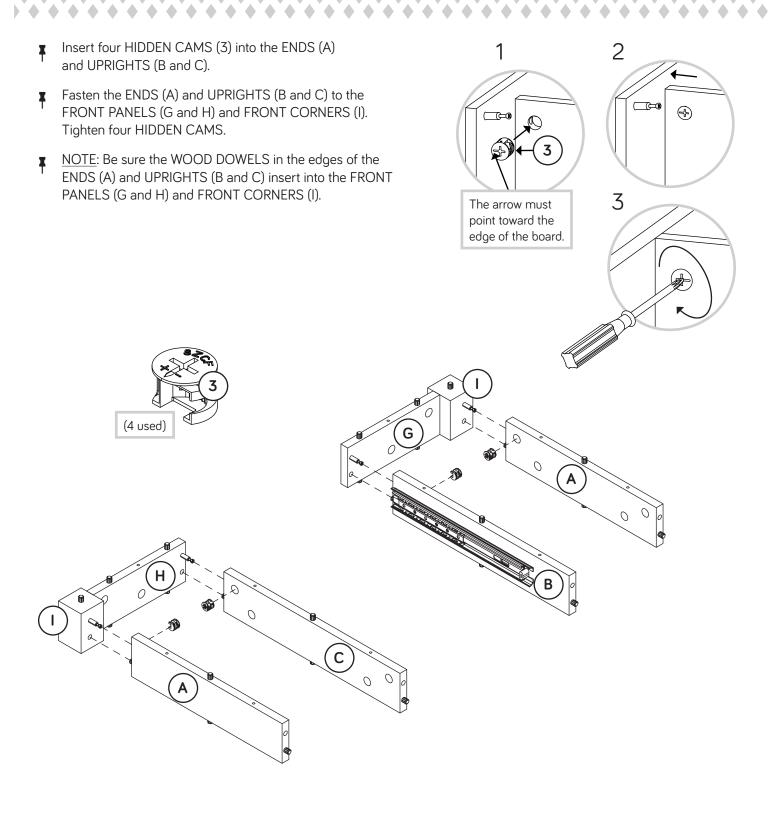


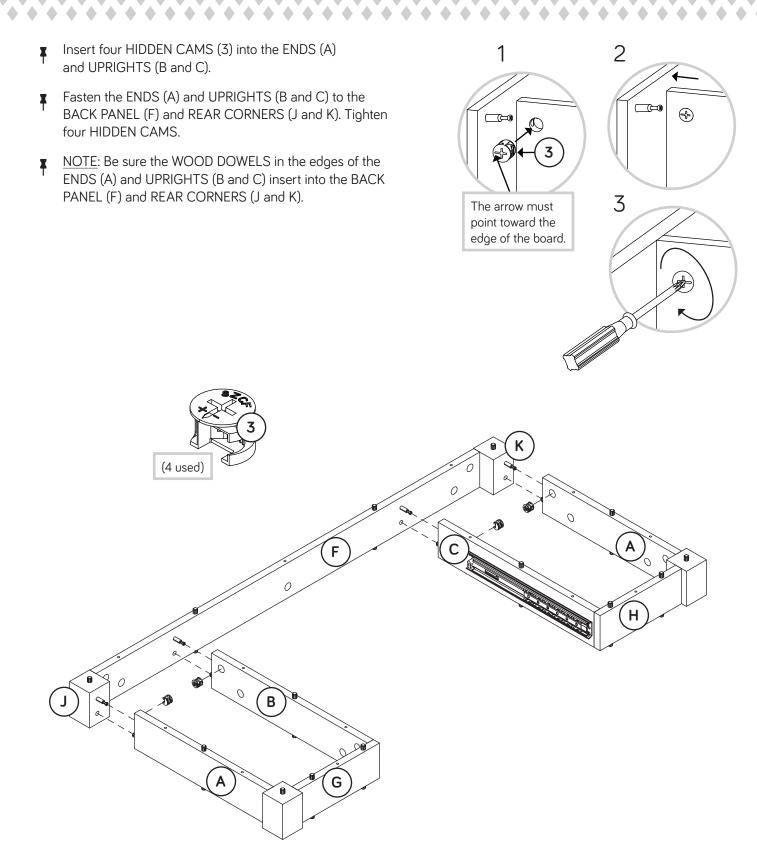

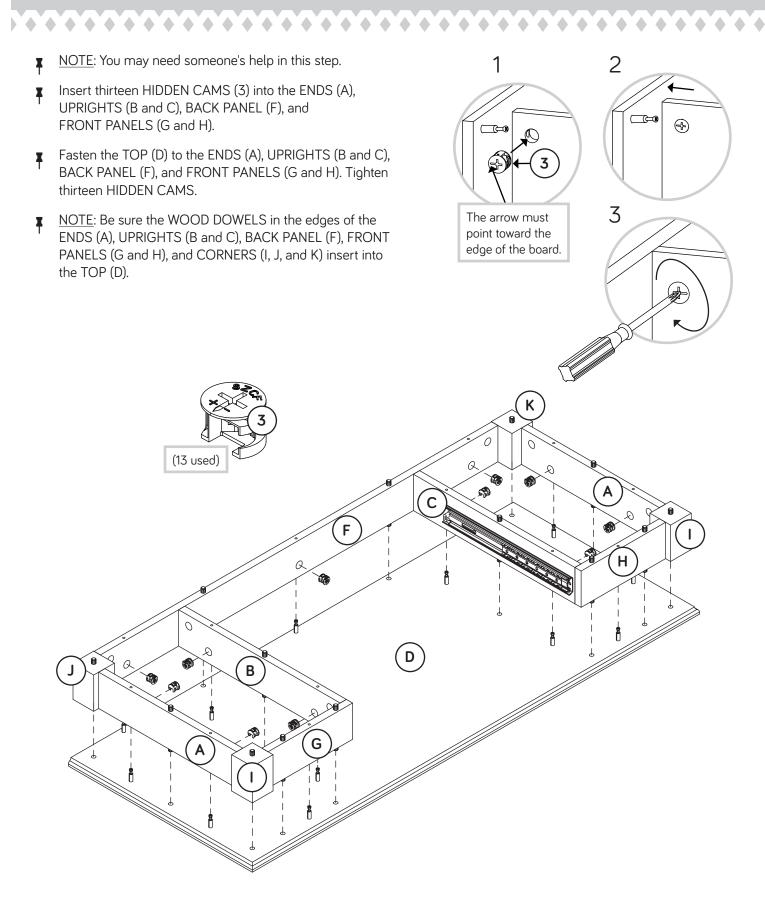


Fasten the BOTTOM (E) to the ENDS (A), UPRIGHTS (B and C), BACK PANEL (F), and FRONT PANELS (G and H). Use thirteen 1-1/2" FLAT HEAD SCREWS (9).


NOTE: Be sure the WOOD DOWELS in the edges of the ENDS (A), UPRIGHTS (B and C), BACK PANEL (F), FRONT PANELS (G and H), and CORNERS (I, J, and K) insert into the BOTTOM (E).

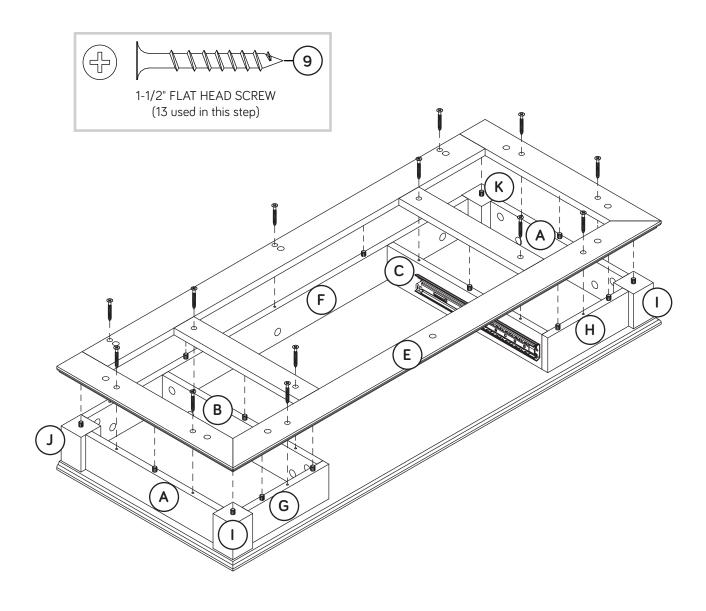


Fasten the LEG ASSEMBLIES (L and M) to the BRACES (N). Use eight 1/2" MACHINE SCREWS (13).

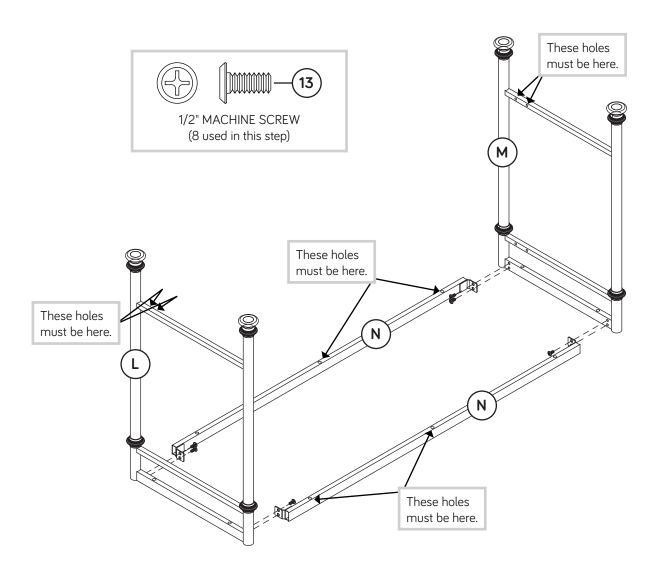


Fasten the LEG ASSEMBLIES (L and M) and BRACES (N) to the BOTTOM (E). Tighten ten 1-3/8" ALLEN BOLTS (10) using the ALLEN WRENCH (16).

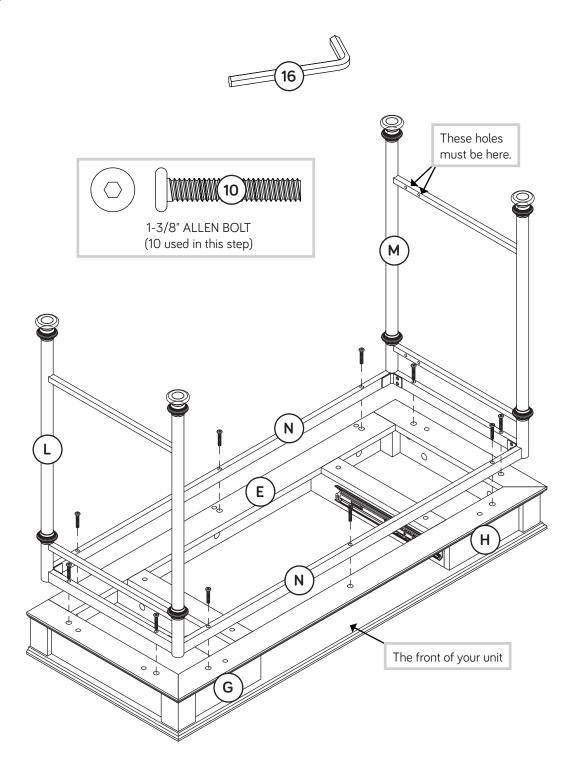


Fasten the CROSS BRACES (O) to the LEG ASSEMBLIES (L and M). Use eight 1/2" MACHINE SCREWS (13).

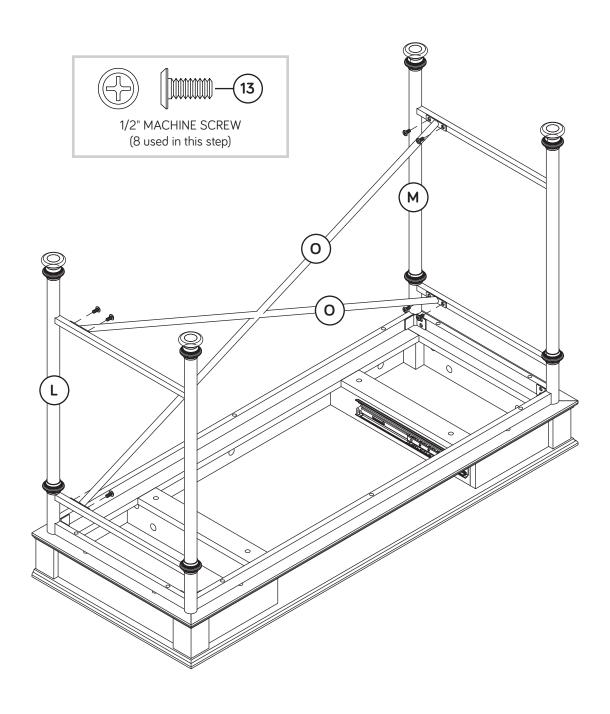



Fasten the DRAWER SIDES (P and Q) to the DRAWER BACK (S). Use two 1-1/2" FLAT HEAD SCREWS (9).

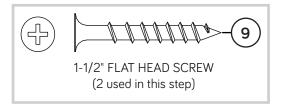

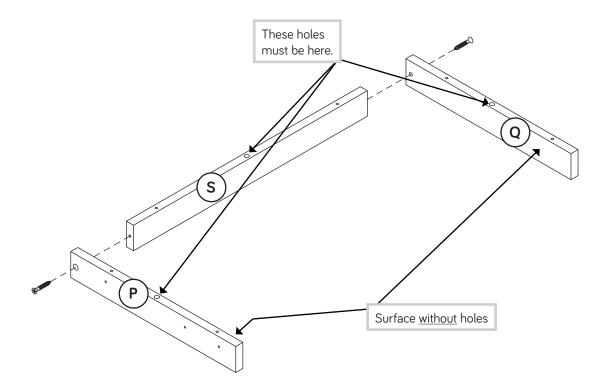


- Insert three WOOD DOWELS (5) into the larger holes in the edges of the DRAWER SIDES (P and Q) and DRAWER BACK (S).
- Fasten the DRAWER BOTTOM (T) to the DRAWER SIDES (P and Q) and DRAWER BACK (S). Use six 1-1/2" FLAT HEAD SCREWS (9).
- NOTE: Be sure the WOOD DOWELS in the DRAWER SIDES and DRAWER BACK insert into the DRAWER BOTTOM.

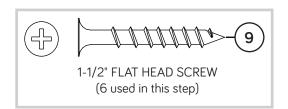

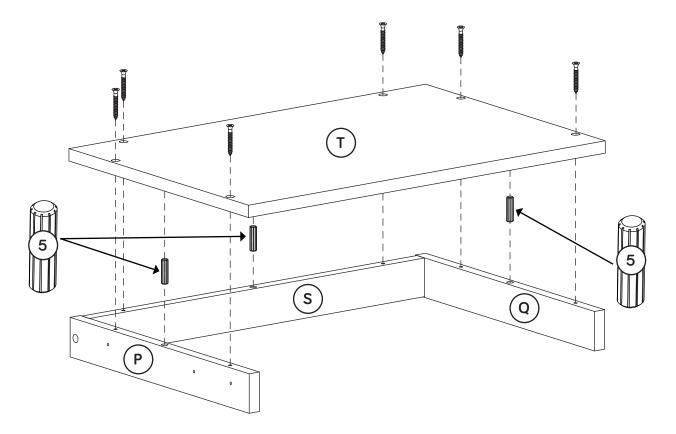


Fasten the HINGES (6) to the DRAWER FRONT (R). Use four 1/2" FLAT HEAD SCREWS (12).

Fasten the KNOB (7) to the DRAWER FRONT (R). Use two 3/4" MACHINE SCREWS (11).

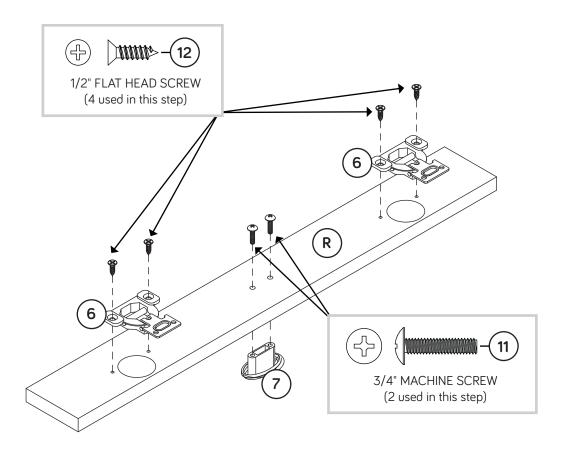



Fasten the DRAWER FRONT (R) to the DRAWER BOTTOM (T). Use two 9/16" LARGE HEAD SCREWS (14).

Peel the paper backing from the BUMPERS (8) and stick the BUMPERS onto the edges of the DRAWER SIDES (P and Q) where they come into contact with the DRAWER FRONT (R).

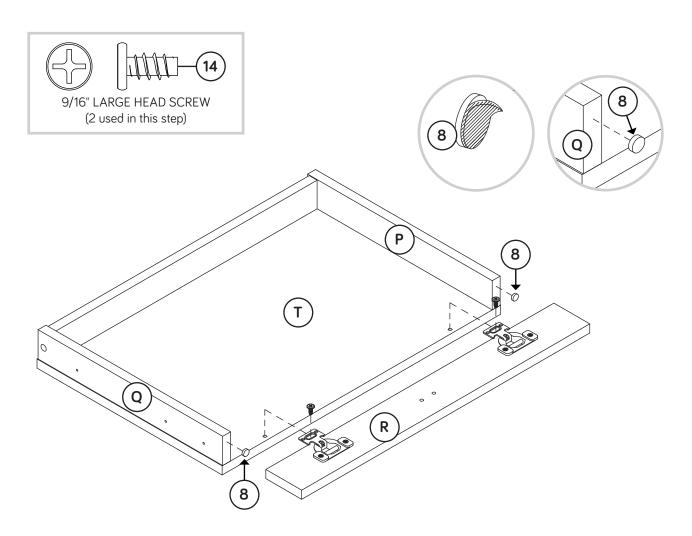


- Fasten the EXTENSION SLIDES (2) to the DRAWER SIDES (P and Q). Use six 1/2" PAN HEAD SCREWS (15).
- NOTE: Use the exact holes shown in the SLIDES.

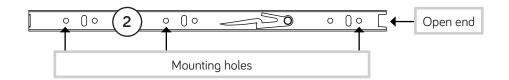

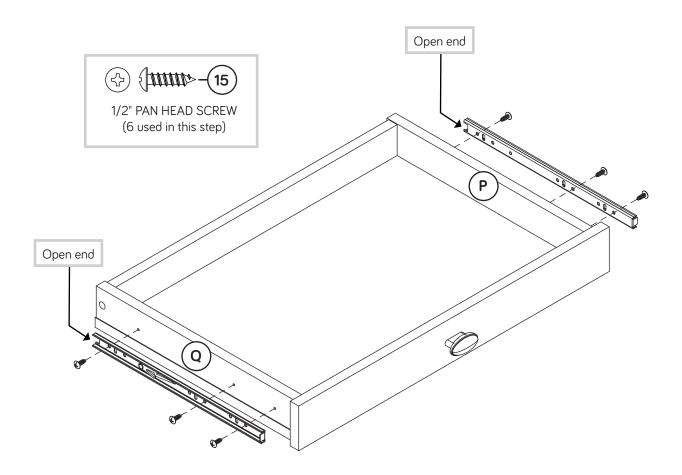

- Carefully stand your unit upright.
- To insert the drawer into your unit, line up the EXTENSION SLIDES on the drawer with the EXTENSION RAILS on the unit and push the drawer into the unit until the drawer is fully inserted. The drawer will push in hard until it is all the way in, then it will slide in and out easier.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with your favorite furniture polish or a damp cloth. Wipe dry.

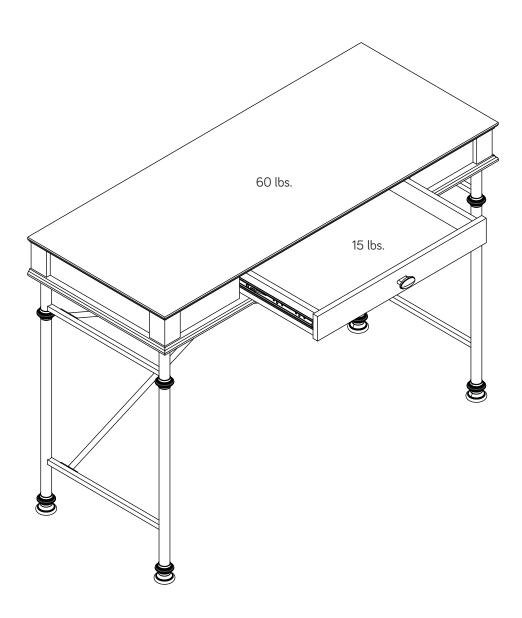

#### **WARNING**Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. *Carefully read the following chart.* Look out for: What can happen: How to avoid the problem: • Overloaded shelves and drawers. • Risk of injury. • Never exceed the weight limits shown in • Improper loading can cause the product • Top-heavy furniture can tip over. the instructions. • Overloaded shelves and drawers can to be top-heavy. • Work from bottom to top when loading shelves and drawers. Place the heavier items on the lower shelves or in lower drawers. • Improperly moving furniture that is not • Furniture can tip over or break if • Unload shelves and drawers from top to designed and equipped with casters. improperly moved. bottom before moving the unit. • Physical injury. Furniture can be very • Do not push furniture, especially on a heavy. carpeted floor. Have a friend help you lift • Breakage of tops - particularly with the item and set it in place. double pedestal furniture (drawers at both • Provide support to the center section of the top when lifting the furniture. • Placing TVs on furniture items that are • Risk of injury or death. TVs can be very • This product is not designed to support a not designed to support a television is heavy. Plus the weight and location of the television. hazardous. picture tube tends to make TVs unbalanced and prone to tipping forward.