


www.teknikoffice.co.uk

Teknik

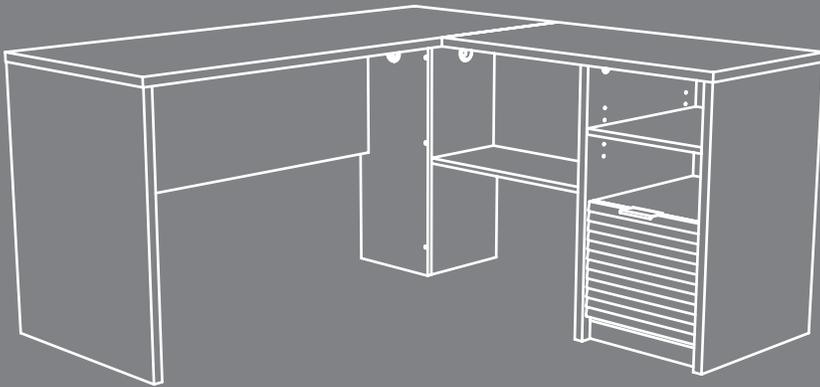


For **all** your
newfangled **gadgetry**.


Hampstead Park L-Shaped Desk

Model 5426509

Part Identification	3
Hardware Identification	4
Assembly Steps	5-28
Français	29-32
Español	33-36
Safety	37-38
Warranty	39

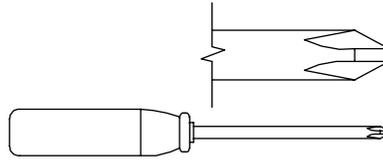


No. 2 Phillips Screwdriver
Tip Shown Actual Size

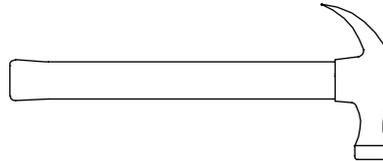

Hammer
Not actual size 😊


Part Identification

Now you know
our ABCs.

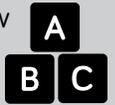

⚠ While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.








A	RIGHT END (1)	D716	DRAWER BOTTOM (1)	L	DUST RAIL (1)
B	LEFT END (1)	E	LONG SHELF (1)	M	BACK (1)
C	LONG MODESTY PANEL (1)	F	LEFT CORNER BACK (1)	N	DRAWER FRONT (1)
D	SHORT MODESTY PANEL (1)	G	RIGHT CORNER BACK (1)	O	LONG TOP (1)
D14	RIGHT DRAWER SIDE (1)	H	ADJUSTABLE SHELF (1)	P	SHORT TOP (1)
D15	LEFT DRAWER SIDE (1)	J	FIXED SHELF (1)	Q	UPRIGHT (1)
D78	DRAWER BACK (1)	K	SKIRT (1)		

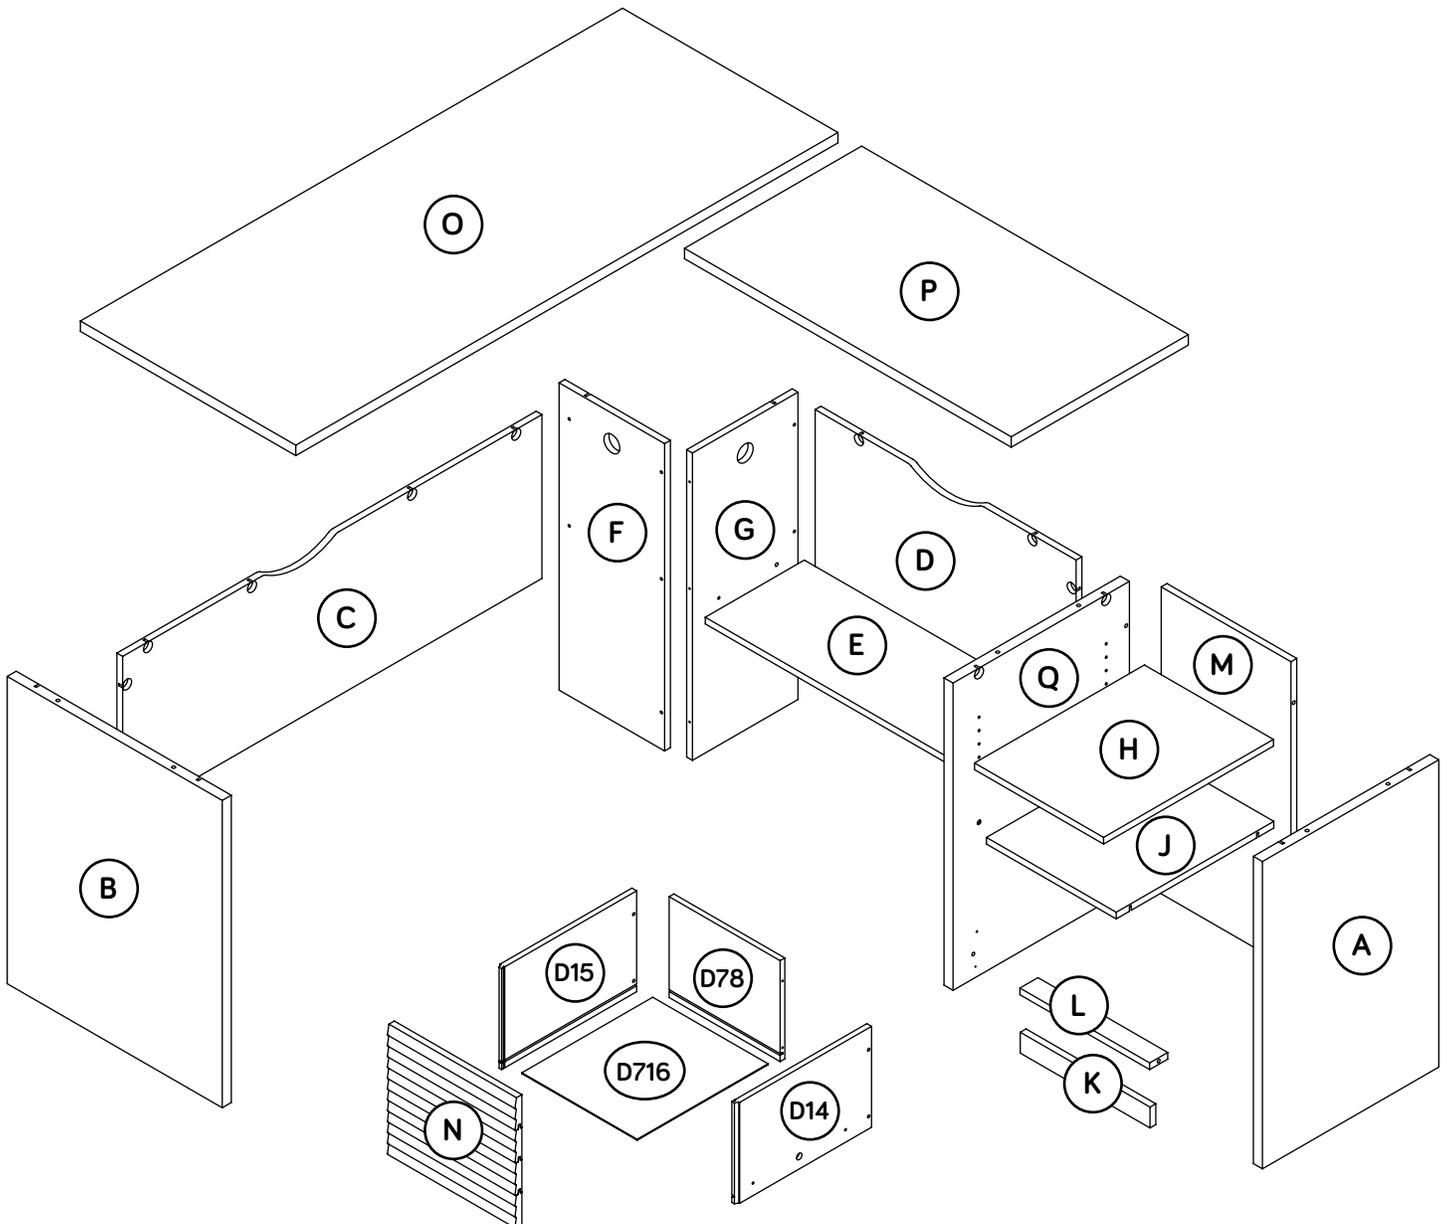

Hardware Identification

↑ Screws are shown actual size. You may receive extra hardware with your unit.


(EXTENSION SET SHOWN SEPARATED)

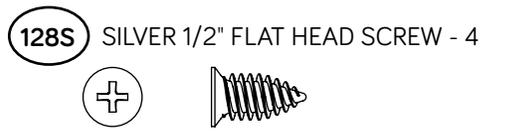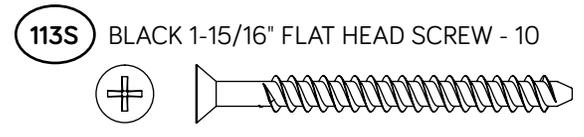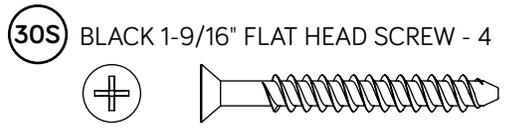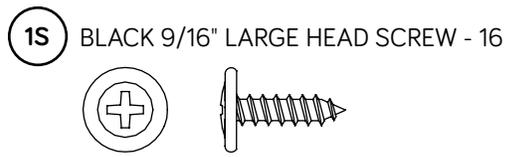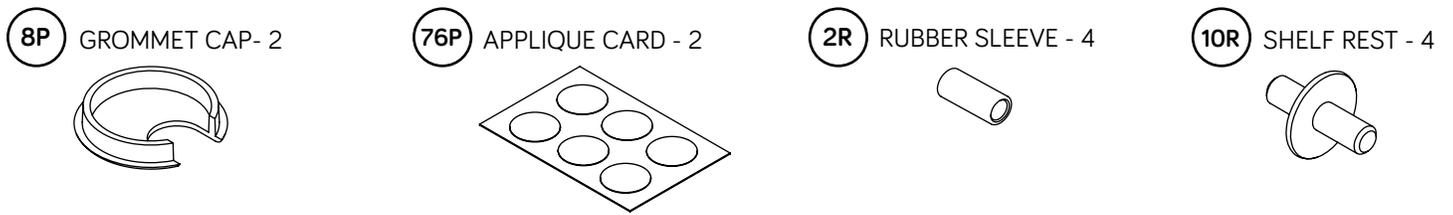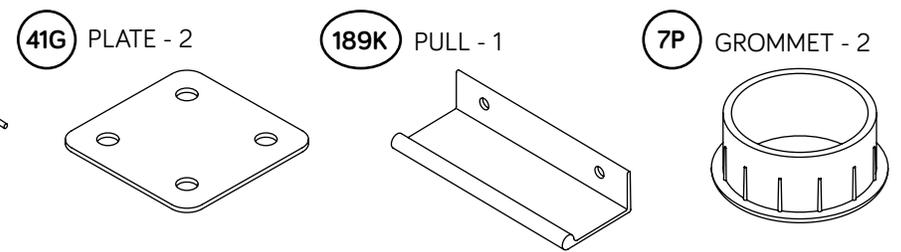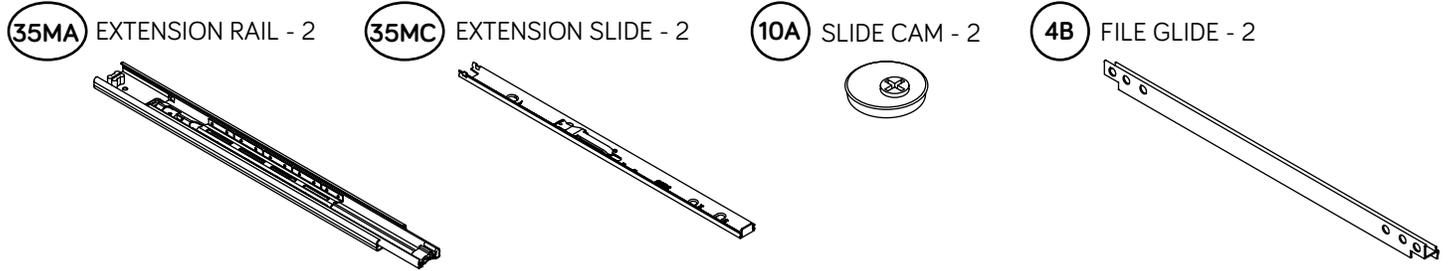

Hardware Usage Guide

HOW TO USE A TWIST-LOCK® FASTENER


1. Push a TWIST-LOCK® FASTENER into the large hole in the part.

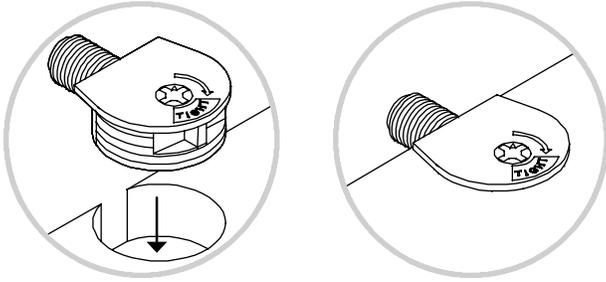

2. 1. Insert the dowel end of the FASTENER into the hole of the adjoining part.

NOTE: The dowel end of the FASTENER must remain fully inserted in the hole of the adjoining part while locking the FASTENER.


2. 2. Tighten the FASTENER with a Phillips screwdriver as tight as possible.

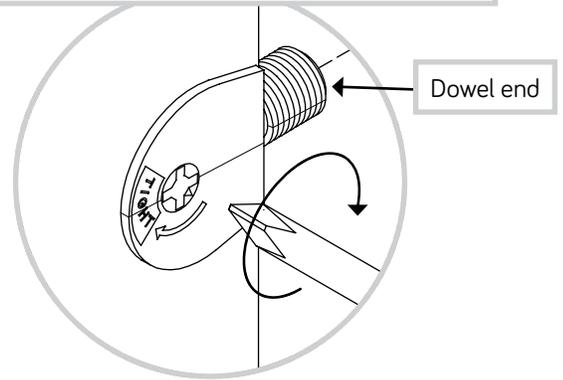

Step 1


- ⚠ Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- ⚠ To begin assembly, push two SAUDER TWIST-LOCK® FASTENERS (10F) into the large holes in the RIGHT END (A).

Meet Part (A). This component has been engineered to be lighter, stronger, faster... well ok. Not technically faster. But definitely makes for a sturdier L-Desk that's easier to assemble and friendlier to the environment.

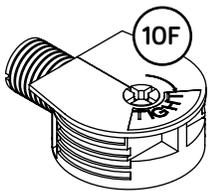


This hole must be here.

Do not tighten the TWIST-LOCK® FASTENERS in this step.

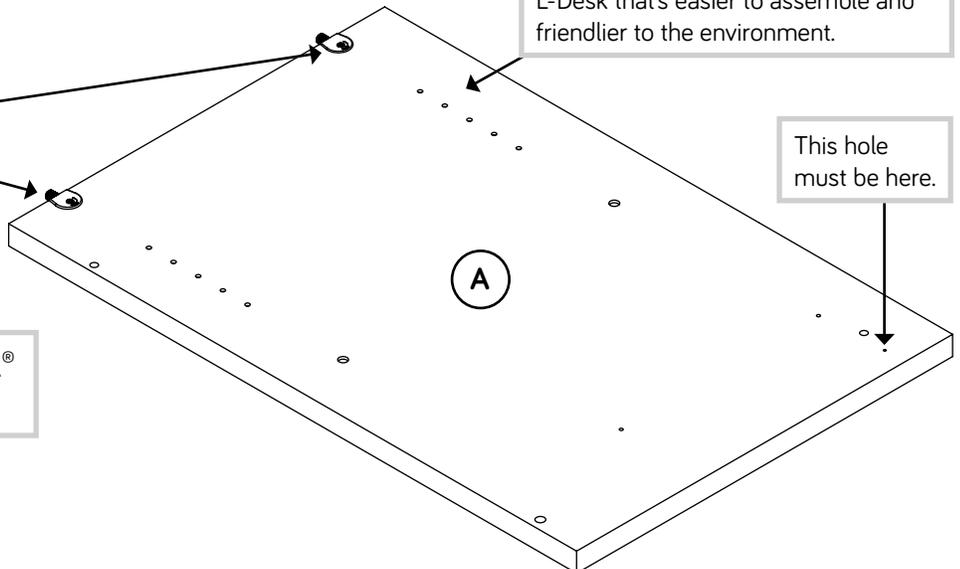

Step 2

- ✚ Separate the EXTENSION SLIDES (35MC) from the EXTENSION RAILS (35MA) as shown in the upper diagram below. Be prepared, the parts are greasy.
- ✚ Fasten one EXTENSION RAIL (35MA) to the RIGHT END (A). Use two SILVER 1/2" FLAT HEAD SCREWS (128S) through holes #1 and #3.
- ✚ NOTE: For the EXTENSION RAIL, turn a SCREW into the hole shown in the enlarged diagram. Then, slide the inner cartridge of the EXTENSION RAIL in to find the other hole that lines up with the hole in the END. Turn a SCREW into this hole.
- ✚ NOTE: The EXTENSION SLIDES (35MC) will be used later for the DRAWER.

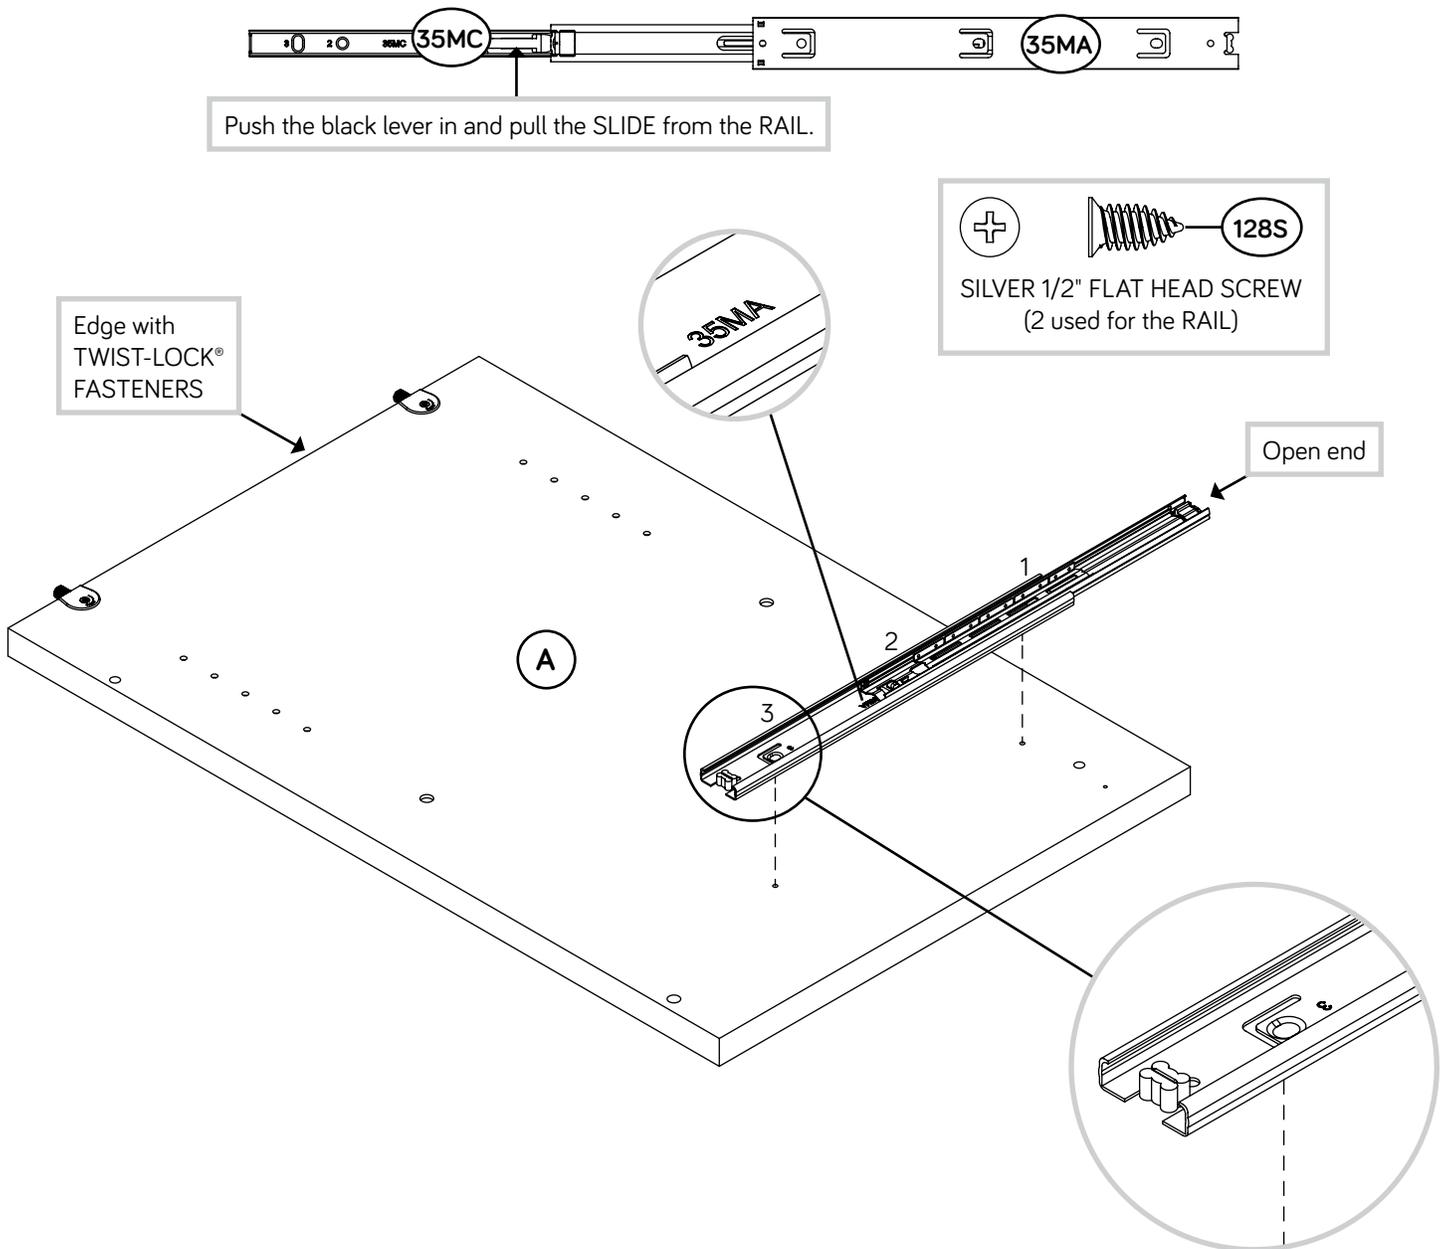


Step 3

- ✚ Push two SAUDER TWIST-LOCK® FASTENERS (10F) into the large holes in the BACK (M).
- ✚ Insert one WOOD DOWEL (15F) into the RIGHT END (A).
- ✚ Fasten the BACK (M) to the RIGHT END (A). Tighten one TWIST-LOCK® FASTENER.
- ✚ NOTE: Be sure the WOOD DOWEL in the RIGHT END inserts into the BACK.




Some assembly
(and snacks) required.

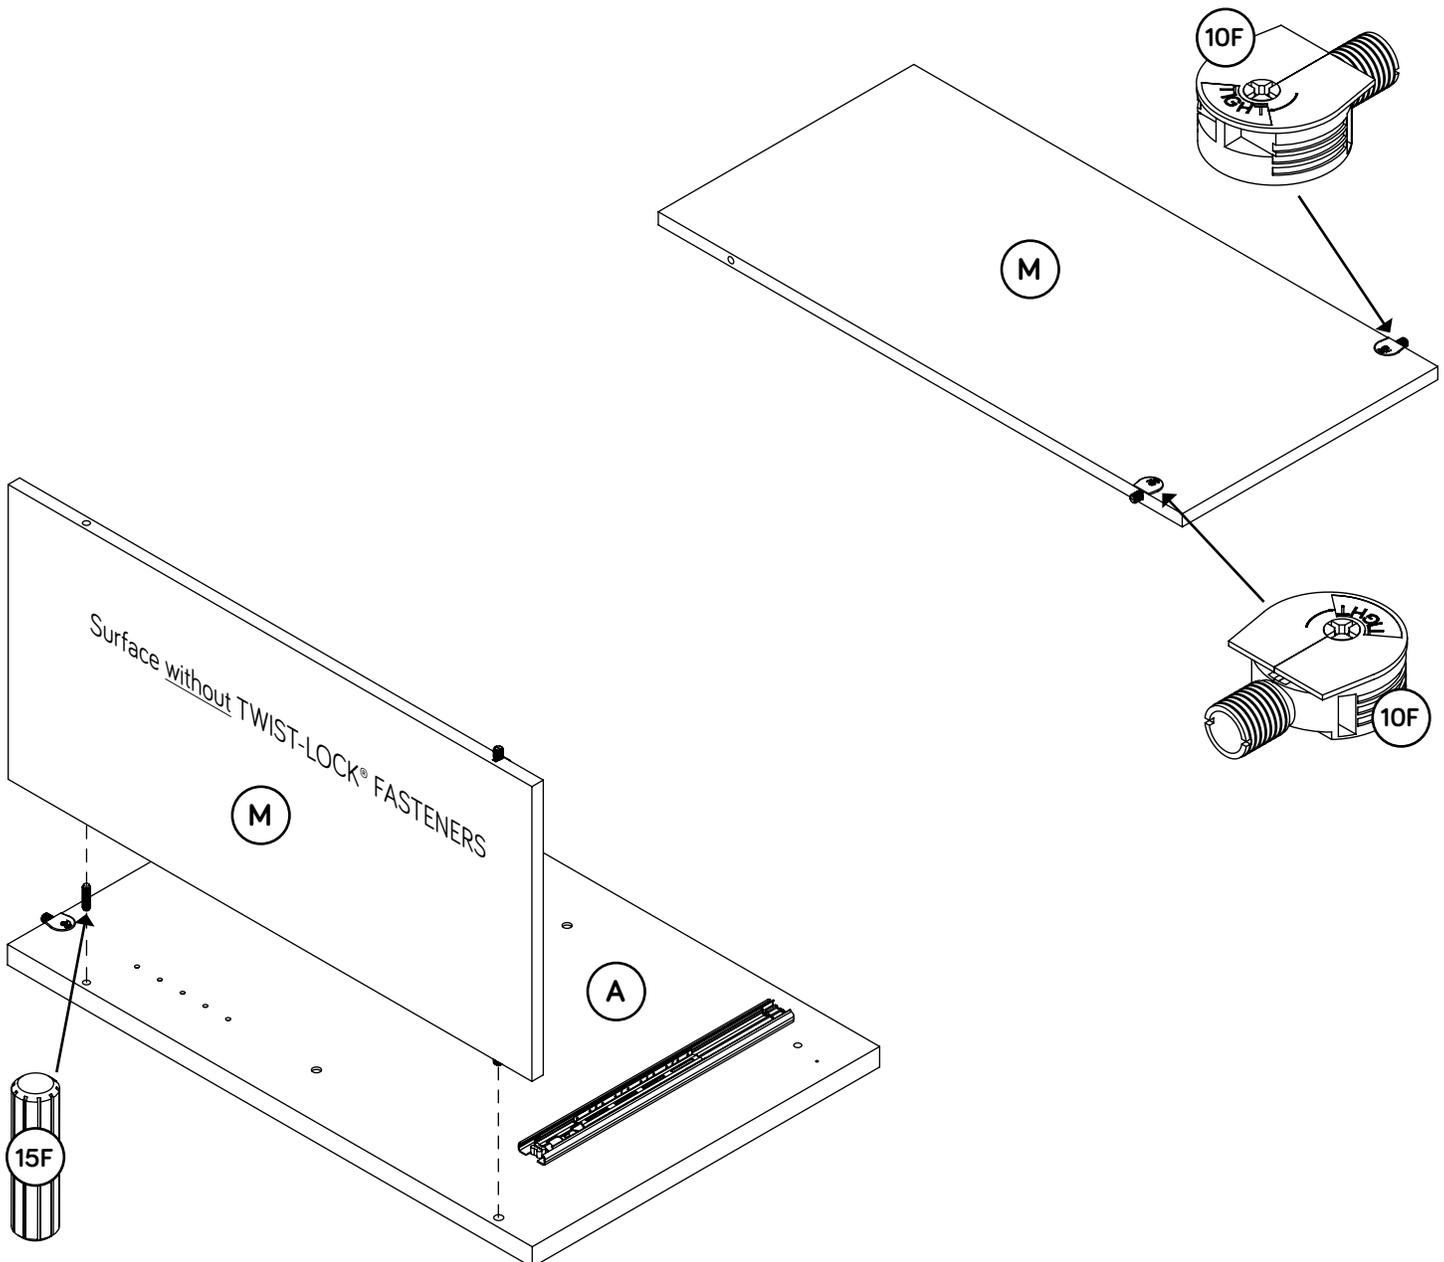

Step 4

- ✚ Push four SAUDER TWIST-LOCK® FASTENERS (10F) into the large holes in the FIXED SHELF (J).
- ✚ Fasten the FIXED SHELF (J) to the RIGHT END (A). Tighten two TWIST-LOCK® FASTENERS.

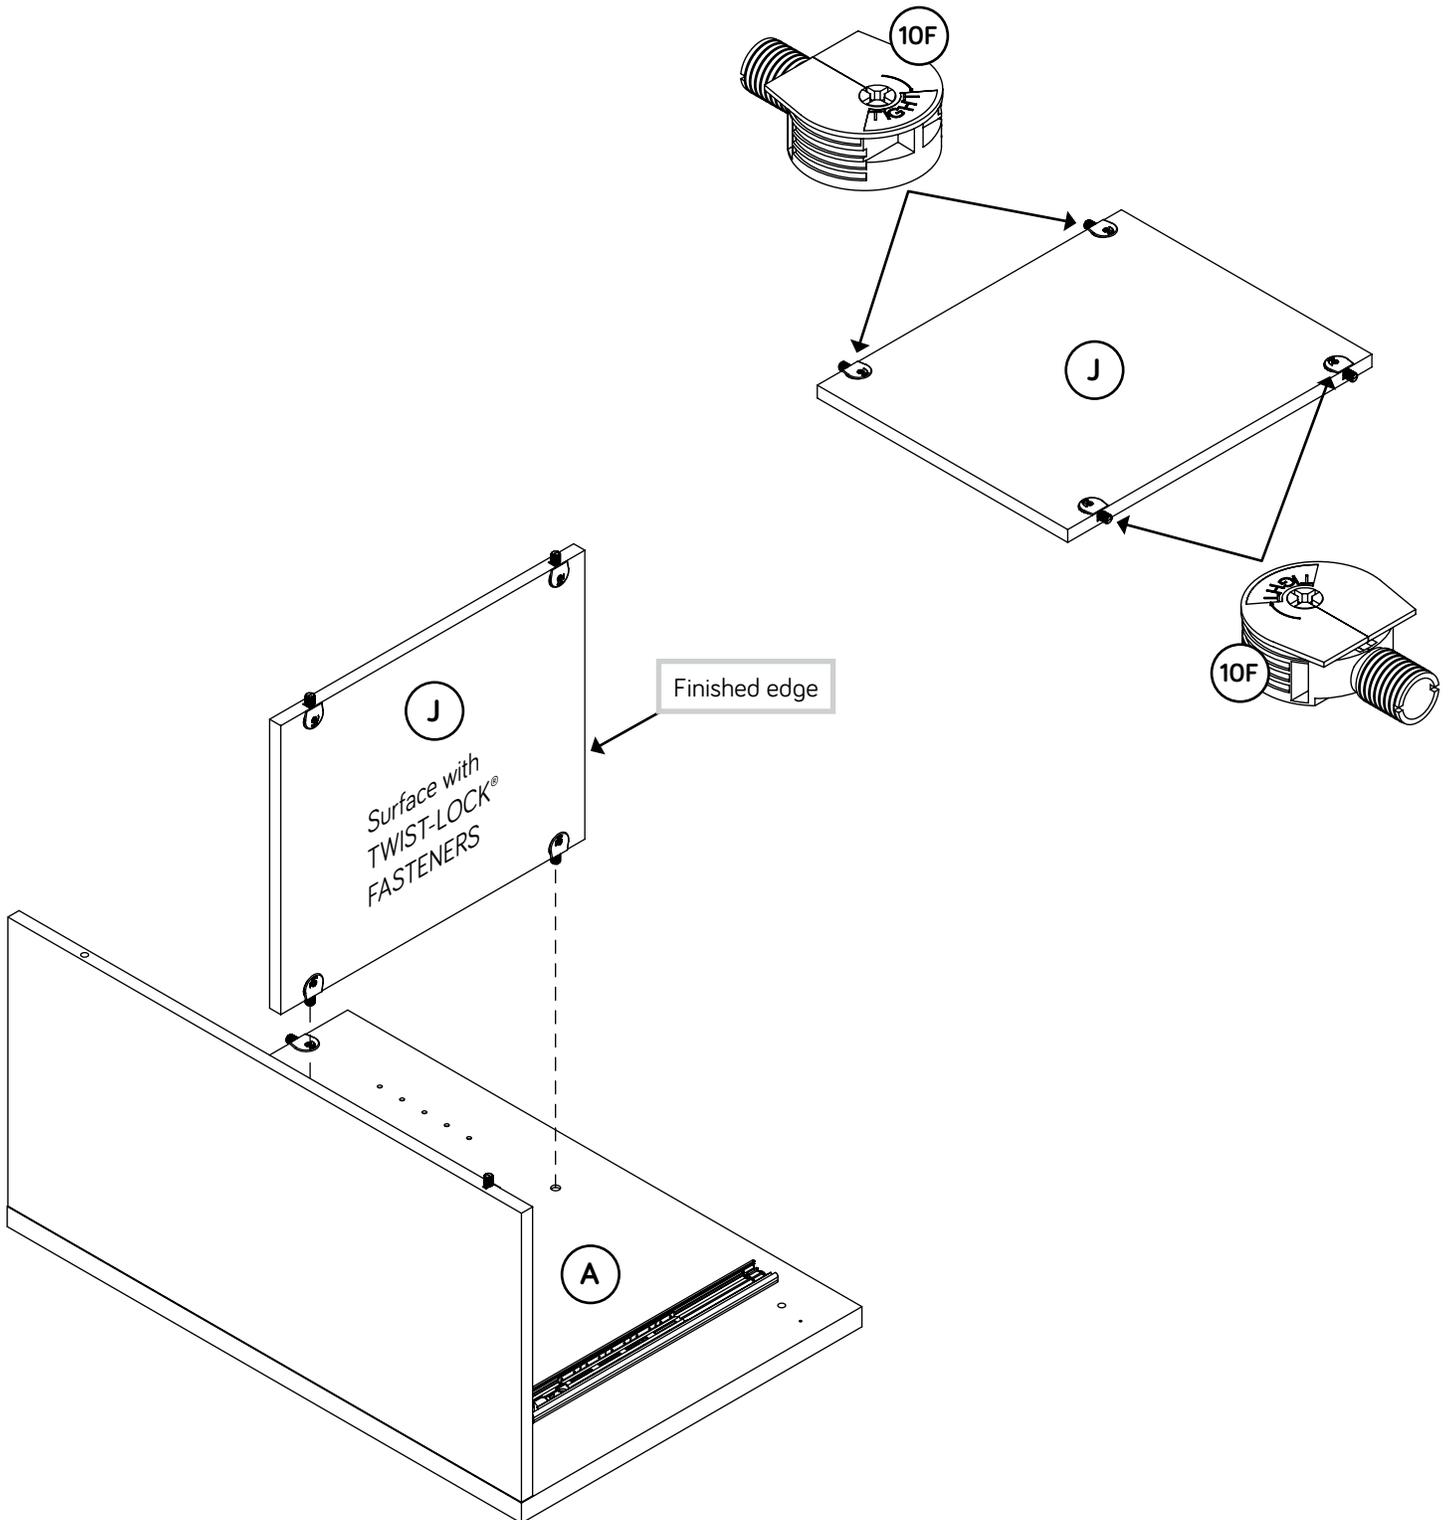

Step 5

✚ Fasten three METAL BRACKETS (4G) to the SKIRT (K). Use three BLACK 9/16" LARGE HEAD SCREWS (1S).




✚ NOTE: Be sure the BRACKETS are even with the edges of the SKIRT as shown.

✚ Fasten the DUST RAIL (L) to the SKIRT (K). Use one BLACK 9/16" LARGE HEAD SCREWS (1S) through the METAL BRACKET on the SKIRT and into the hole in the DUST RAIL.

✚ Insert one WOOD DOWEL (15F) into the RIGHT END (A).


✚ Fasten the SKIRT (K) to the RIGHT END (A). Use one BLACK 9/16" LARGE HEAD SCREW (1S) through the METAL BRACKET on the SKIRT and into the hole in the RIGHT END.

✚ NOTE: Be sure the WOOD DOWEL in the RIGHT END inserts into the DUST RAIL (L).

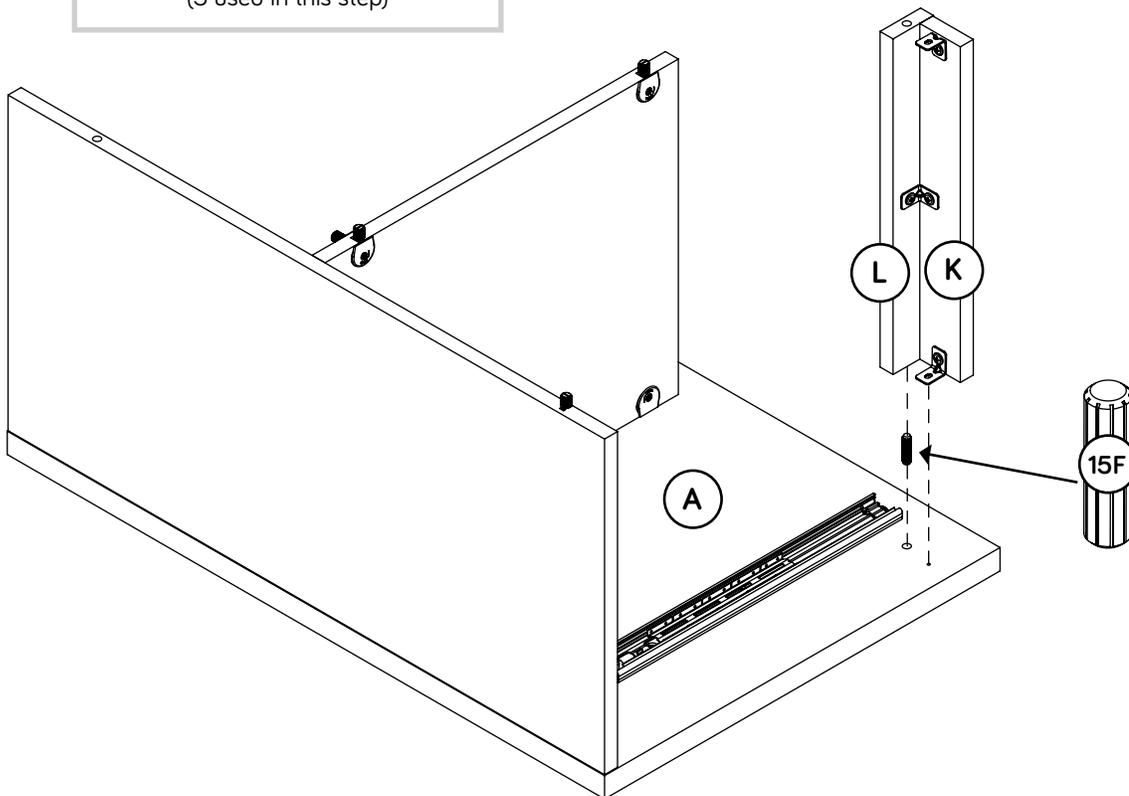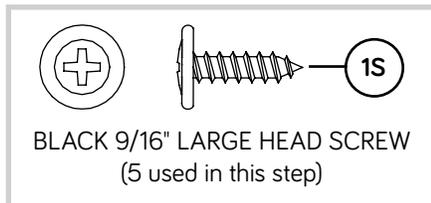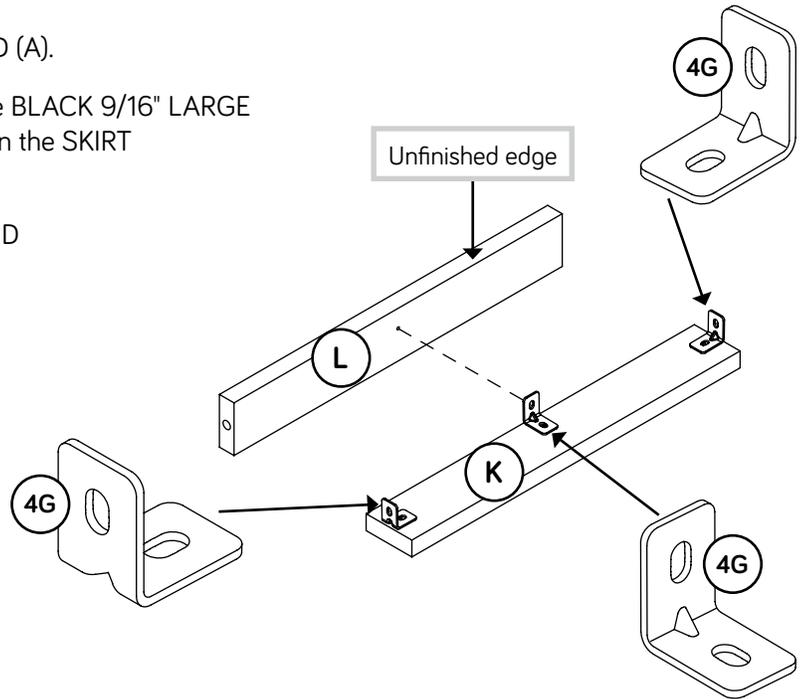


Step 6

- ✚ Push two SAUDER TWIST-LOCK® FASTENERS (10F) into the large holes in the UPRIGHT (Q).
- ✚ Fasten one EXTENSION RAIL (35MA) to the UPRIGHT (Q). Use two SILVER 1/2" FLAT HEAD SCREWS (128S) through holes #1 and #3.
- ✚ **NOTE:** For the EXTENSION RAIL, turn a SCREW into the hole shown in the enlarged diagram. Then, slide the inner cartridge of the EXTENSION RAIL in to find the other hole that lines up with the hole in the UPRIGHT. Turn a SCREW into this hole.

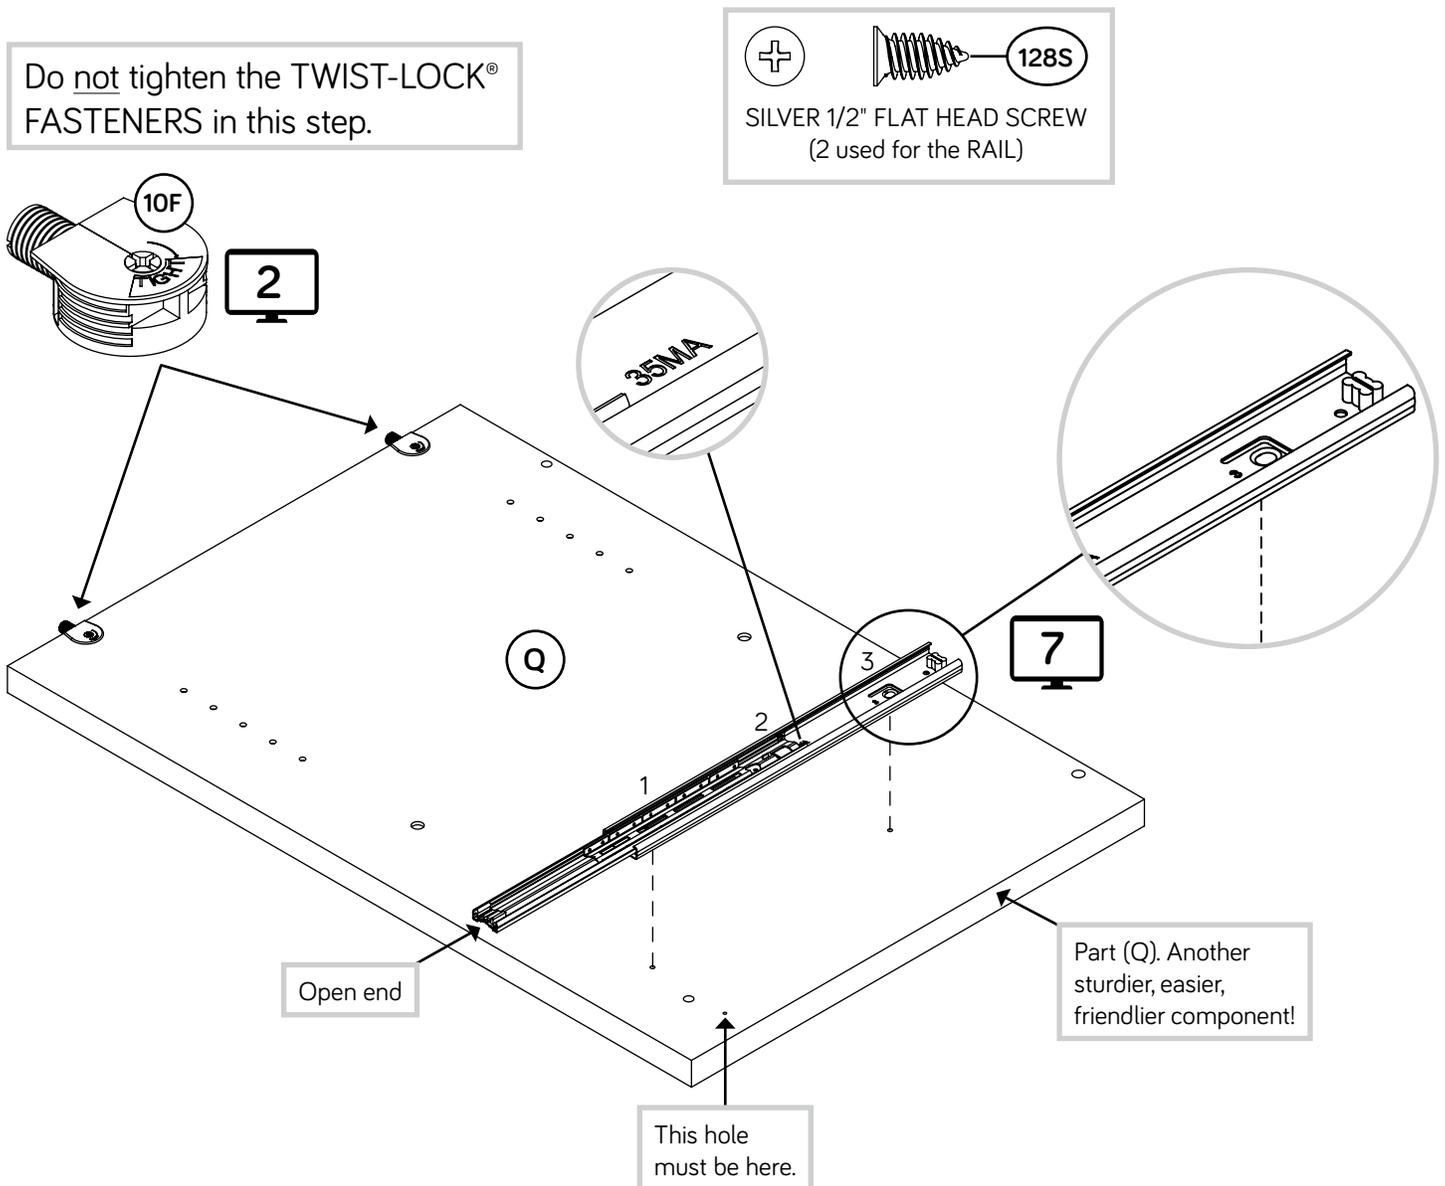

Step 7


- ✚ Insert two WOOD DOWELS (15F) into the DUST RAIL (L) and BACK (M).
- ✚ Fasten the UPRIGHT (Q) to the FIXED SHELF (J) and BACK (M). Tighten three TWIST-LOCK® FASTENERS.
- ✚ **NOTE:** Be sure the WOOD DOWELS in the DUST RAIL and BACK insert into the UPRIGHT.
- ✚ Fasten the UPRIGHT (Q) to the SKIRT (K). Use one BLACK 9/16" LARGE HEAD SCREWS (1S) through the METAL BRACKET on the SKIRT and into the hole in the UPRIGHT.

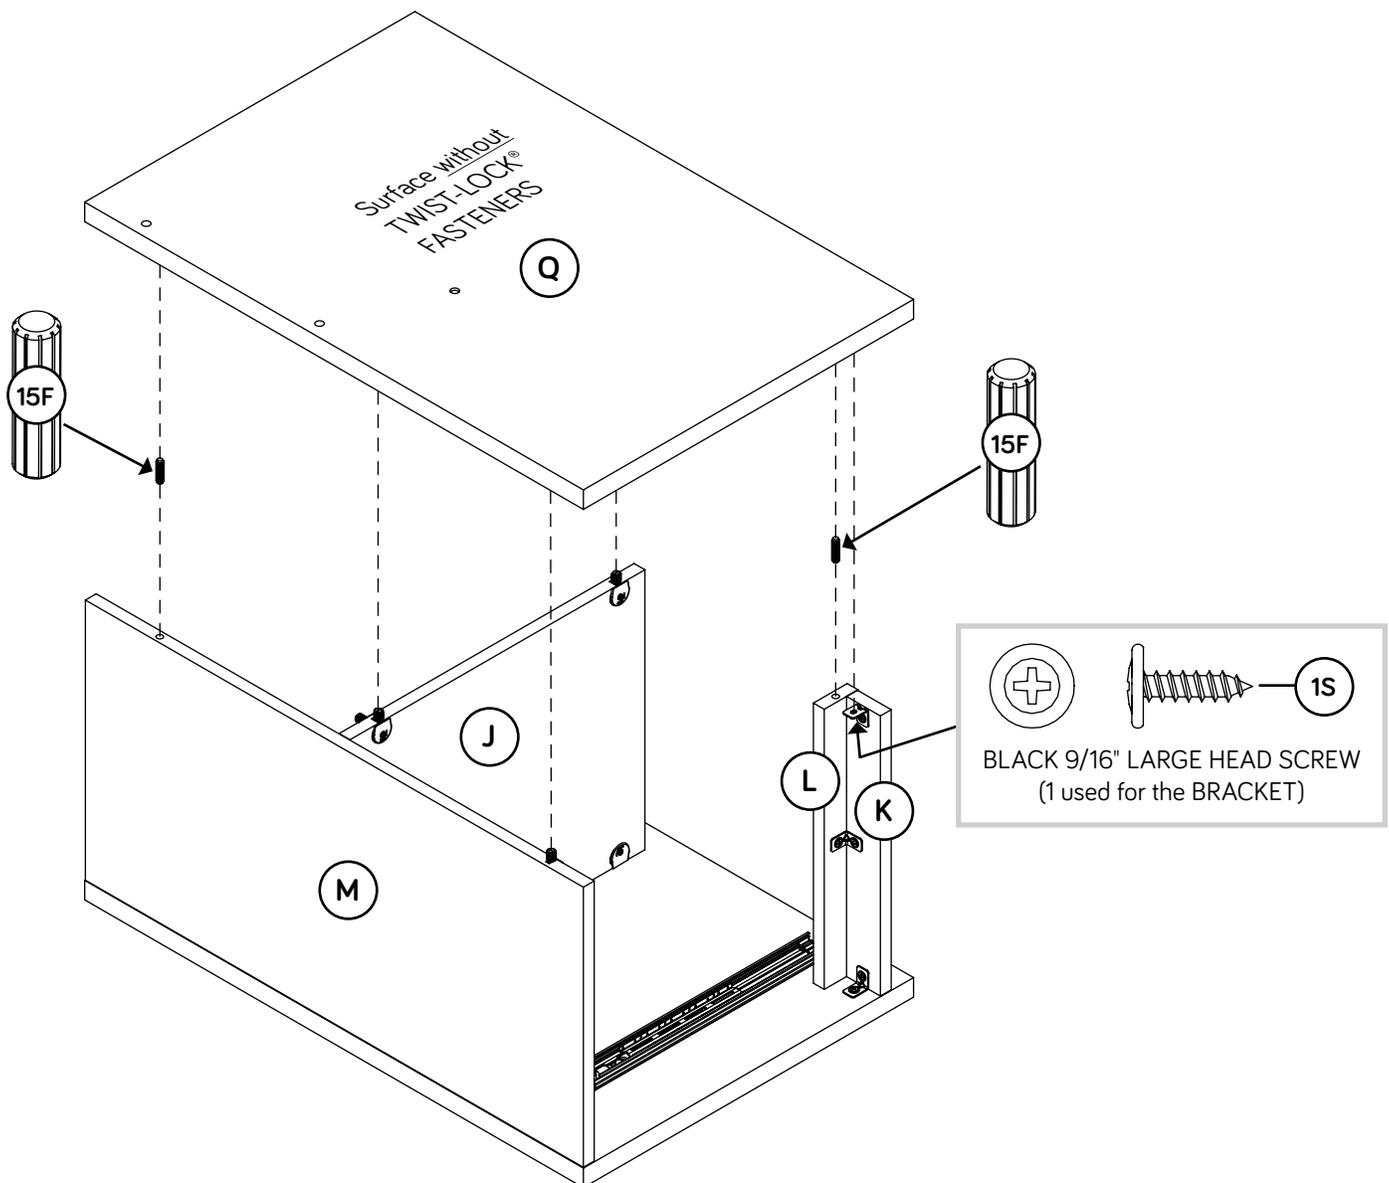

Step 8

- Insert five SAUDER TWIST-LOCK® FASTENERS (10F) into the large holes in the SHORT MODESTY PANEL (D) and LONG SHELF (E).

Do not tighten the TWIST-LOCK® FASTENERS in this step.

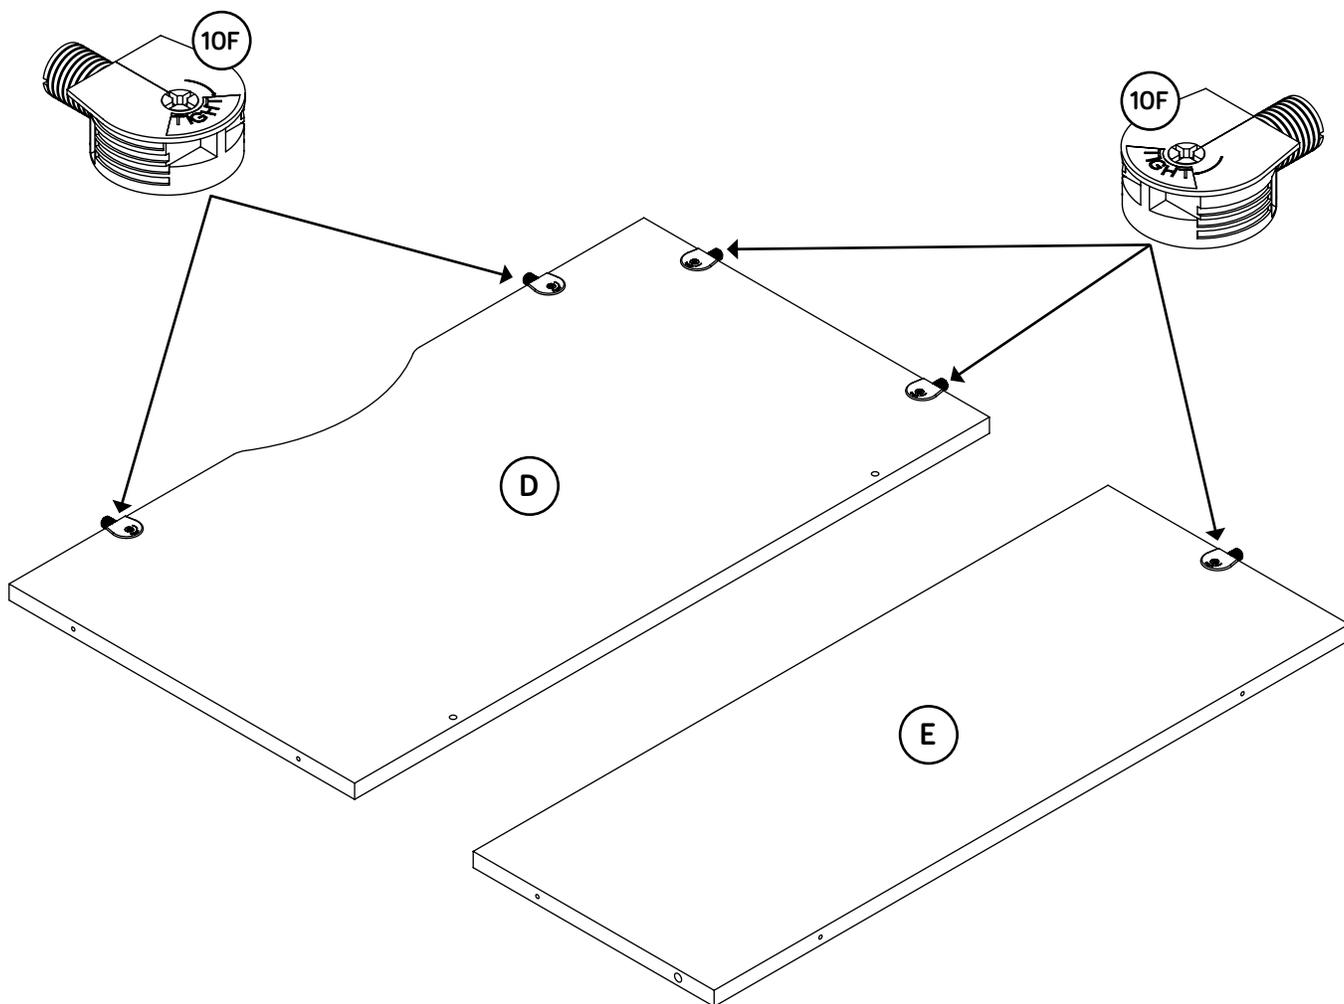


Step 9

- ⚡ Carefully turn the LONG SHELF (E) over.
- ⚡ Fasten the SHORT MODESTY PANEL (D) to the LONG SHELF (E). Use two BLACK 1-15/16" FLAT HEAD SCREWS (113S).




Don't worry. It isn't Rome. This can be built in a day.

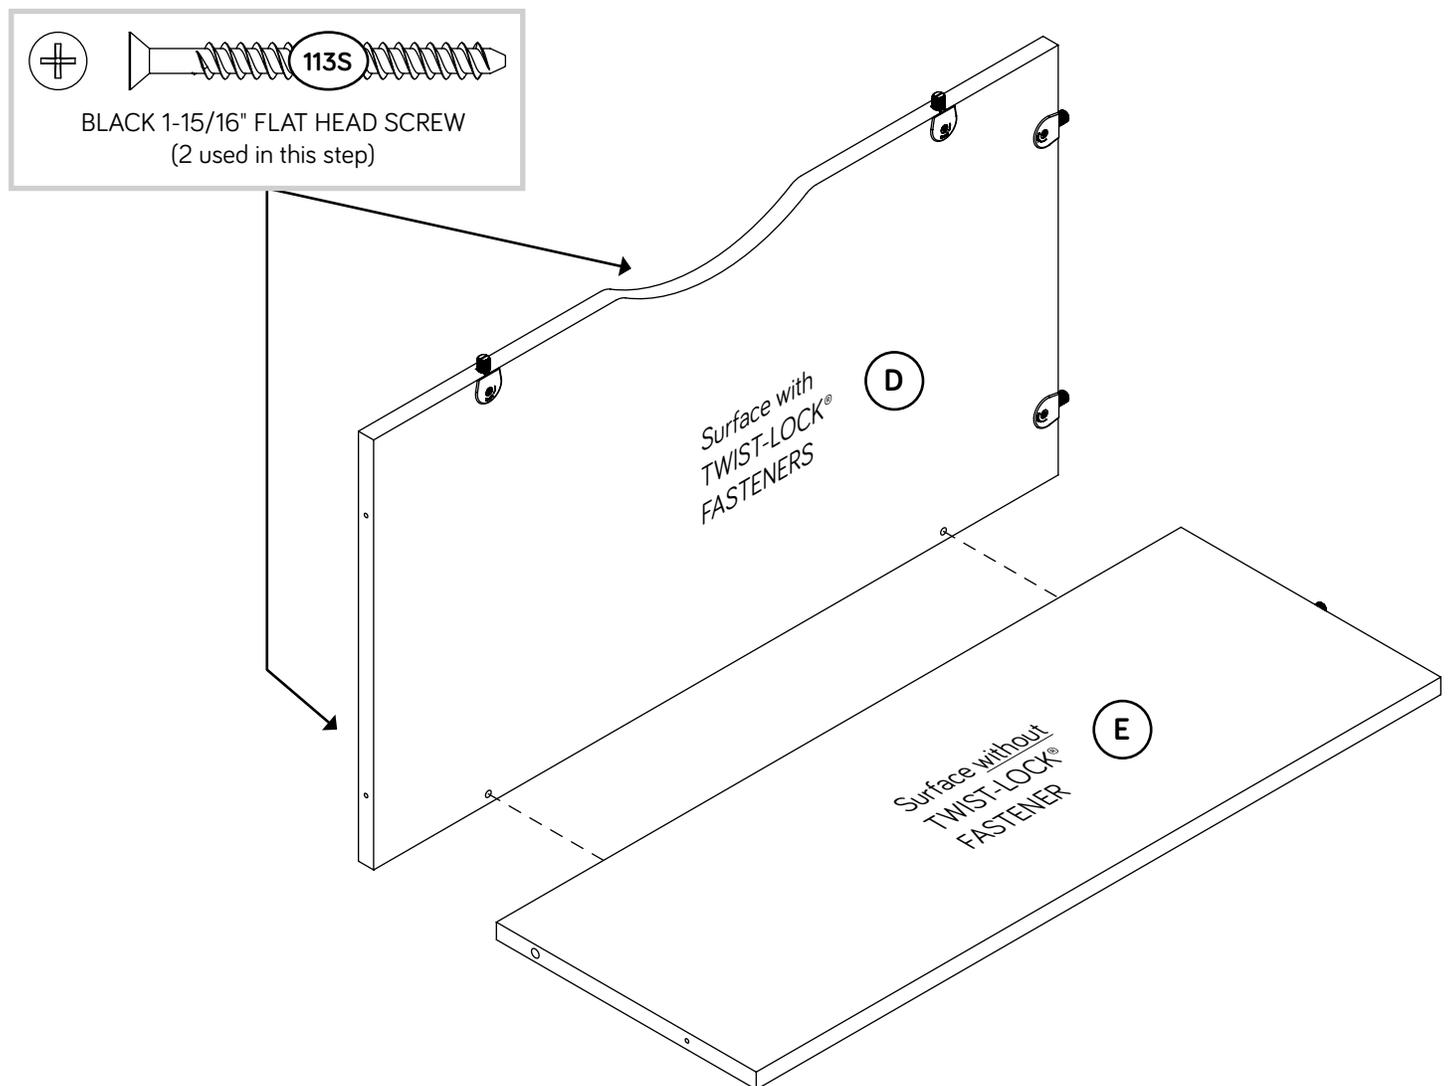

Step 10


- Fasten the SHORT MODESTY PANEL (D) and LONG SHELF (E) to the UPRIGHT (Q). Tighten three TWIST-LOCK® FASTENERS.

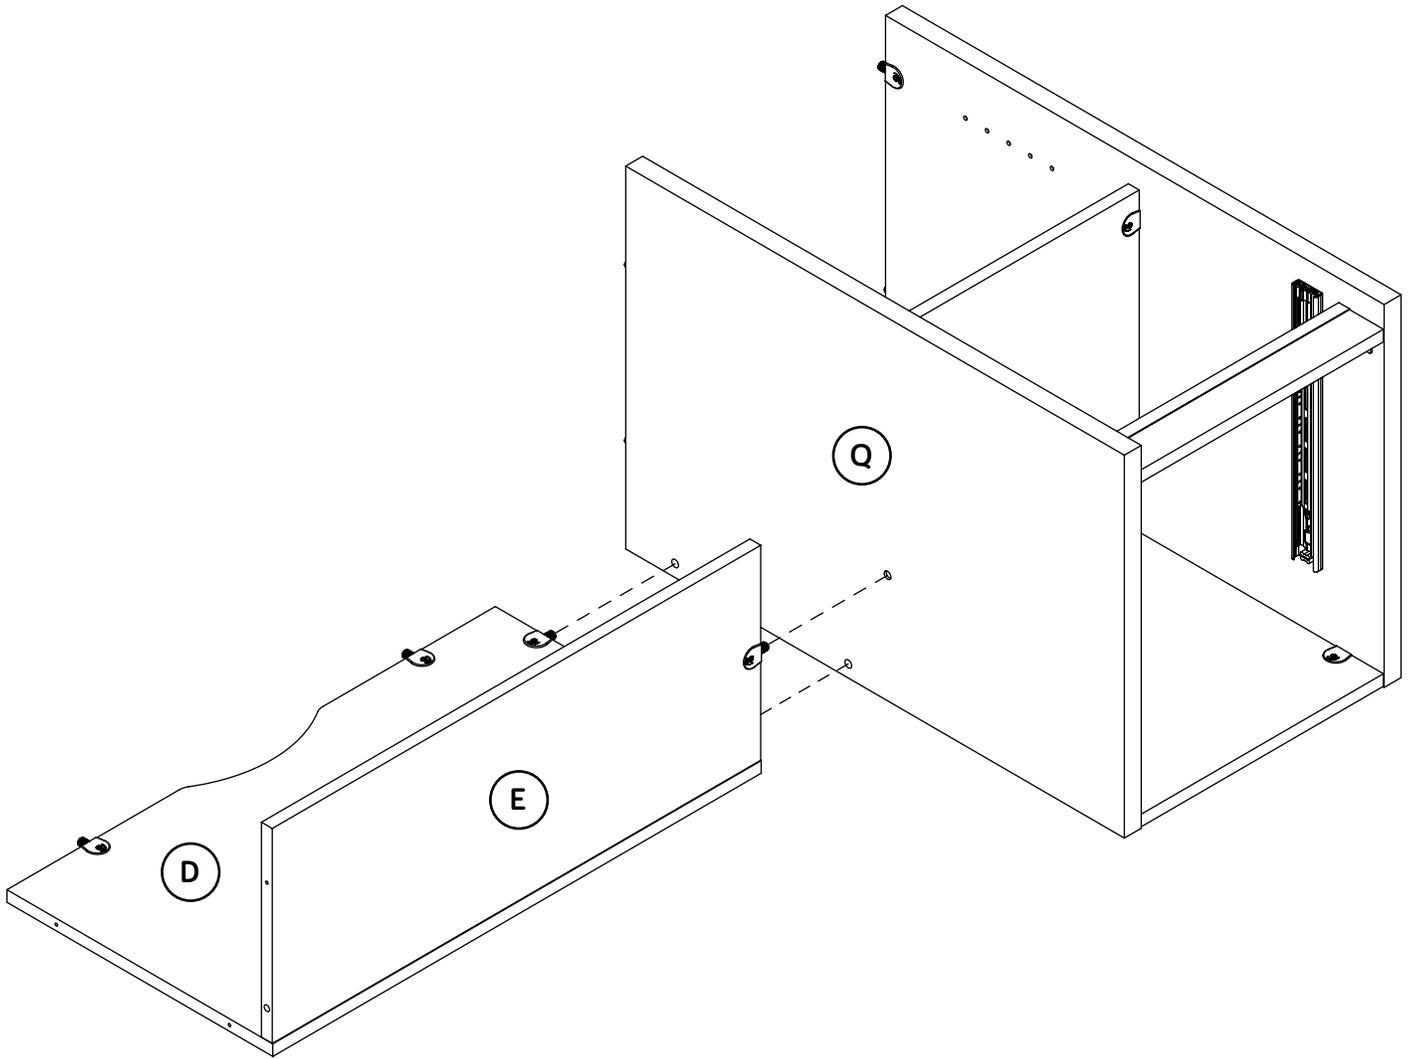

Step 11

- ✚ Insert one SAUDER TWIST-LOCK® FASTENER (10F) into the large hole in the RIGHT CORNER BACK (G).
- ✚ Insert one WOOD DOWEL (15F) into the LONG SHELF (E).
- ✚ Fasten the RIGHT CORNER BACK (G) to the SHORT MODESTY PANEL (D) and LONG SHELF (E). Use three BLACK 1-15/16" FLAT HEAD SCREWS (113S).
- ✚ NOTE: You should start each SCREW a few turns before completely tightening any of them.
- ✚ NOTE: Be sure the WOOD DOWEL in the LONG SHELF inserts into the RIGHT CORNER BACK.

Do not tighten the TWIST-LOCK® FASTENER in this step.

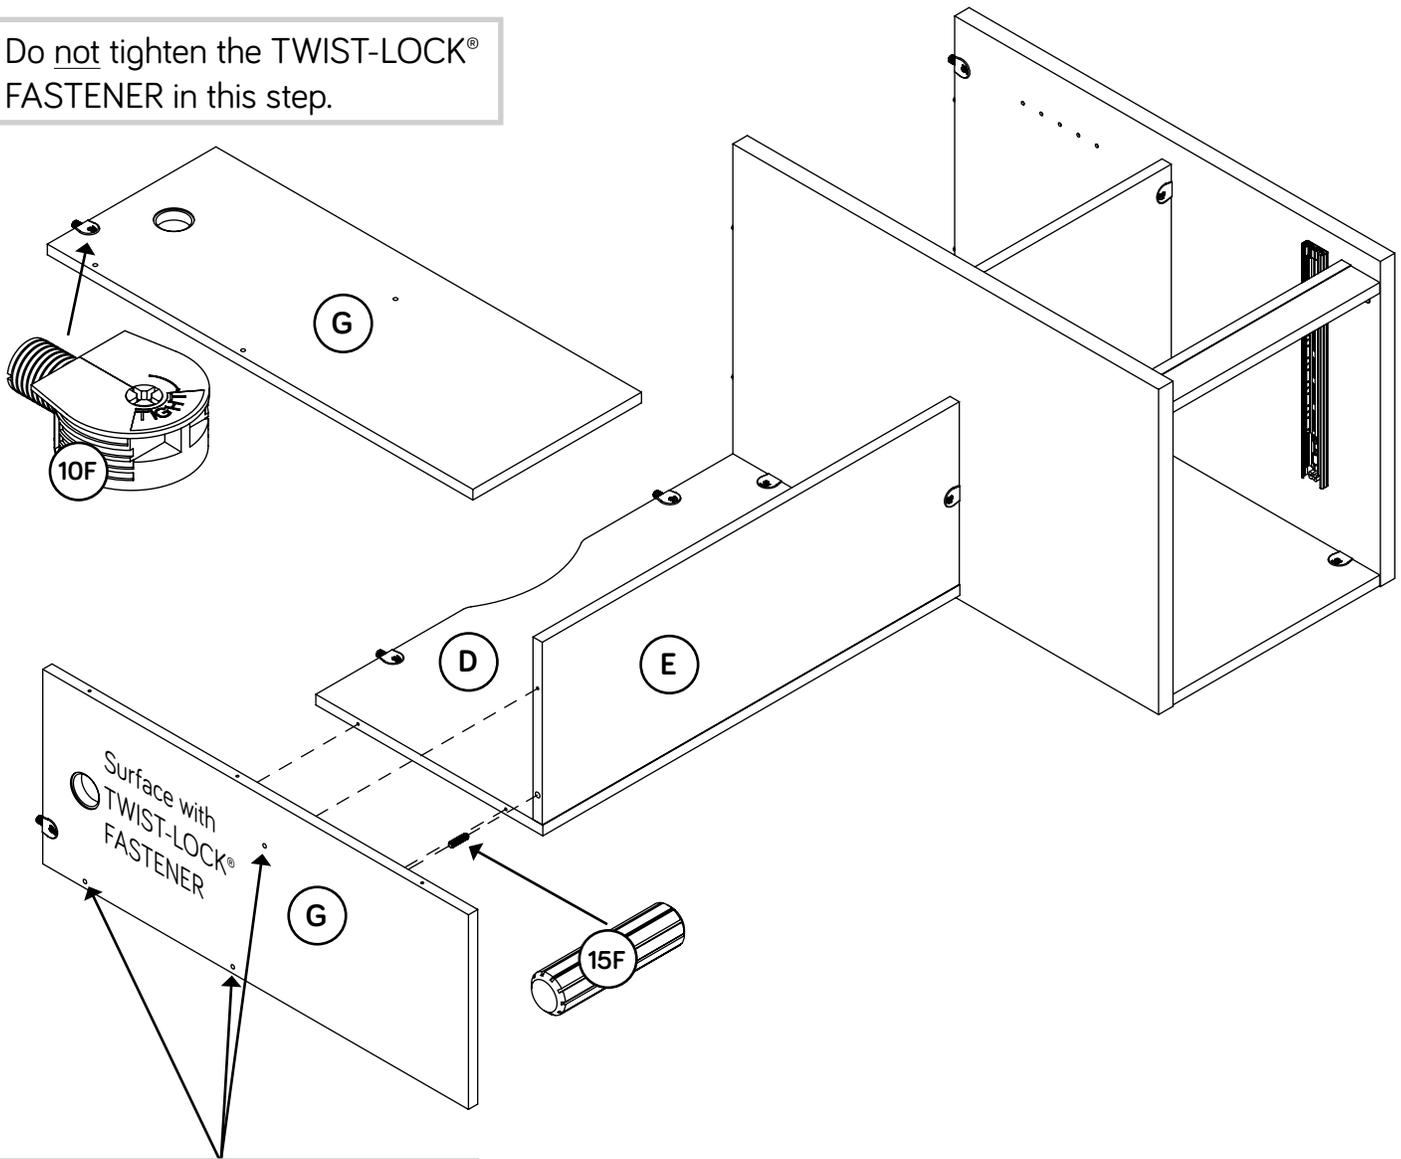


BLACK 1-15/16" FLAT HEAD SCREW
(3 used in this step)

Step 12


- ✚ Insert eight SAUDER TWIST-LOCK® FASTENERS (10F) into the large holes in the LEFT END (B) and LONG MODESTY PANEL (C).

Do not tighten the TWIST-LOCK® FASTENERS in this step.

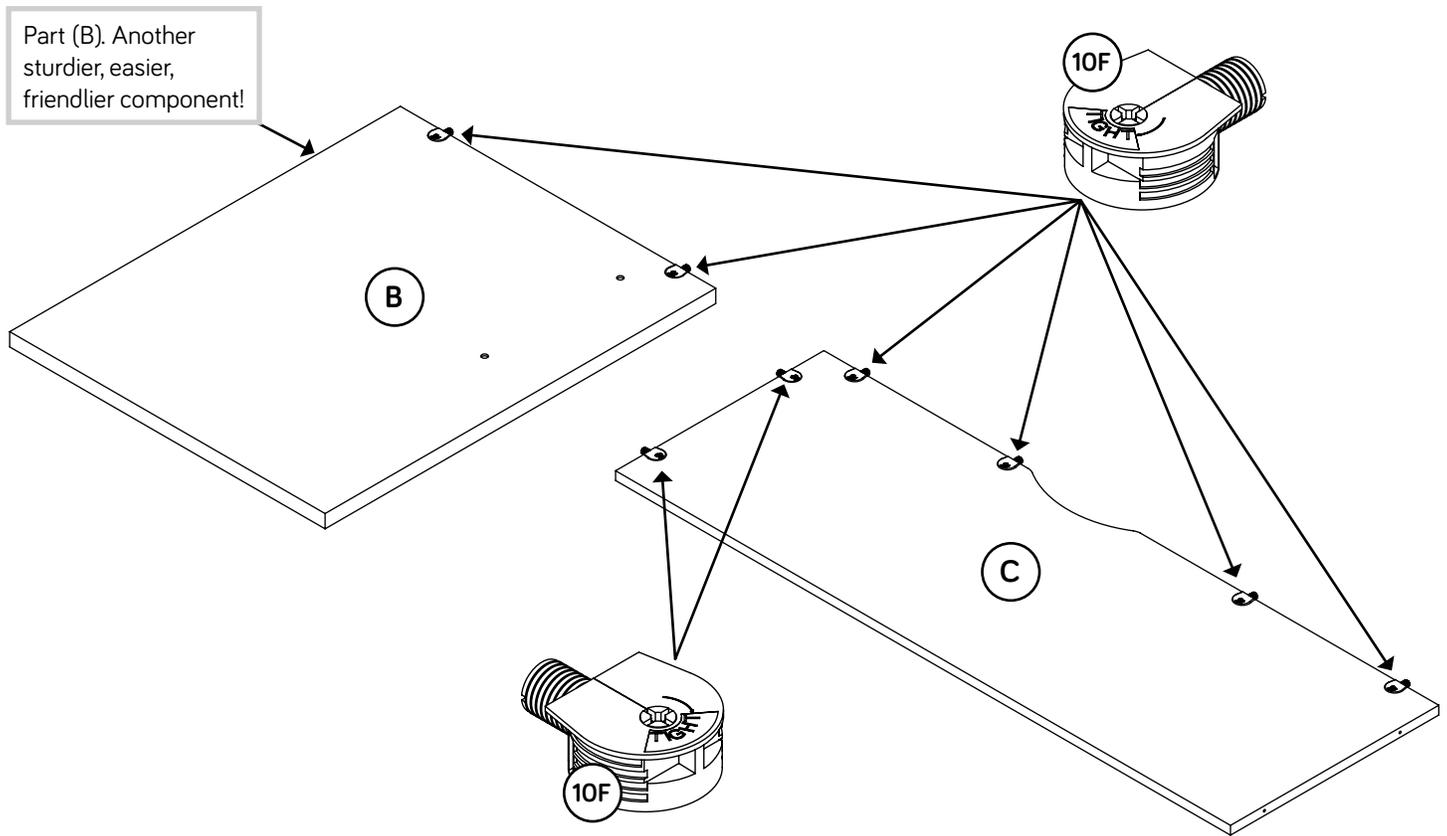


Step 13

- Fasten the LEFT END (B) to the LONG MODESTY PANEL (C). Tighten two TWIST-LOCK® FASTENERS.

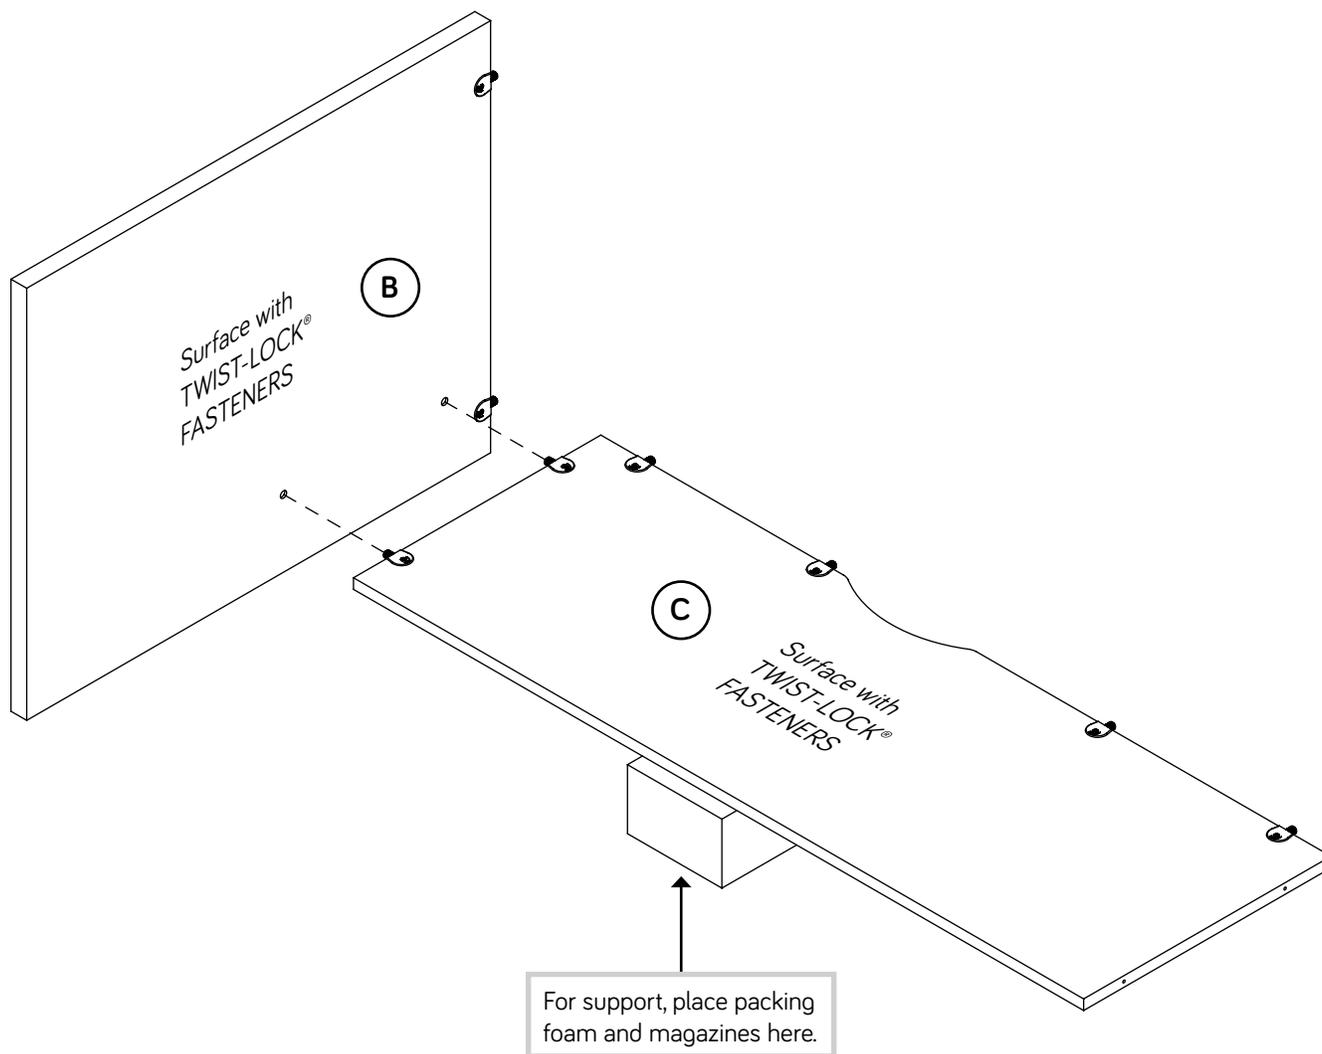

Step 14

- ✚ Insert one SAUDER TWIST-LOCK® FASTENER (10F) into the large hole in the LEFT CORNER BACK (F).
- ✚ Fasten the LEFT CORNER BACK (F) to the LONG MODESTY PANEL (C). Use two BLACK 1-15/16" FLAT HEAD SCREWS (113S).

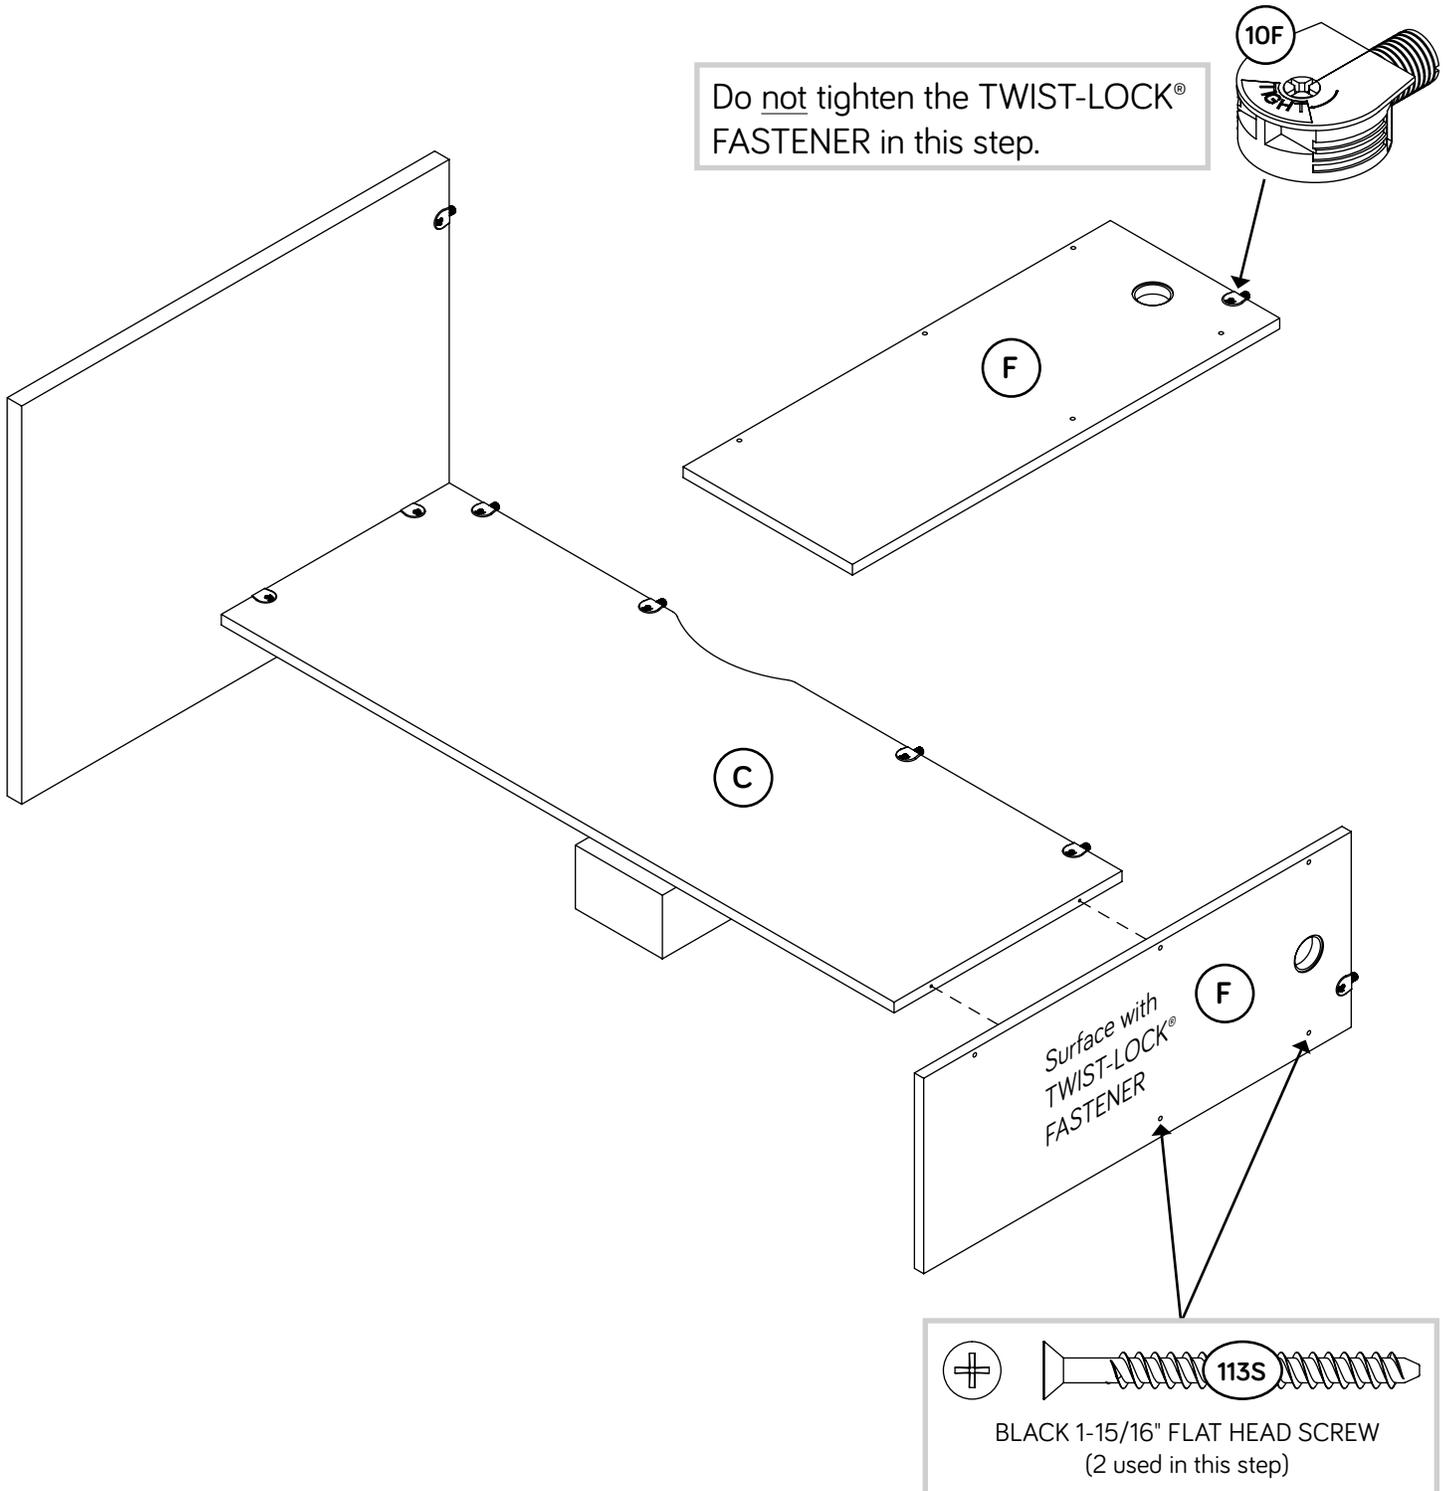


Step 15

- ✚ With someone's help, carefully stand the two assemblies upright, and place them near your unit's final location.
- ✚ Fasten the LEFT CORNER BACK (F) to the RIGHT CORNER BACK (G). Use three BLACK 1-15/16" FLAT HEAD SCREWS (113).
- ✚ NOTE: You should start each SCREW a few turns before completely tightening any of them.




Pro Tip: Lift with your legs. And, you know, your arms.

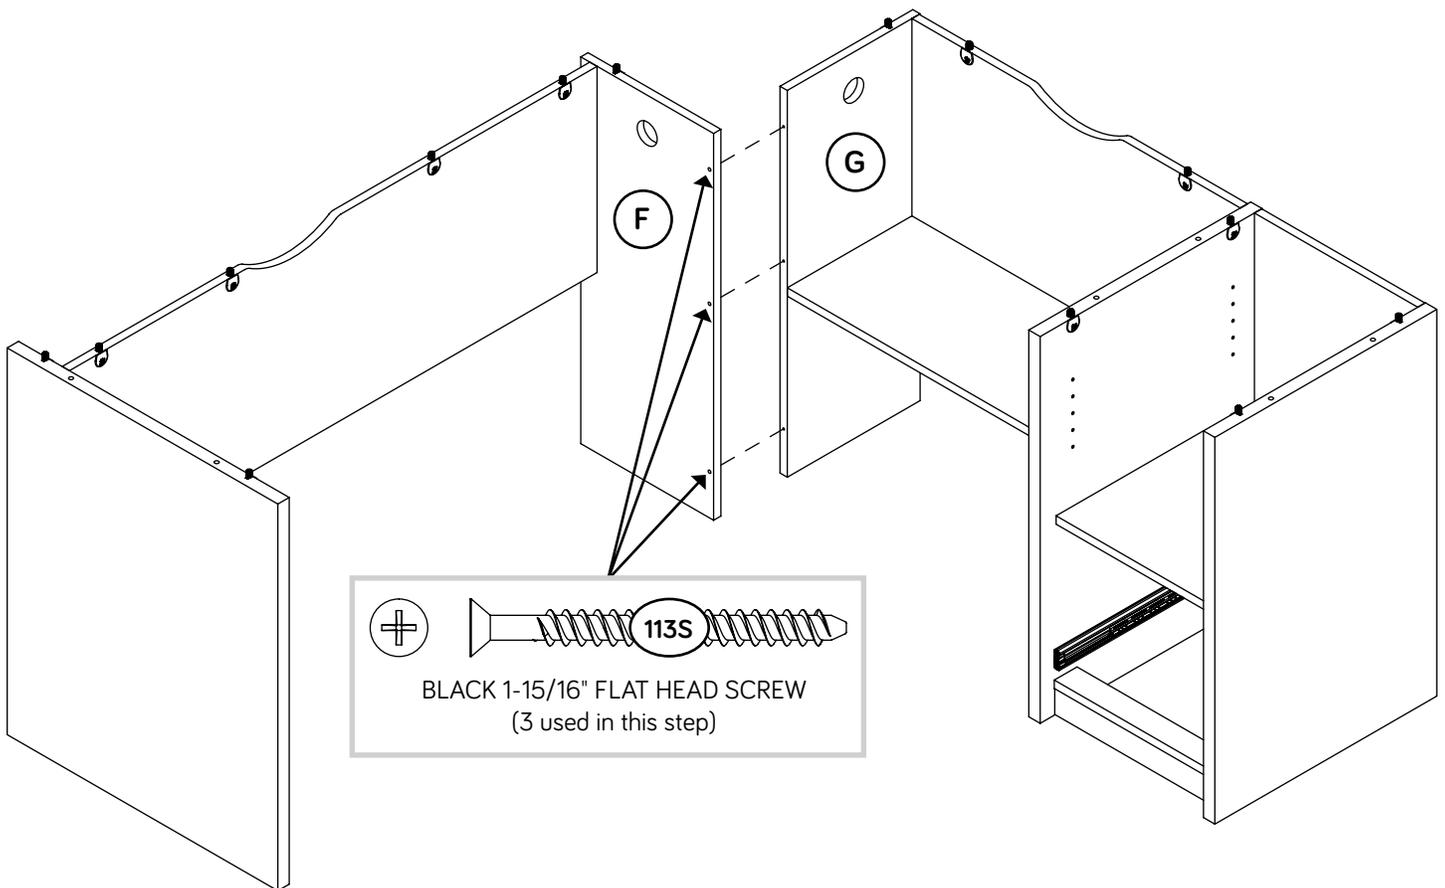


Step 16

- ✦ Peel APPLIQUES from the APPLIQUE CARDS (76P) and stick them onto each visible SCREW head in the SHORT MODESTY PANEL (D) and CORNER BACKS (F and G).
- ✦ Insert the GROMMETS (7P) and GROMMET CAPS (8P) into the large holes in the CORNER BACKS (F and G).

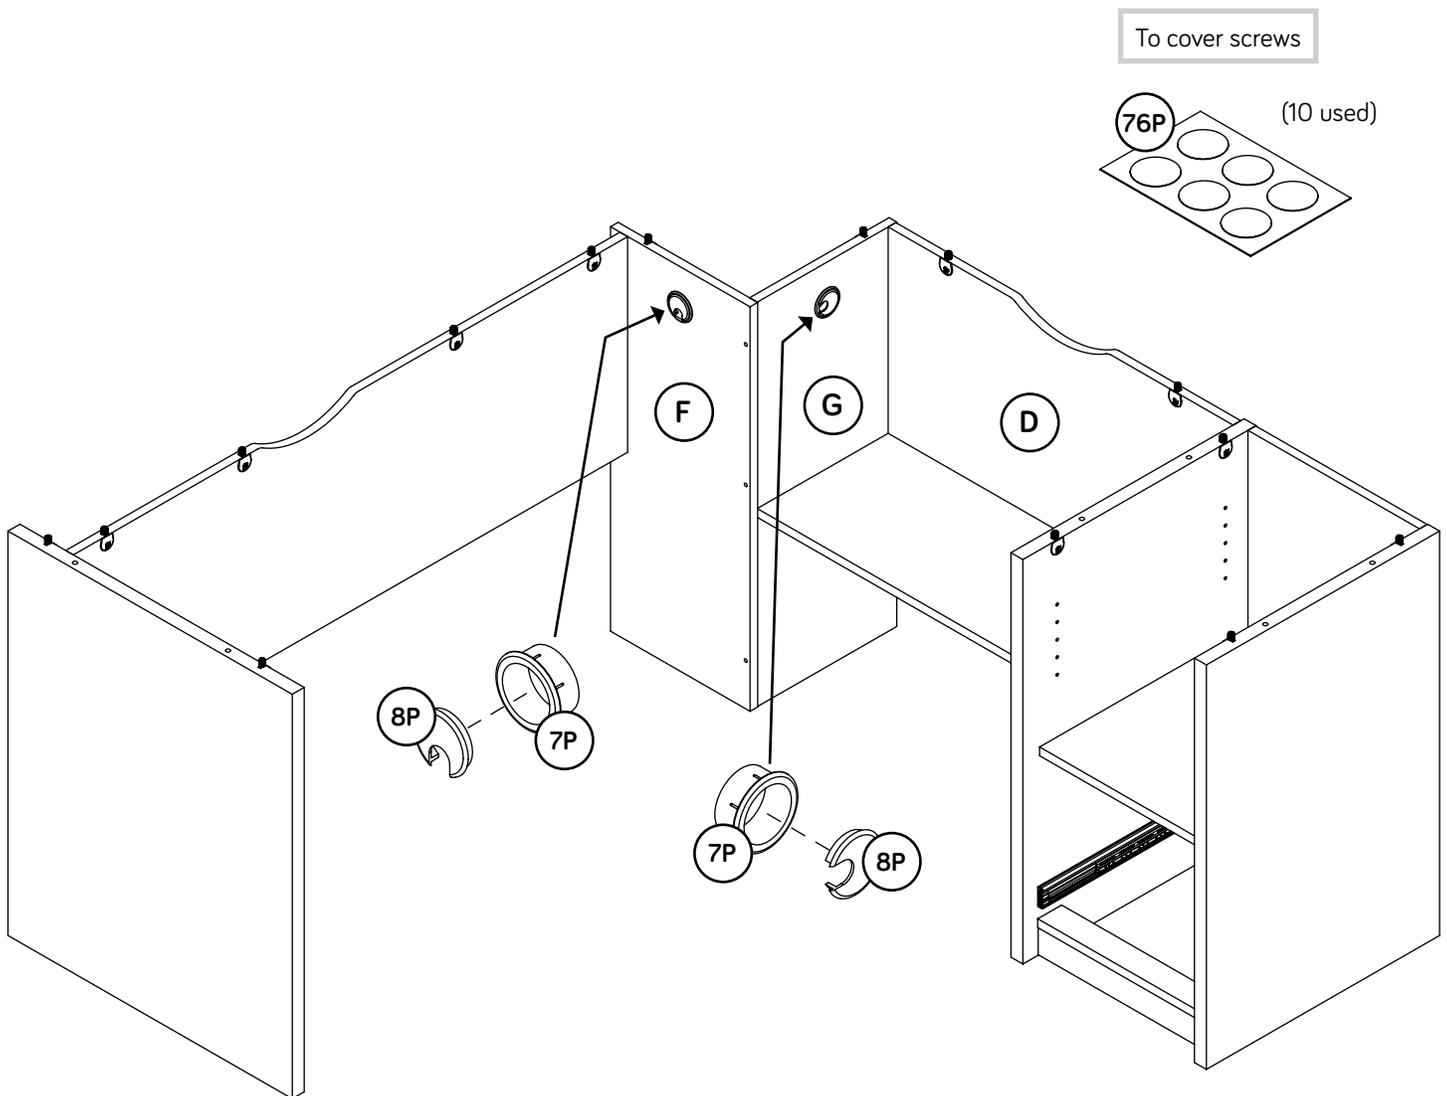

Step 17


- Fasten two PLATES (41G) to the SHORT TOP (P). Use four BLACK 9/16" LARGE HEAD SCREWS (1S).
- Insert four WOOD DOWELS (15F) into the SHORT TOP (P).

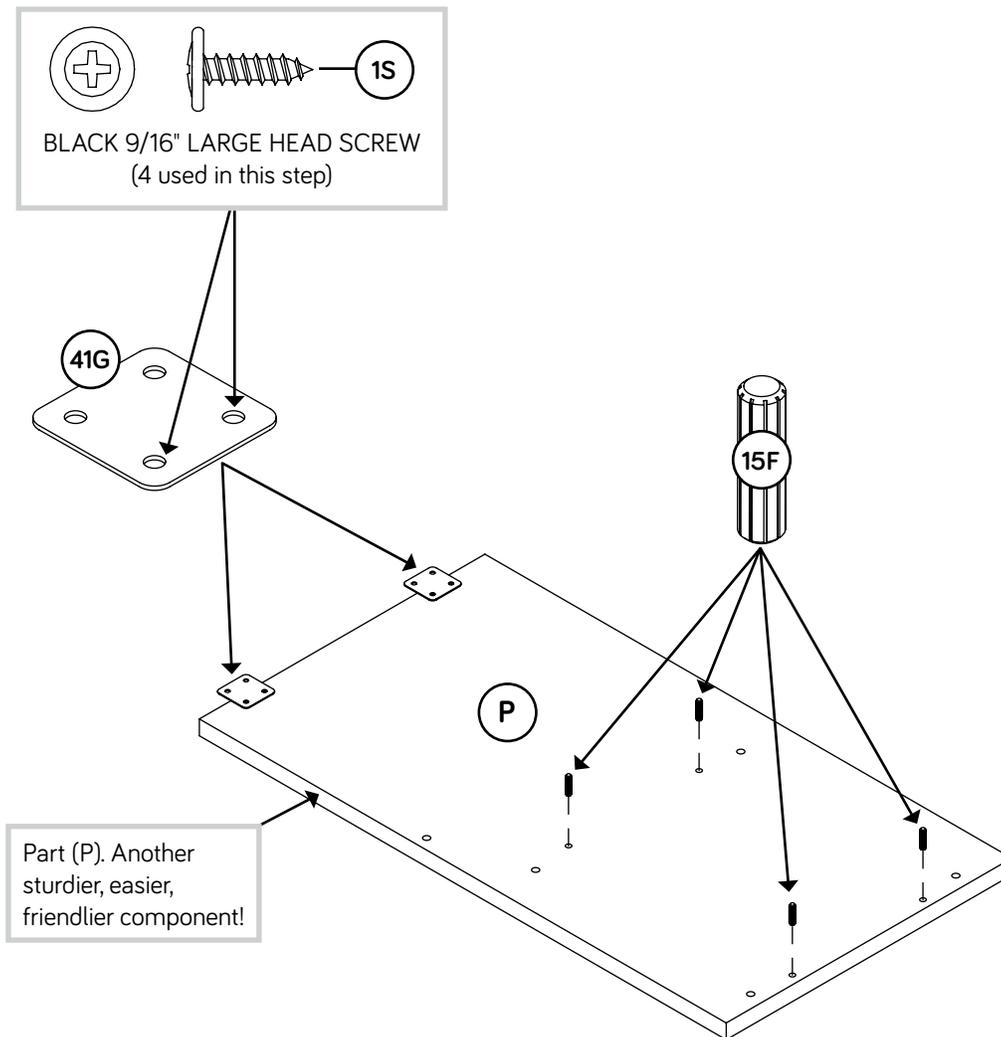

Step 18


✚ Fasten the SHORT TOP (P) to the RIGHT END (A), SHORT MODESTY PANEL (D), and UPRIGHT (Q). Tighten five TWIST-LOCK® FASTENERS.

✚ NOTE: Be sure the WOOD DOWELS in the TOP insert into the RIGHT END and UPRIGHT.

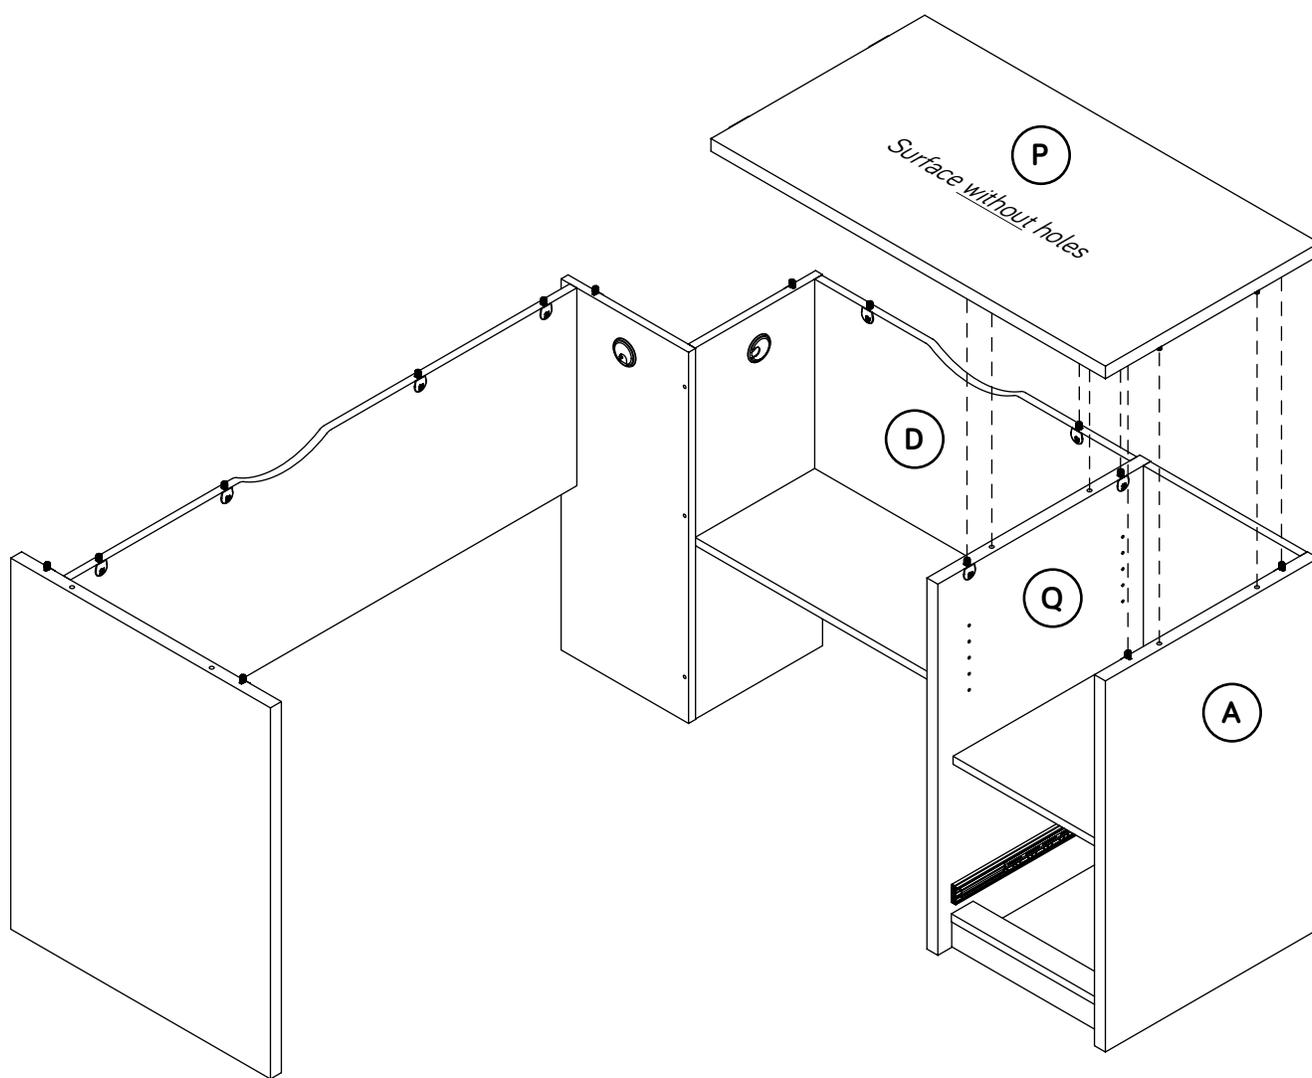

Step 19


- ✚ Insert two WOOD DOWELS (15F) into the LONG TOP (O).
- ✚ Fasten the LONG TOP (O) to the LEFT END (B), MODESTY PANELS (C and D), and CORNER BACKS (F and G). Tighten nine TWIST-LOCK® FASTENERS.
- ✚ NOTE: Be sure the WOOD DOWELS in the TOP insert into the LEFT END.
- ✚ Fasten the LONG TOP (O) to the PLATES on the SHORT TOP (P). Use four BLACK 9/16" LARGE HEAD SCREWS (1S).

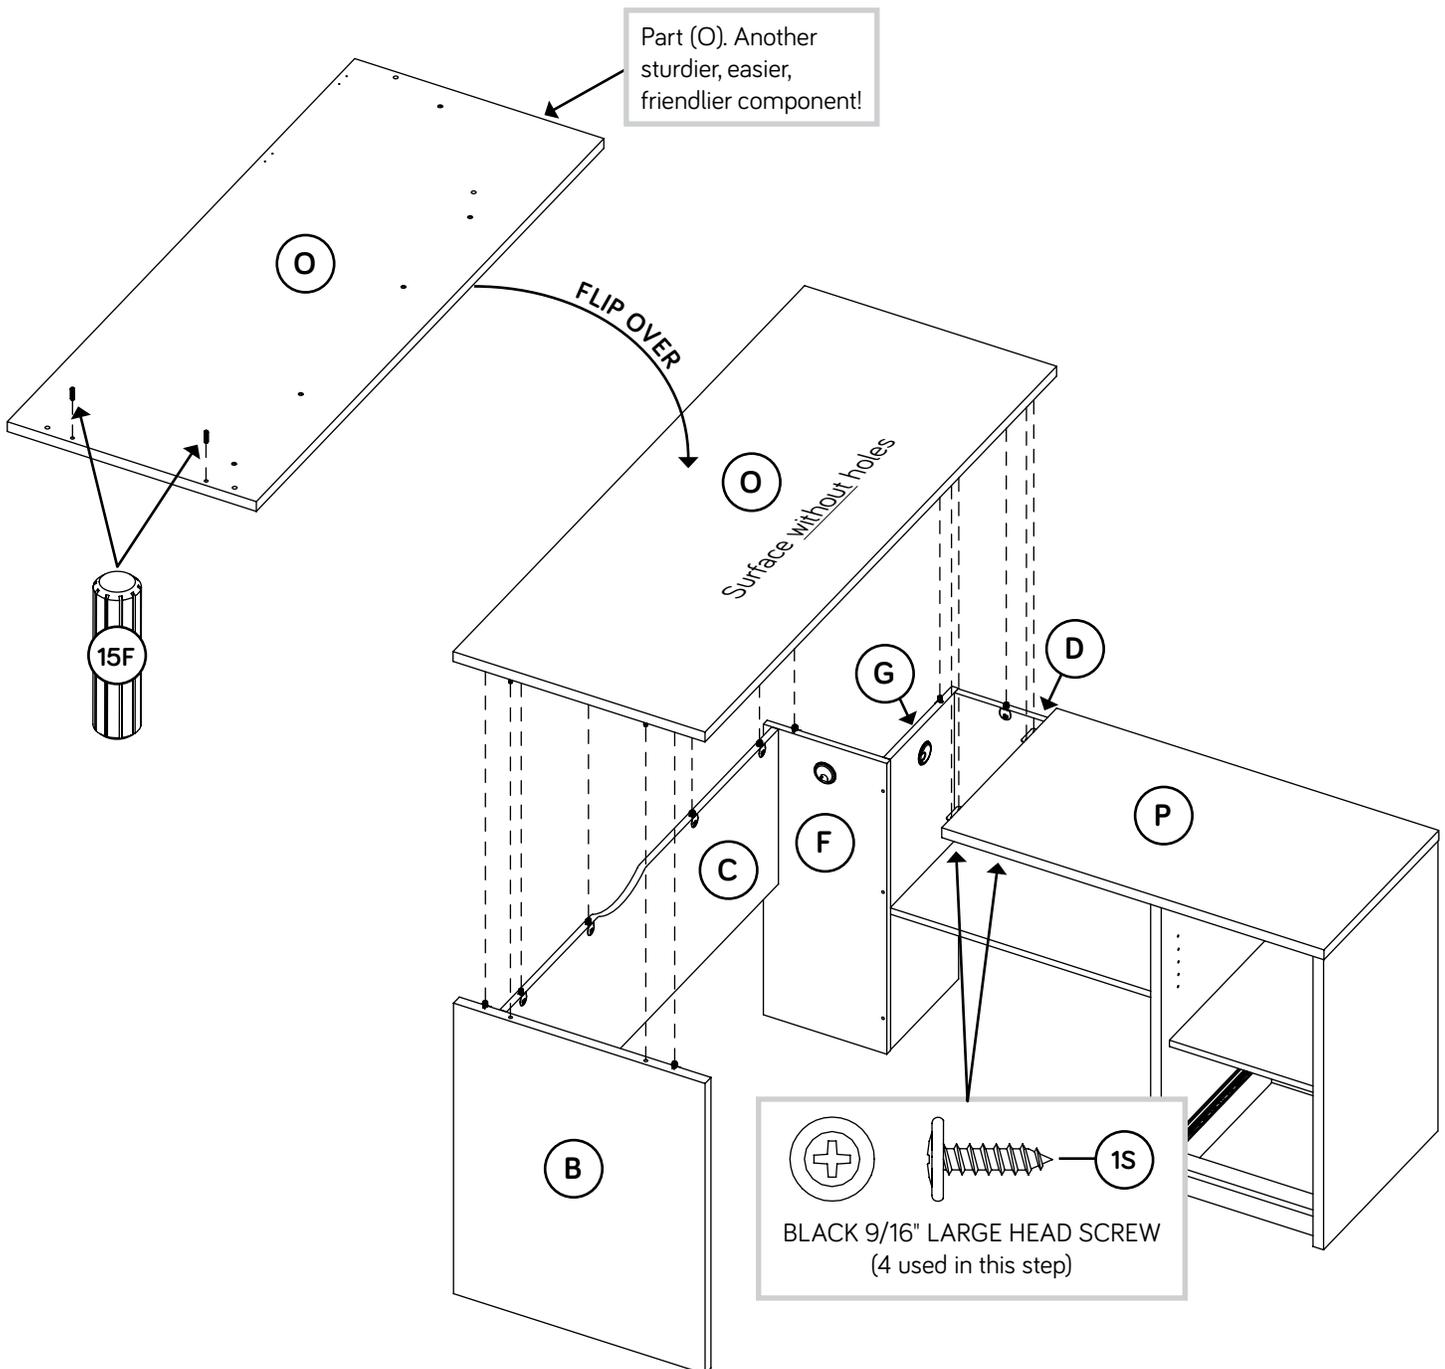

Step 20


1

The tabs should insert freely into the slots. Gently tilt the DRAWER SIDES side to side until the tabs slip into the slots.

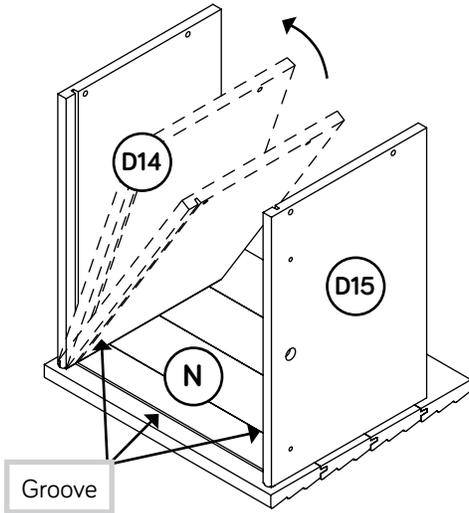

2

With the palm of your hand, tap the DRAWER BOTTOM down into the groove.

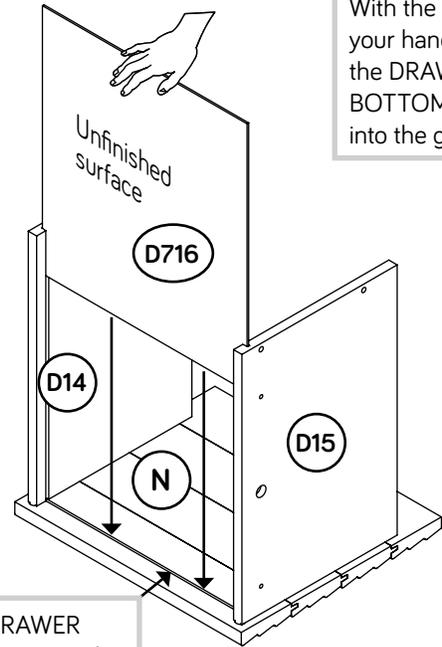


Be sure the DRAWER BOTTOM inserts into the DRAWER FRONT groove.

✚ Insert the DRAWER SIDES (D14 and D15) at an angle into the slot at each end of the DRAWER FRONT (N).

✚ Slide the DRAWER BOTTOM (D716) into the grooves in the DRAWER SIDES (D14 and D15) and DRAWER FRONT (N).

3

Be sure the DRAWER BOTTOM inserts into the DRAWER BACK groove.

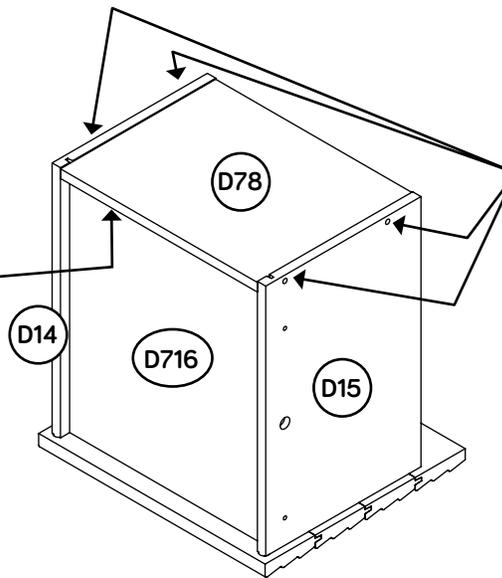

Start each screw a few turns before completely tightening any of them.


BLACK 1-9/16" FLAT HEAD SCREW
(4 used in this step)

✚ Fasten the DRAWER BACK (D78) to the DRAWER SIDES (D14 and D15). Use four BLACK 1-9/16" FLAT HEAD SCREWS (30S).

✚ **NOTE:** Be sure the DRAWER BOTTOM (D716) inserts into the groove of the DRAWER BACK (D78).

Step 21

- ✚ Insert a SLIDE CAM (10A) into the DRAWER SIDES (D14 and D15).
- ✚ Fasten the EXTENSION SLIDES (35MC) to the DRAWER SIDES (D14 and D15). Use four GOLD 5/16" FLAT HEAD SCREWS (3S) through holes #1 and #3.
- ✚ NOTE: The screw head in the CAM must be visible through the slotted hole in the SLIDE.
- ✚ Fasten the PULL (189K) to the DRAWER FRONT (N). Use two BLACK 9/16" LARGE HEAD SCREWS (1S).

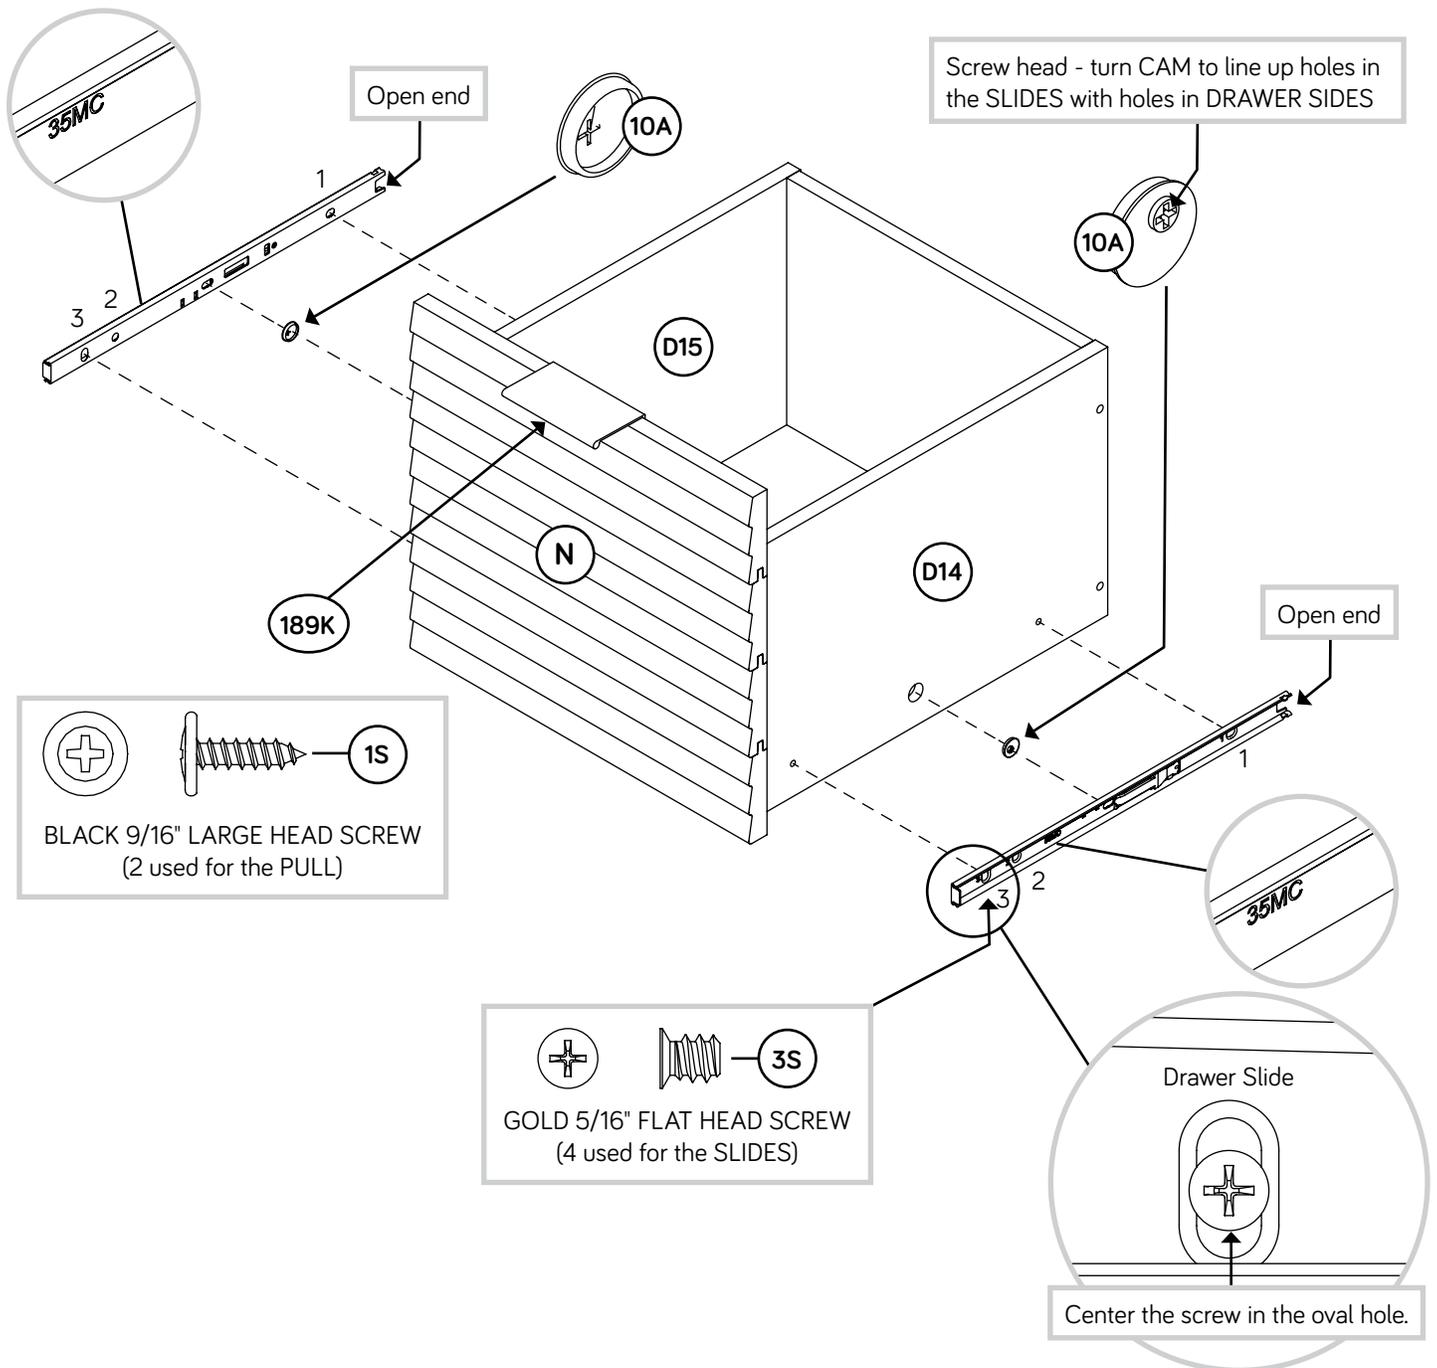


Step 22

- ✚ Push a FILE GLIDE (4B) onto the RIGHT DRAWER SIDE (D14).
- ✚ Slide the FILE RODS (8B) into the FILE GLIDE (4B) on the RIGHT DRAWER SIDE (D14).
- ✚ Slide another FILE GLIDE (4B) onto the other end of the FILE RODS (8B), then press this FILE GLIDE over the LEFT DRAWER SIDE (D15).




Almost time to celebrate! With a nap.

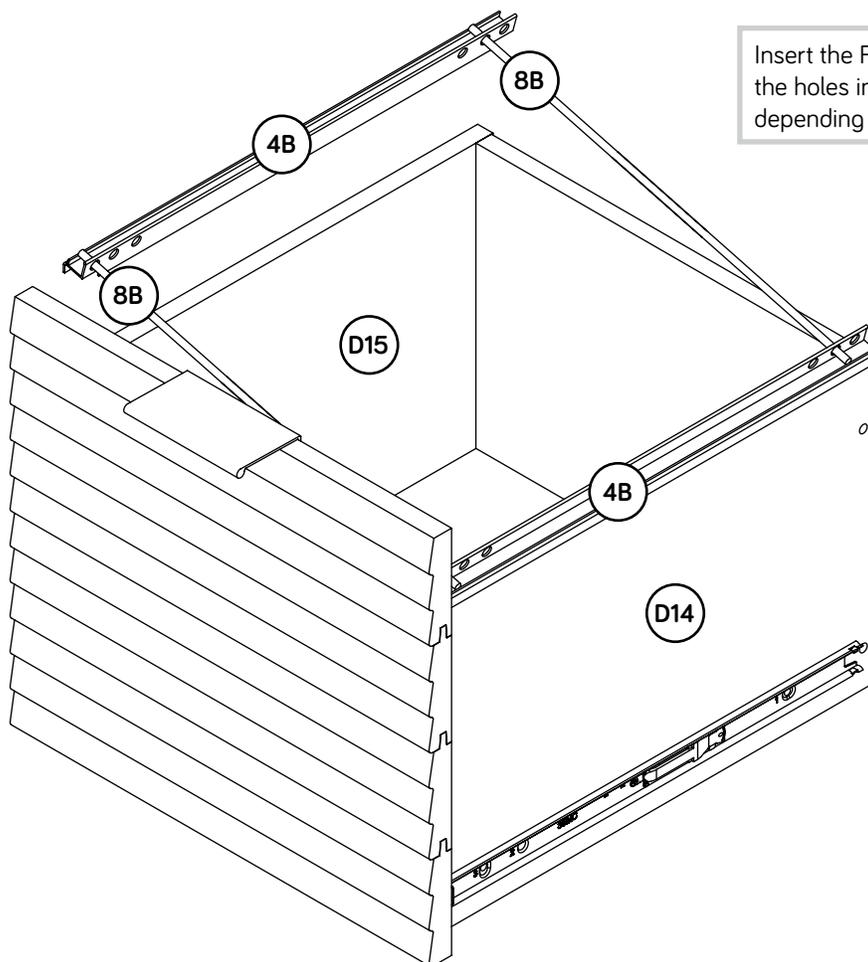

Insert the FILE RODS into the holes in the FILE GLIDES depending on your file sizes.


Step 23

- ✚ Push the RUBBER SLEEVES (2R) over one end of the SHELF RESTS (10R). Insert the SHELF RESTS into the hole locations of your choice in the RIGHT END (A) and UPRIGHT (Q). Set the ADJUSTABLE SHELF (H) onto the SHELF RESTS.
- ✚ To insert the drawer into your unit, line up the EXTENSION SLIDES on the drawer with the EXTENSION RAILS on the unit and push the drawer into the unit until the drawer is fully inserted. The drawer will push in hard until it is all the way in, then it will slide in and out easier.

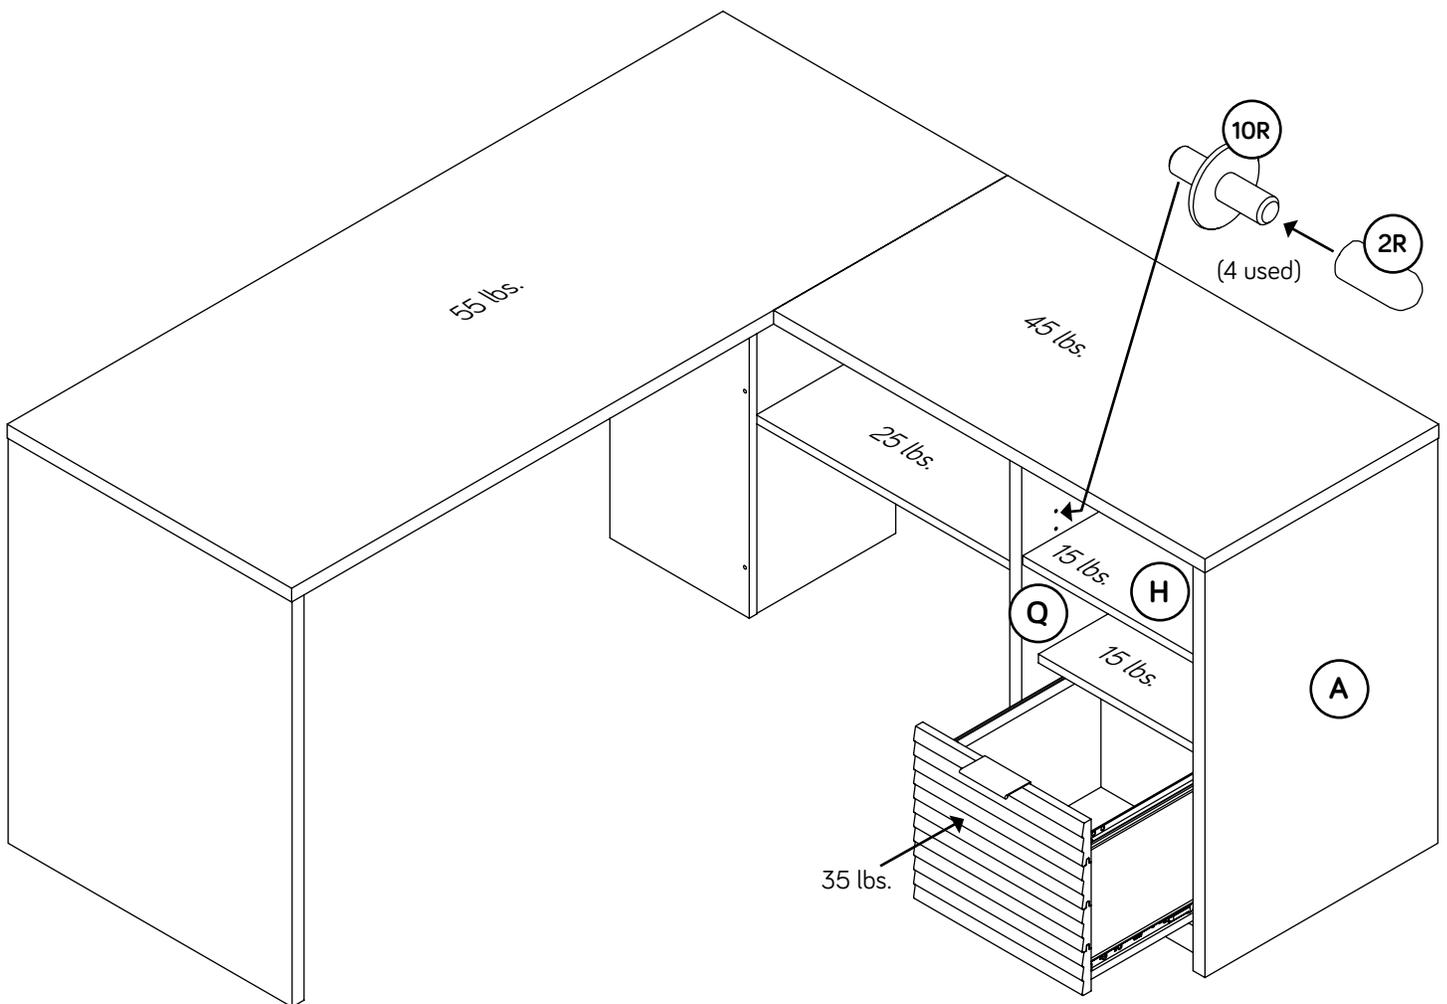

Step 24

- ✚ To make adjustments to the drawer, loosen SCREW #3 in the SLIDES a 1/4 turn, then turn the cam clockwise or counter-clockwise. Notice how the drawer raises or lowers as you turn the cam. By adjusting the drawer this way, it will help the DRAWER FRONT line up better when closed. Tighten the SCREWS when finished with adjustments.
- ✚ NOTE: Please read the back pages of the instruction booklet for important safety information.
- ✚ This completes assembly. Clean with a damp cloth. Wipe dry.

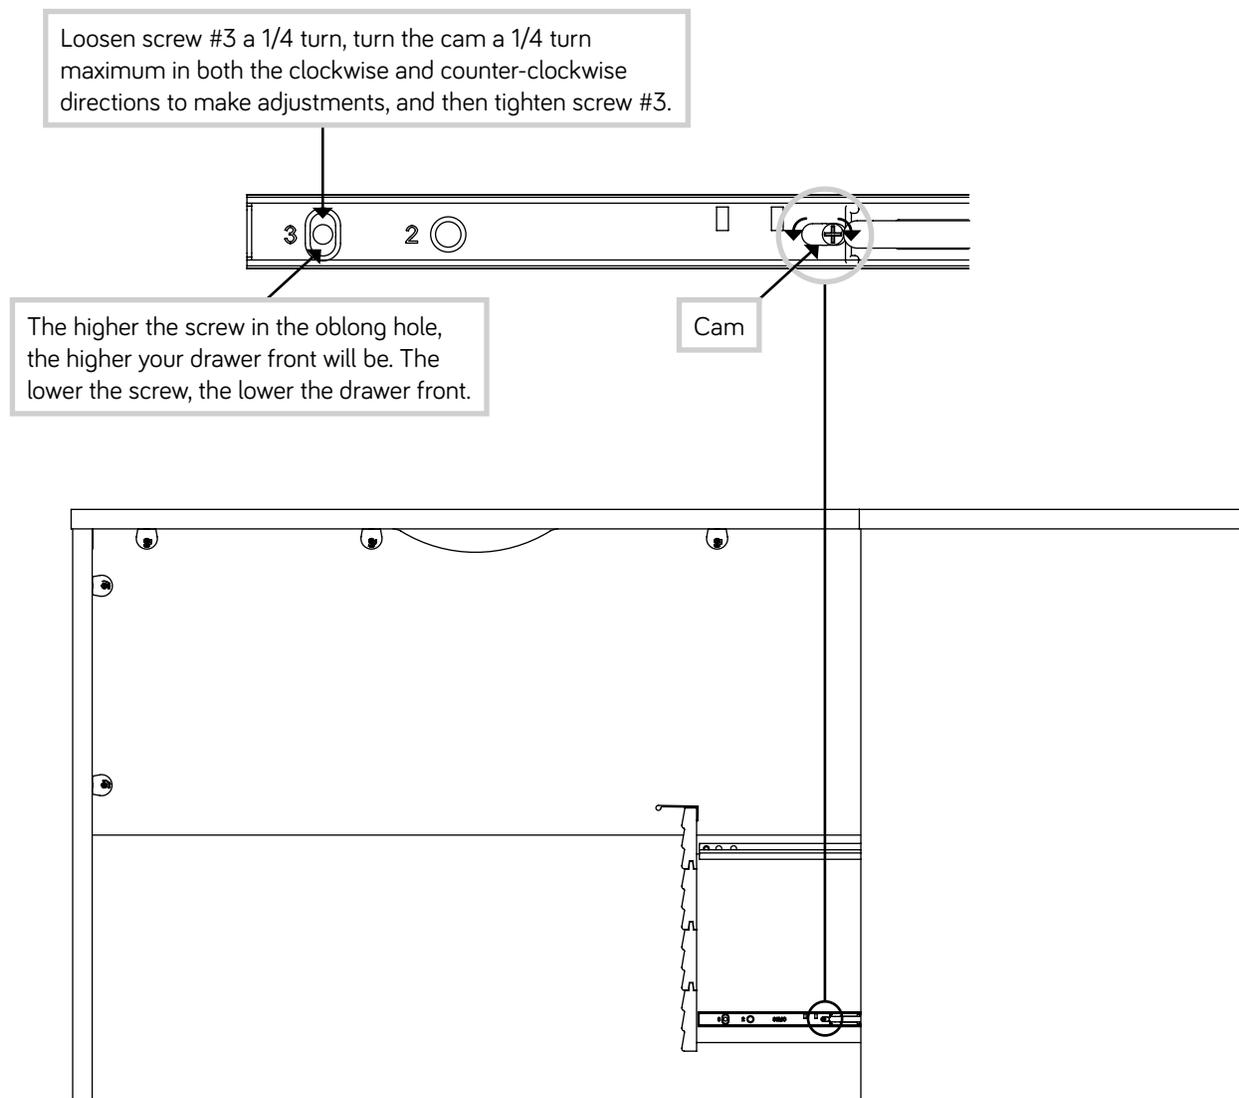

⚠ WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. **Carefully read the following chart.**

Look out for:	What can happen:	How to avoid the problem:
<ul style="list-style-type: none">• Overloaded shelves or drawers.• Improper loading can cause the product to be top-heavy.	<ul style="list-style-type: none">• Risk of injury.• Top-heavy furniture can tip over.• Overloaded shelves and drawers can break.	<ul style="list-style-type: none">• Never exceed the weight limits shown in the instructions.• Work from bottom to top when loading shelves and drawers. Place the heavier items on the lower shelves or in lower drawers.
<ul style="list-style-type: none">• Improperly moving furniture that is not designed and equipped with casters.	<ul style="list-style-type: none">• Furniture can tip over or break if improperly moved.• Physical injury. Furniture can be very heavy.• Breakage of tops - particularly with double pedestal furniture (drawers at both ends).	<ul style="list-style-type: none">• Unload shelves and drawers from top to bottom before moving the unit.• Do not push furniture, especially on a carpeted floor. Have a friend help you lift the item and set it in place.• Provide support to the center section of the top when lifting the furniture.
<ul style="list-style-type: none">• Placing TVs on furniture items that are not designed to support a television is hazardous.	<ul style="list-style-type: none">• Risk of injury or death. TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward.	<ul style="list-style-type: none">• This product is not designed to support a television.