
www.teknikoffice.co.uk

### Teknik

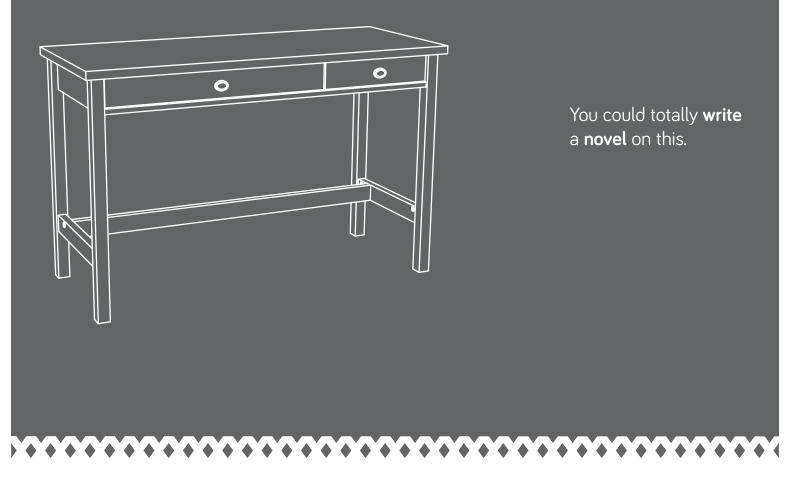

# Study Desk


5418213 Salt Oak 5418227 Rum Walnut

NOTE: THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

#### Table of Contents

#### Assembly Tools Required

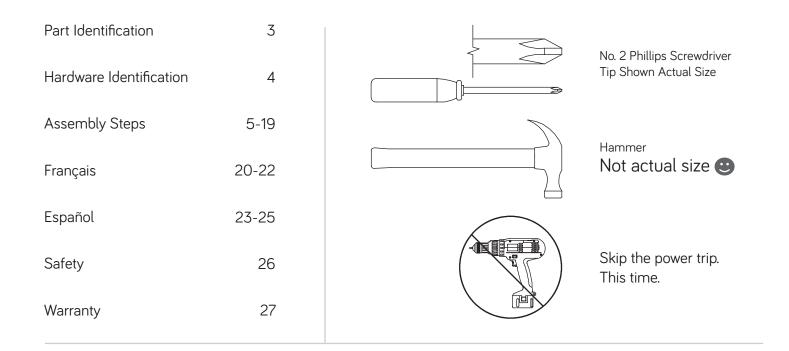


#### Part Identification



While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

А	RIGHT END (1)	D440	SMALL DRAWER BACK (1)	Ι	RIGHT REAR LEG (1)
В	LEFT END (1)	D441	SMALL DRAWER BOX FRONT (1)	J	LEFT REAR LEG (1)
B32	SMALL DRAWER BOTTOM (1)	D478	LARGE DRAWER BOX FRONT (1)	К	STRETCHER (1)
B33	LARGE DRAWER BOTTOM (1)	D479	LARGE DRAWER BACK (1)	L	RIGHT SKIRT (1)
С	UPRIGHT (1)	Е	BACK (1)	М	LEFT SKIRT (1)
D	TOP (1)	F	BRACE (1)	Ν	LARGE DRAWER FRONT (1)
D266	DRAWER RIGHT SIDE (2)	G	RIGHT FRONT LEG (1)	0	SMALL DRAWER FRONT (1)
D267	DRAWER LEFT SIDE (2)	Н	LEFT FRONT LEG (1)	Р	DRAWER BRACE (1)

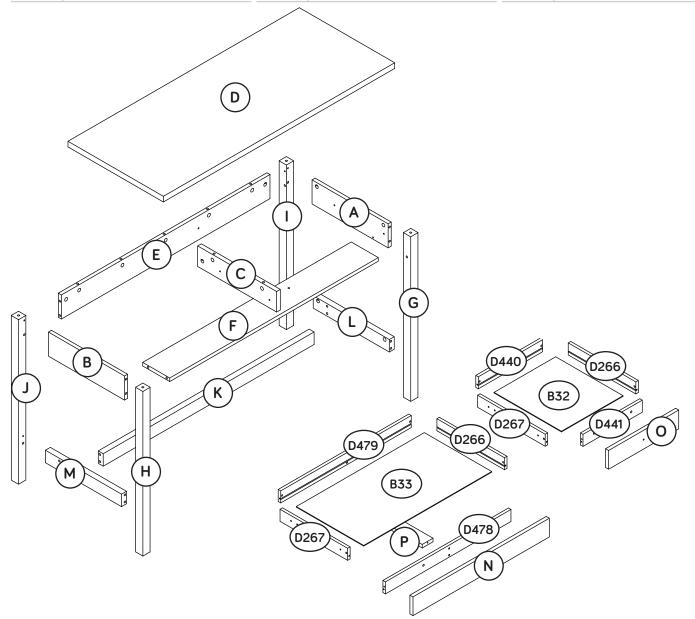


#### Hardware Identification


F Screws are shown actual size. You may receive extra hardware with your unit.




• •

- Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- Push twenty HIDDEN CAMS (1F) into the ENDS (A and B) UPRIGHT (C), BACK (E), BRACE (F), and SKIRTS (L and M).

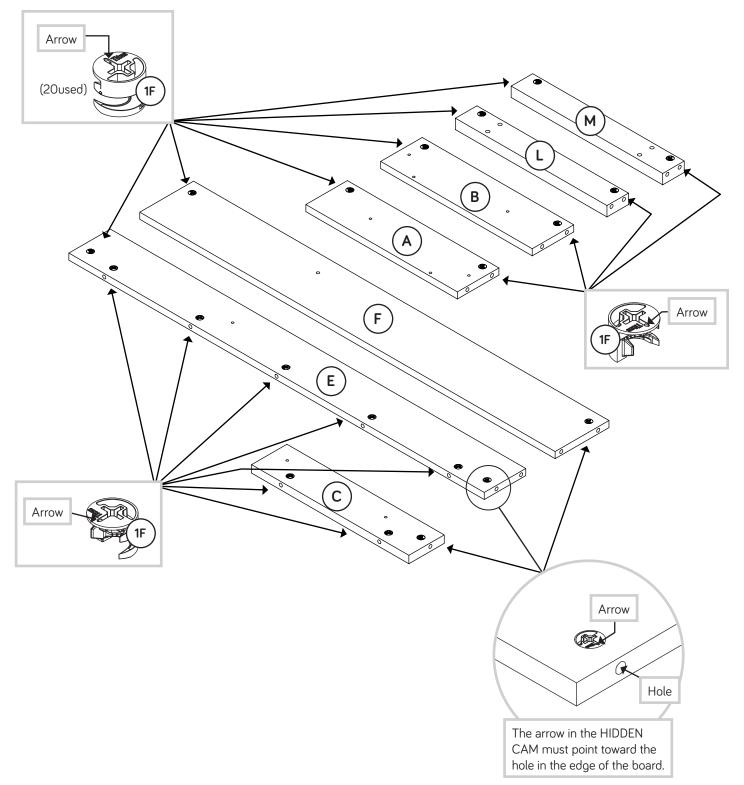

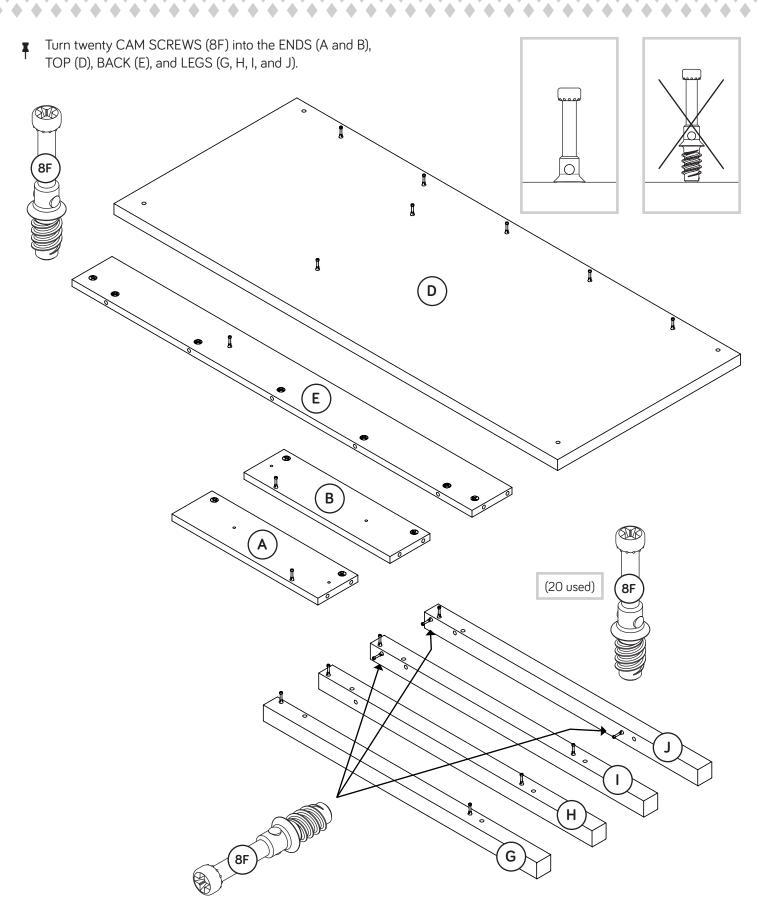


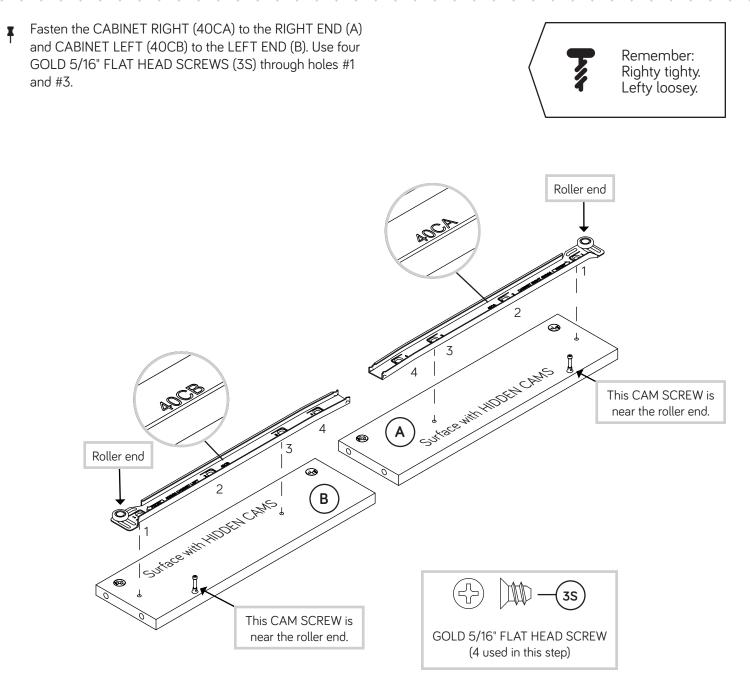


- First, fill the holes in the RIGHT FRONT LEG (G) 1/4 to 1/2 full with GLUE (54M). Then, insert the WOOD DOWELS (15F) into the holes. Wipe away the excess GLUE.
- Now, fill the holes in the RIGHT END (A) and RIGHT SKIRT (L), 1/4 to 1/2 full with GLUE. Then, insert the WOOD DOWELS in the LEG into these holes. Tighten the HIDDEN CAMS in the RIGHT END and RIGHT SKIRT. Wipe away the excess GLUE.
- Repeat this step gluing and fastening the LEFT FRONT LEG (H) to the LEFT END (B) and LEFT SKIRT (M) as shown in the lower diagram.




Fill the holes 1/4 to 1/2 full with GLUE.

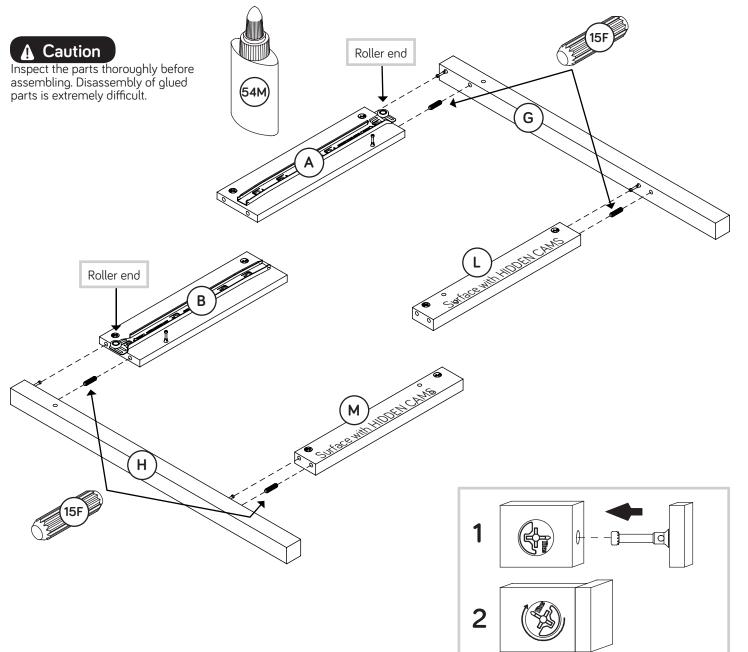


- First, fill the holes in the RIGHT REAR LEG (I) 1/4 to 1/2 full with GLUE (54M). Then, insert the WOOD DOWELS (15F) into the holes. Wipe away the excess GLUE.
- Now, fill the holes in the RIGHT END (A) and RIGHT SKIRT (L), 1/4 to 1/2 full with GLUE. Then, insert the WOOD DOWELS in the LEG into these holes. Tighten the HIDDEN CAMS in the RIGHT END and RIGHT SKIRT. Wipe away the excess GLUE.
- Repeat this step gluing and fastening the LEFT REAR LEG (J) to the LEFT END (B) and LEFT SKIRT (M) as shown in the lower diagram.

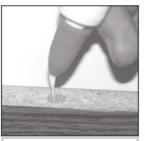


Fill the holes 1/4 to 1/2 full with GLUE.

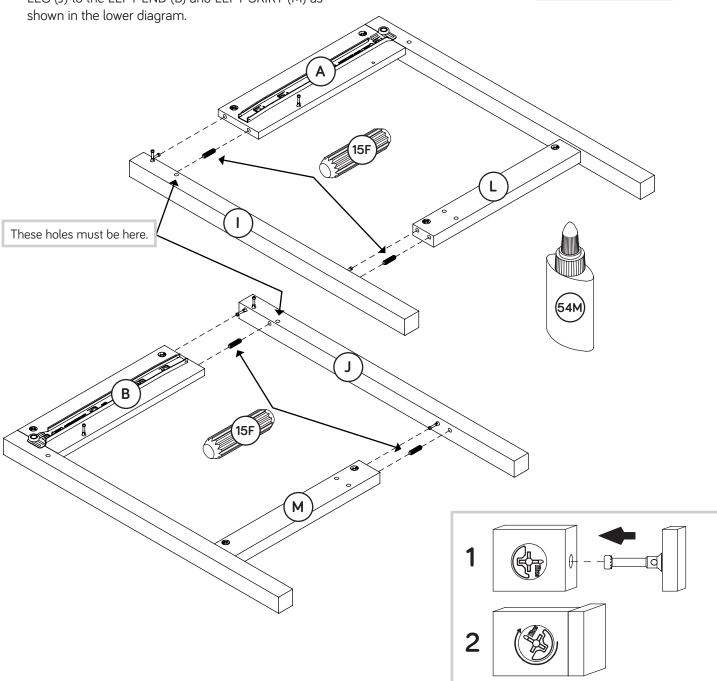


Ţ

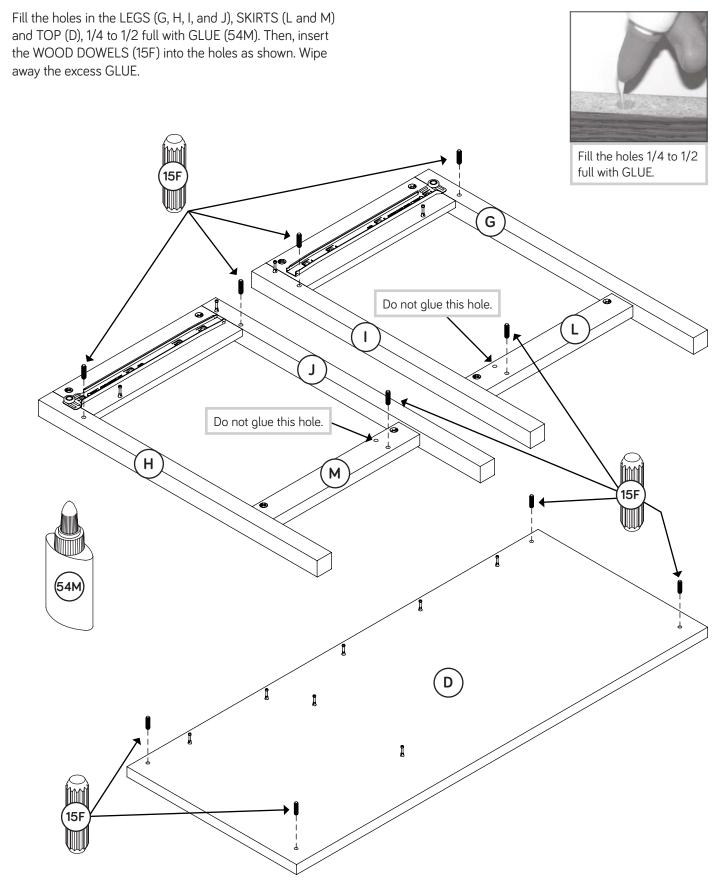

- First, fill the hole in one end of the BACK (E) and BRACE (F), 1/4 to 1/2 full with GLUE (54M). Then, insert the WOOD DOWELS and CAM SCREWS in the RIGHT END (A) assembly into the holes with GLUE. Tighten two HIDDEN CAMS and wipe away the excess GLUE.
- Repeat this step gluing and tightening the HIDDEN CAMS to the LEFT END (B) assembly.

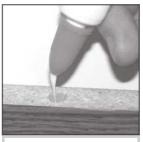


Fill the holes 1/4 to 1/2 full with GLUE.

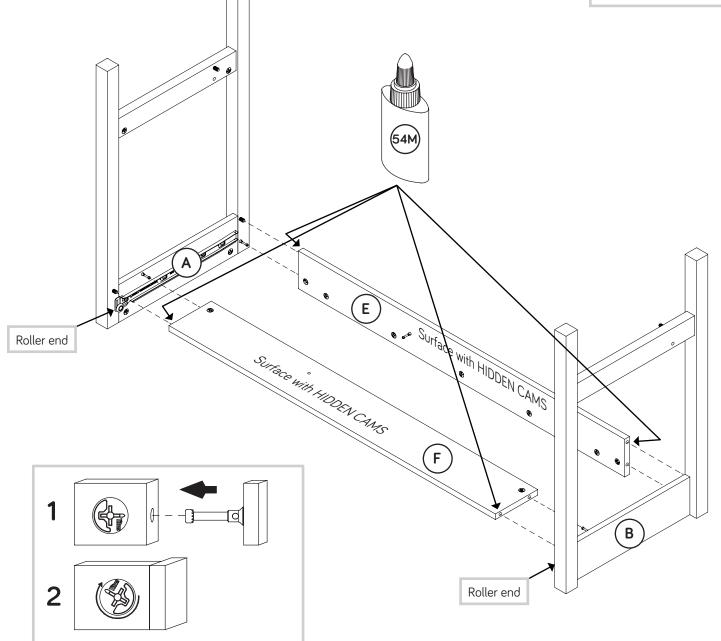

- Fasten the UPRIGHT (C) to the BACK (E). Tighten the HIDDEN CAM.
- Fasten the UPRIGHT (C) to the BRACE (F). Use a BLACK 1-7/8" FLAT HEAD SCREW (2S).




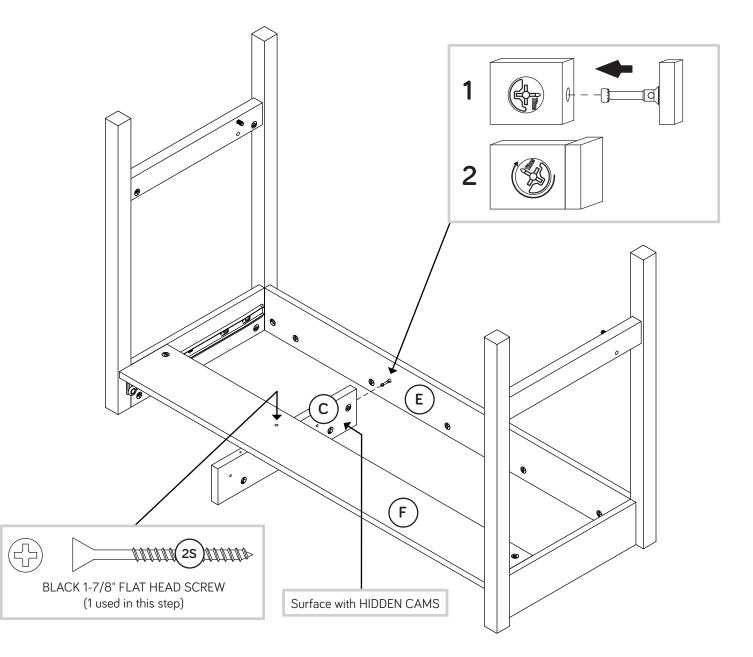


- Push two CROSS-SLOTTED DOWELS (24F) into the STRETCHER (K) as shown in the upper diagram.
- NOTE: The threads in the DOWEL should be pointed toward the hole in edge of the STRETCHER.
- Next, fill the holes in the short edge of the STRETCHER (K), 1/4 to 1/2 full with GLUE (54M).
- Fasten the STRETCHER (K) to the SKIRTS (L and M). Use two BLACK 2-3/8" FLAT HEAD BOLTS (103S). Wipe away the excess GLUE.
- NOTE: Be sure the WOOD DOWELS in the SKIRTS insert into the holes in the STRETCHER. Wipe away the excess glue.




Fill the holes 1/4 to 1/2 full with GLUE.

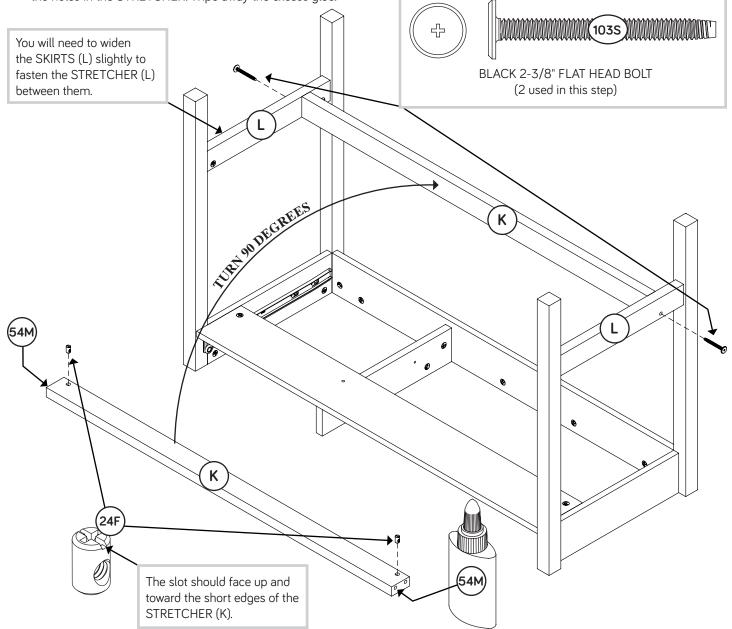

- Carefully stand your unit upright.
- Fasten the CABINET RIGHT (40CA) and CABINET LEFT (40CB) to the UPRIGHT (C). Use four GOLD 5/16" FLAT HEAD SCREWS (3S) through holes #1 and #3.

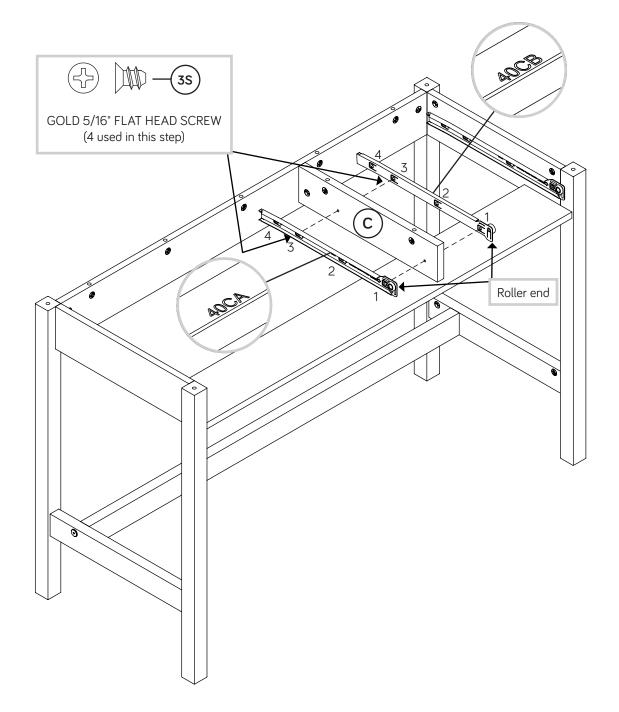

Fill the holes in the LEGS (G, H, I, and J), 1/4 to 1/2 full with Ŧ GLUE (54M). Fasten the TOP (D) to the UPRIGHT (C), BACK (E) and Ţ LEGS (G, H, I, and J). Tighten seven HIDDEN CAMS. Wipe away the excess glue. Fill the holes 1/4 to 1/2full with GLUE. D (54M) С E ۲ G \$ (54M) Η Ò 1 ( ŀ C 2

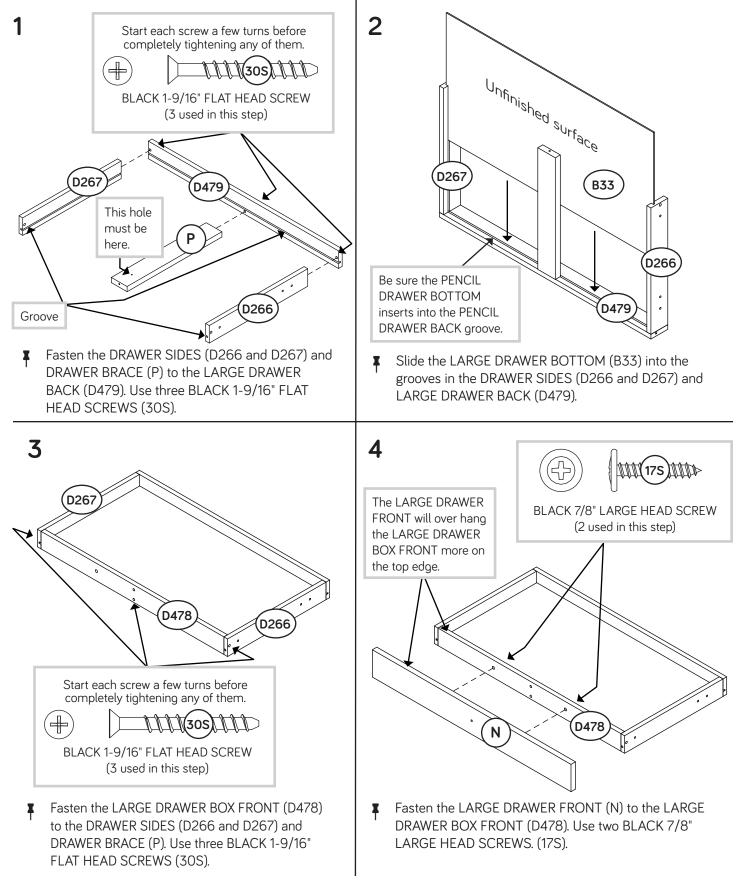

3

D267

D441

╋

1 Start each screw a few turns before completely tightening any of them.

BLACK 1-9/16" FLAT HEAD SCREW (2 used in this step)

Fasten the DRAWER SIDES (D266 and D267) to the SMALL DRAWER BACK (D440). Use two BLACK 1-9/16" FLAT HEAD SCREWS (30S).

D266

- Unfinished surface **B**32 D267 (D266 D440 Be sure the PENCIL DRAWER BOTTOM inserts into the PENCIL DRAWER BACK groove. Slide the SMALL DRAWER BOTTOM (B32) into the Ţ grooves in the DRAWER SIDES (D266 and D267) and SMALL DRAWER BACK (D440). 4 л Г BLACK 7/8" LARGE HEAD SCREW The SMALL DRAWER (2 used in this step) FRONT will over hang the SMALL DRAWER BOX FRONT. D441
- (2 used in this step) Fasten the SMALL DRAWER BOX FRONT (D441) to the DRAWER SIDES (D266 and D267). Use two

Start each screw a few turns before

completely tightening any of them.

BLACK 1-9/16" FLAT HEAD SCREW

BLACK 1-9/16" FLAT HEAD SCREWS (30S).

(30S)

Fasten the SMALL DRAWER FRONT (O) to the SMALL DRAWER BOX FRONT (D441). Use two BLACK 7/8" LARGE HEAD SCREWS. (17S).


n

- Fasten the DRAWER RIGHT (40CC) and DRAWER LEFT (40CD) to the DRAWER SIDES (D266 and D267). Use four GOLD 5/16" FLAT HEAD SCREWS (3S) through holes #2 and #4.
- Fasten a KNOB (69K) to the DRAWER FRONT (N). Use a SILVER 1-1/2" MACHINE SCREW (95S).




If you're doing this to help a friend, don't leave without a bite.

**Repeat this step for the small drawer.** 

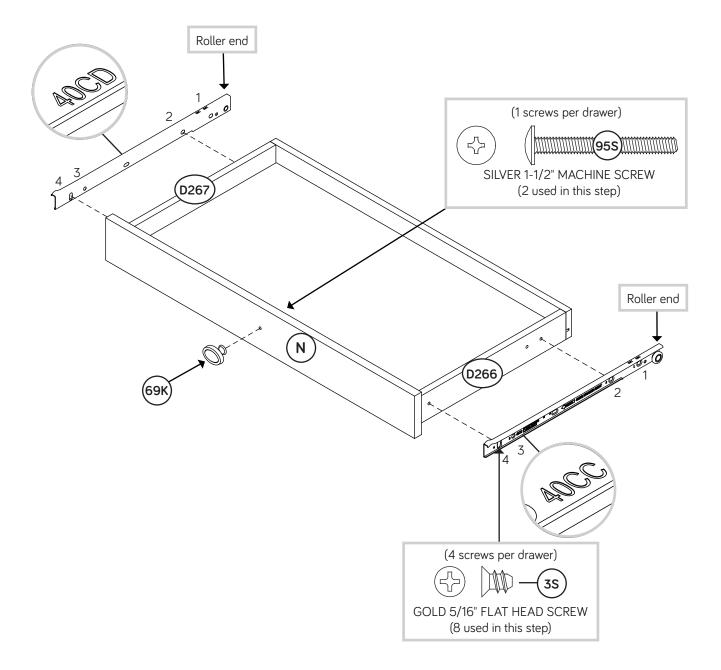

- Push a CAM COVER (13P) onto each HIDDEN CAM.
- To insert the drawers into your unit, tip the front of the drawers down and drop the rollers on the drawers behind the rollers on the unit. Lift the front of the drawers up and slide them into the unit.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with your favorite furniture polish or a damp cloth. Wipe dry.

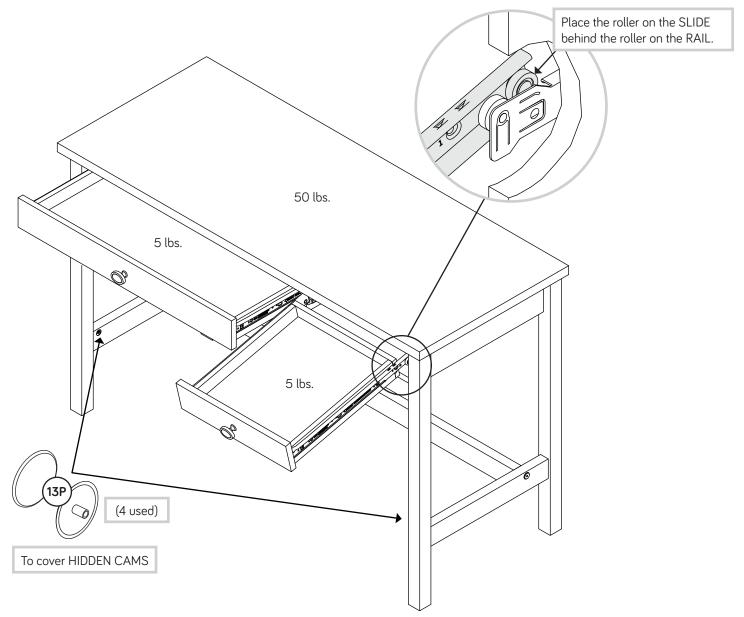

WARNING Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. <i>Carefully read the following chart.</i>						
Look out for:	What can happen:	How to avoid the problem:				
<ul> <li>Overloaded shelves and drawers.</li> <li>Improper loading can cause the product to be top-heavy.</li> </ul>	<ul> <li>Risk of injury.</li> <li>Top-heavy furniture can tip over.</li> <li>Overloaded shelves and drawers can break.</li> </ul>	<ul> <li>Never exceed the weight limits shown in the instructions.</li> <li>Work from bottom to top when loading shelves and drawers. Place the heavier items on the lower shelves or in lower drawers.</li> </ul>				
• Improperly moving furniture that is not designed and equipped with casters.	<ul> <li>Furniture can tip over or break if improperly moved.</li> <li>Physical injury. Furniture can be very heavy.</li> <li>Breakage of tops - particularly with double pedestal furniture (drawers at both ends).</li> </ul>	<ul> <li>Unload shelves and drawers from top to bottom before moving the unit.</li> <li>Do not push furniture, especially on a carpeted floor. Have a friend help you lift the item and set it in place.</li> <li>Provide support to the center section of the top when lifting the furniture.</li> </ul>				
<ul> <li>Placing TVs on furniture items that are not designed to support a television is hazardous.</li> </ul>	• Risk of injury or death. TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward.	• This product is not designed to support a television.				