


TIMBER ART DESIGN UK

BR990196

ASSEMBLY INSTRUCTIONS

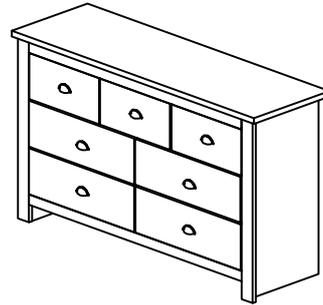


IMPORTANT


PLEASE READ BEFORE YOU CONTINUE FURTHER

WARNING AND INSTRUCTIONS

- **PLEASE KEEP THE ORIGINAL PACKAGING UNTIL THE ITEM IS FULLY ASSEMBLED AND IN PLACE. IN THE UNLIKELY EVENT THAT YOU NEED TO RETURN YOUR PRODUCT, IT MUST BE RETURNED IN ITS ORIGINAL PACKAGING TO AVOID FURTHER DAMAGE. FAILURE TO COMPLY TO THESE PROCEDURES, NO RETURN'S WILL BE ACCEPTED.**
- **IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.**
- **DUE TO THE SIZE OF THIS PRODUCT WE RECOMMEND THAT IT IS ASSEMBLED IN THE ROOM INTENDED FOR USE.**
- **WHEN YOU ARE READY TO START, MAKE SURE THAT YOU HAVE THE RIGHT TOOLS, PLENTY OF SPACE AND A CLEAN, DRY AREA FOR ASSEMBLY.**
- **UNWRAP ALL PACKAGING MATERIALS AND PLACE THE COMPONENTS ON TOP OF THE CARTON BOX OR ON A CLEAN FLOOR TO PREVENT IT FROM SCRATCHING.**
- **CHECK THE PACK AND MAKE SURE YOU HAVE ALL THE PARTS LISTED.**
- **ENSURE THAT THIS PRODUCT IS FULLY ASSEMBLED AS ILLUSTRATED BEFORE USE.**
- **TOOLS NOT INCLUDED.**
- **CHECK ALL SCREWS OR BOLTS ARE TIGHTENED AND INSPECT REGULARLY.**
- **THIS PRODUCT SHOULD ONLY BE USED ON FIRM LEVEL GROUND.**
- **KEEP SMALL PART OUT OF REACH OF CHILDREN.**
- **MAKE SURE THE LEGS REMAIN IN CONTACT WITH THE GROUND.**
- **DO NOT USE POWER TOOLS TO CONSTRUCT THIS PRODUCT.**
- **DO NOT TIGHTENED SCREWS UNTIL FULLY ASSEMBLED.**
- **DO NOT OVER TIGHTENED SCREWS OR BOLTS.**
- **DO NOT USE THIS PRODUCT IF PARTS ARE MISSING, DAMAGE OR WORN.**
- **DO NOT SIT AND STAND ON THE PRODUCT.**
- **TO CLEAN WIPE WITH A SPONGE AND WARM SOAPY WATER. DO NOT USE SOLVENT BASED CLEANERS OR DETERGENTS AS THEY CAN BLEACH OR DAMAGE THE PRODUCT.**
- **NEVER USE SCOURERS, ABRASIVES OR CHEMICAL CLEANERS.**

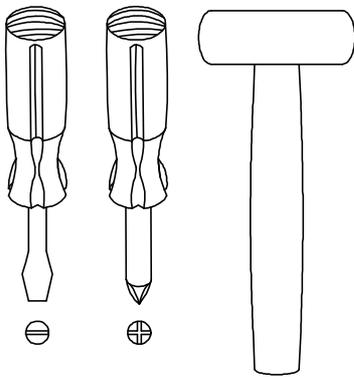


(Tools not provided)

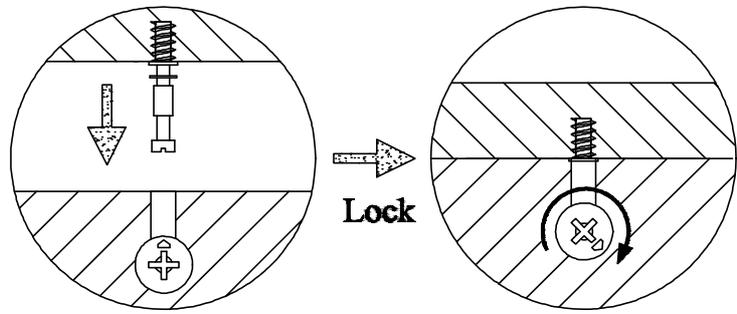

Use a flat blade screwdriver to tighten the cam nuts. A quarter turn clockwise is all that is needed.


This is how a cam nut works.....

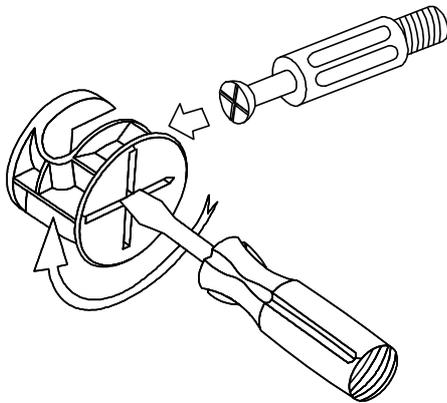

The head of the cam bolt goes into the open mouth of the cam nut. You then turn the cam nut so it tightens over the bolt.

TWO PERSONS REQUIRED TO ASSEMBLE THIS PRODUCT

- 1. Please check that you have all the parts listed before you start assembling. If you do find that something is missing, do not continue assembly. Please contact your supplier immediately.**
- 2. Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.**
- 3. Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.**

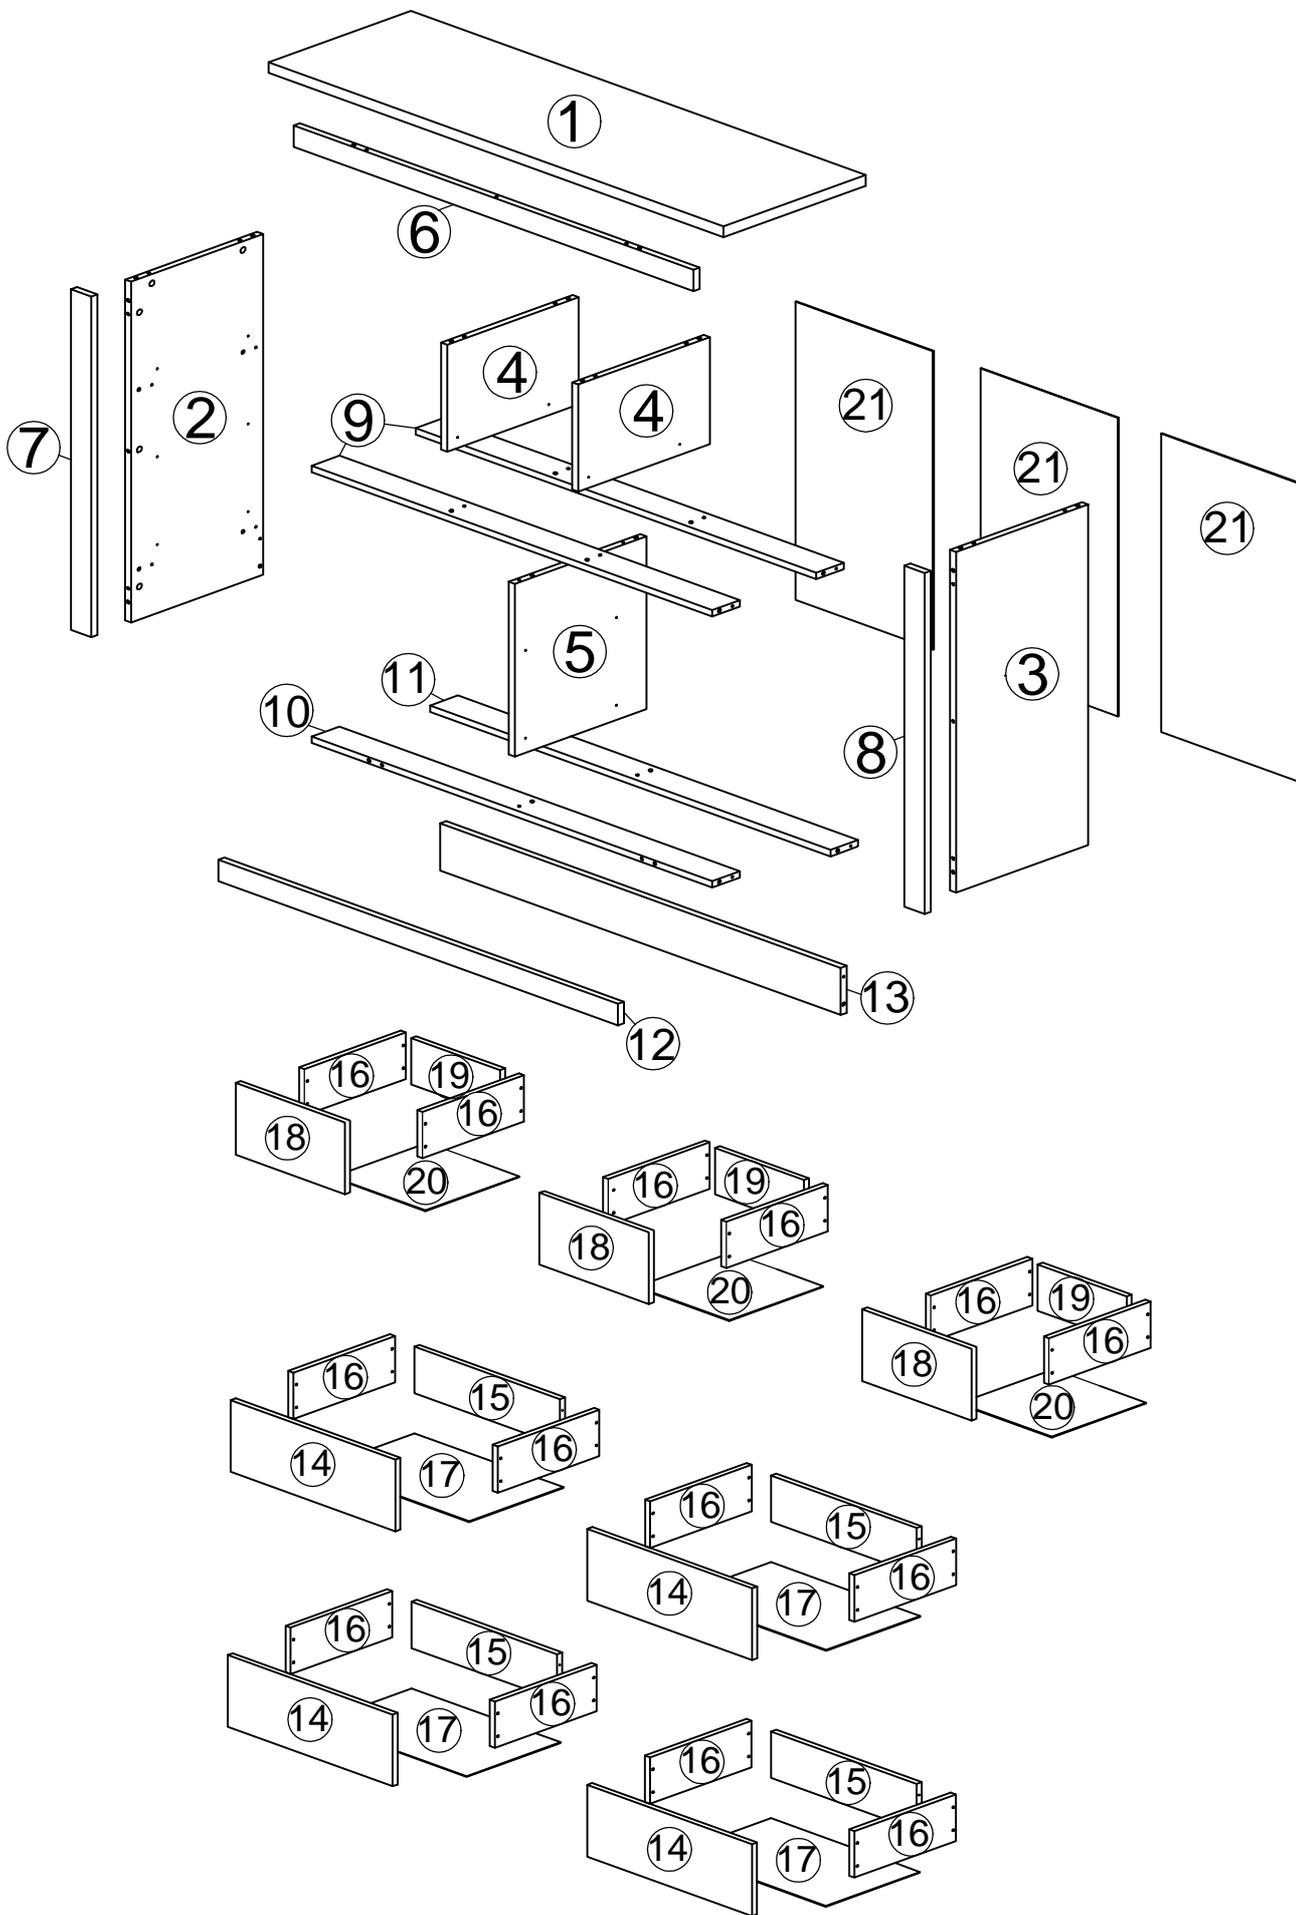

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.



PARTS LIST

NO.	PARTS					QTY
1	1120	X	350	X	25	1 PC
2	795	X	325	X	15	1 PC
3	795	X	325	X	15	1 PC
4	250	X	324	X	15	2 PCS
5	403	X	324	X	15	1 PC
6	984	X	50	X	15	1 PC
7	795	X	50	X	15	1 PC
8	795	X	50	X	15	1 PC
9	986	X	68	X	15	2 PCS
10	986	X	68	X	15	1 PC
11	986	X	68	X	15	1 PC
12	984	X	50	X	15	1 PC
13	986	X	110	X	15	1 PC
14	487	X	201	X	15	4 PCS
15	430	X	130	X	15	8 PCS
16	300	X	130	X	15	14 PCS
17	278	X	440	X	2.5	4 PCS
18	323	X	201	X	15	3 PCS
19	263	X	130	X	15	6 PCS
20	278	X	273	X	2.5	3 PCS
21	696	X	338	X	2.5	3 PCS

HARDWARE LIST


NO.	DESCRIPTION	QTY
A	 WOOD DOWEL M8 x 25MM	34
B	 CAM NUT	29
C	 CAM BOLT	29
D	 CAM CAP	29
E	 CB SCREW M3.5 X 16MM	70
F	 CB SCREW M4 x 38MM	56
G	 CSK CAP WOOD M6 x 60MM	8
H	 HANDLE HALFMOON 88407-64MM	7
I	 HANDLE SCREW M4 x 35MM	14
J	 ALLEY KEY M4	1
K	 PVC NAIL WITH PIN 5/8	4
L	 NAIL 5/8	62
M	 DRAWER SLIDE 12"	14
N	 DRAWER SLIDE 12"	14

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 1

A	 WOOD DOWEL M8 x 25MM	34
---	--	----

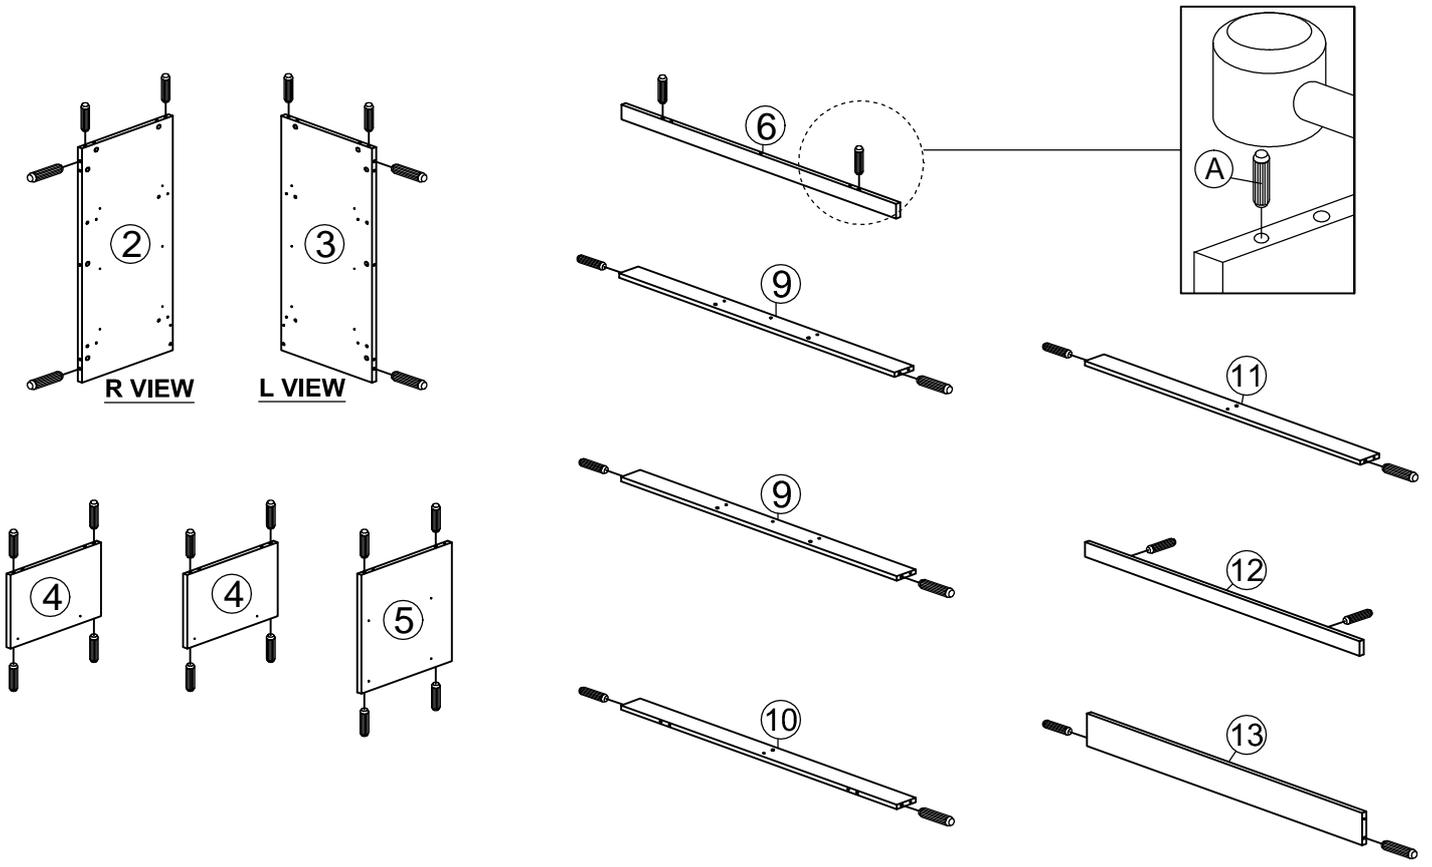

STEP 2

C	 CAM BOLT	29
---	--	----

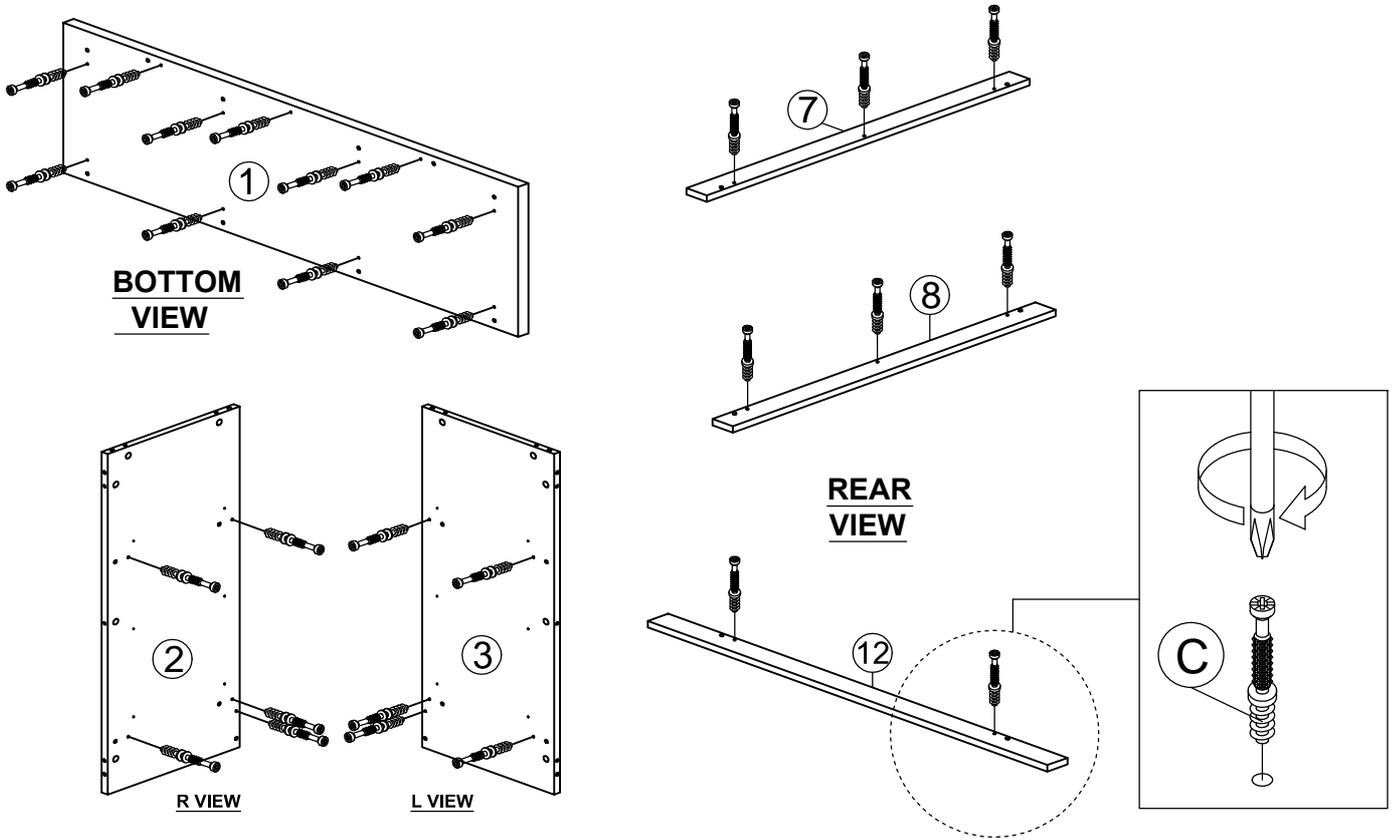


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 3

F		CB SCREW M4 X 38MM	56
L		NAIL 5/8	42

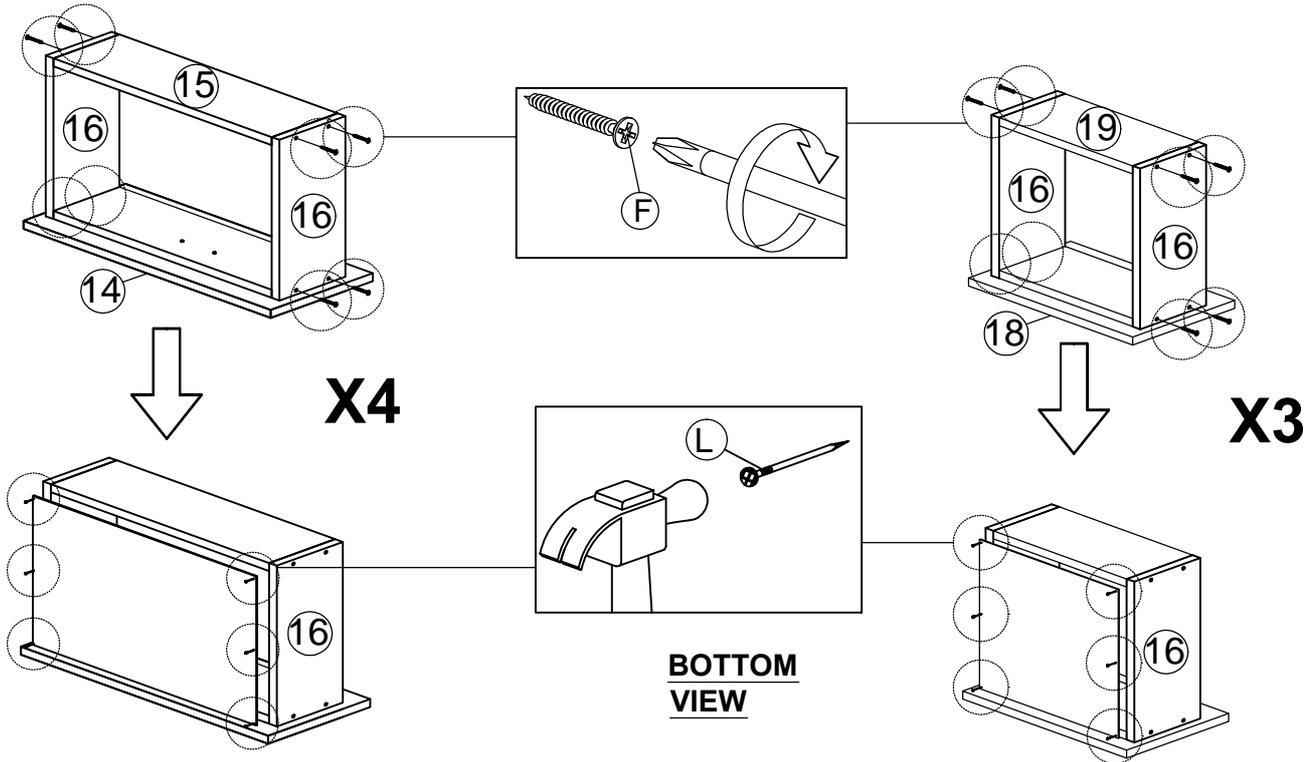

STEP 4

E		CB SCREW M3.5 X 16MM	42
M		DRAWER SLIDE 12"	14

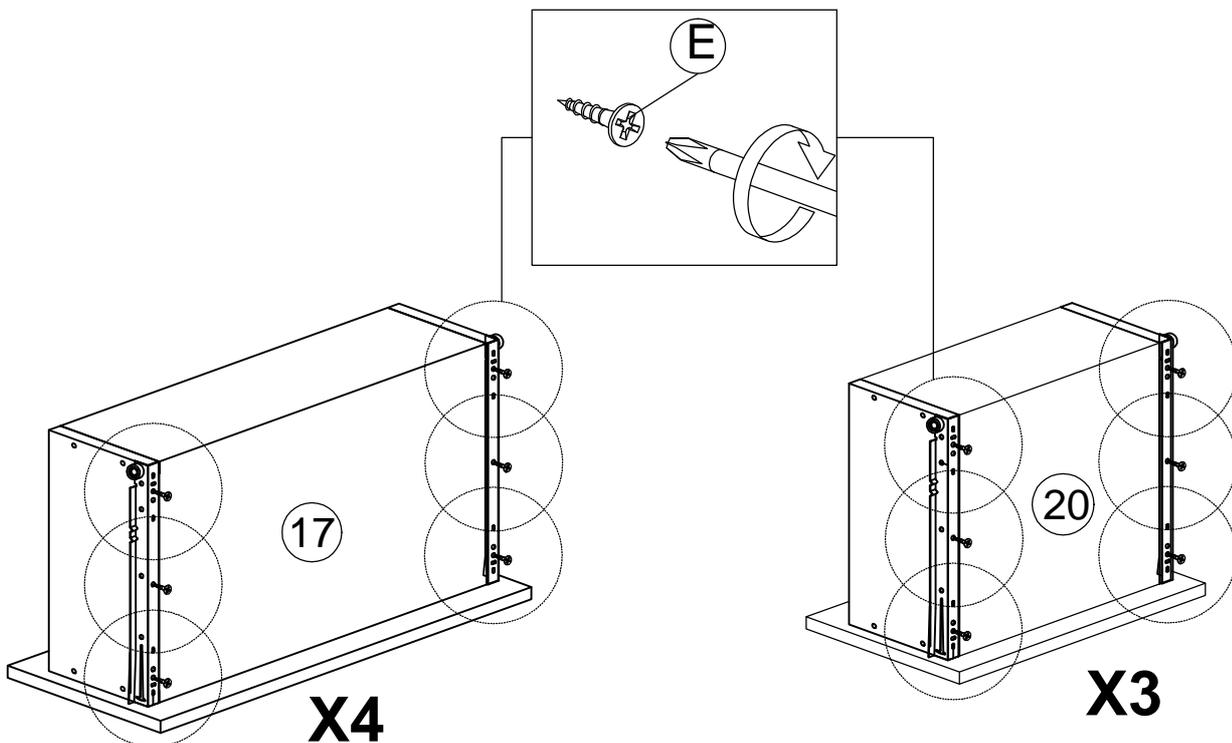


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 5

H		HANDLE HALFMOON 88407-64MM	7
I		HANDLE SCREW M4 X 35MM	14

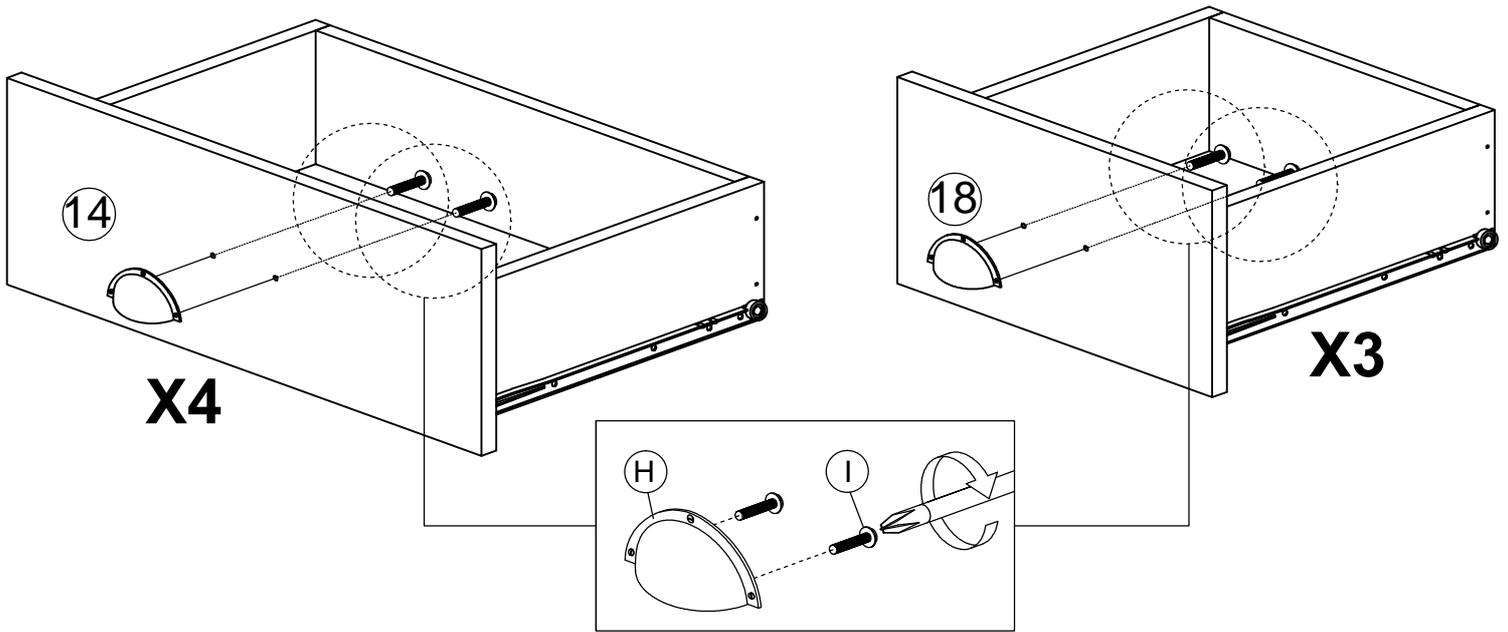

STEP 6

E		CB SCREW M3.5 x 16MM	28
N		DRAWER SLIDE 12	14

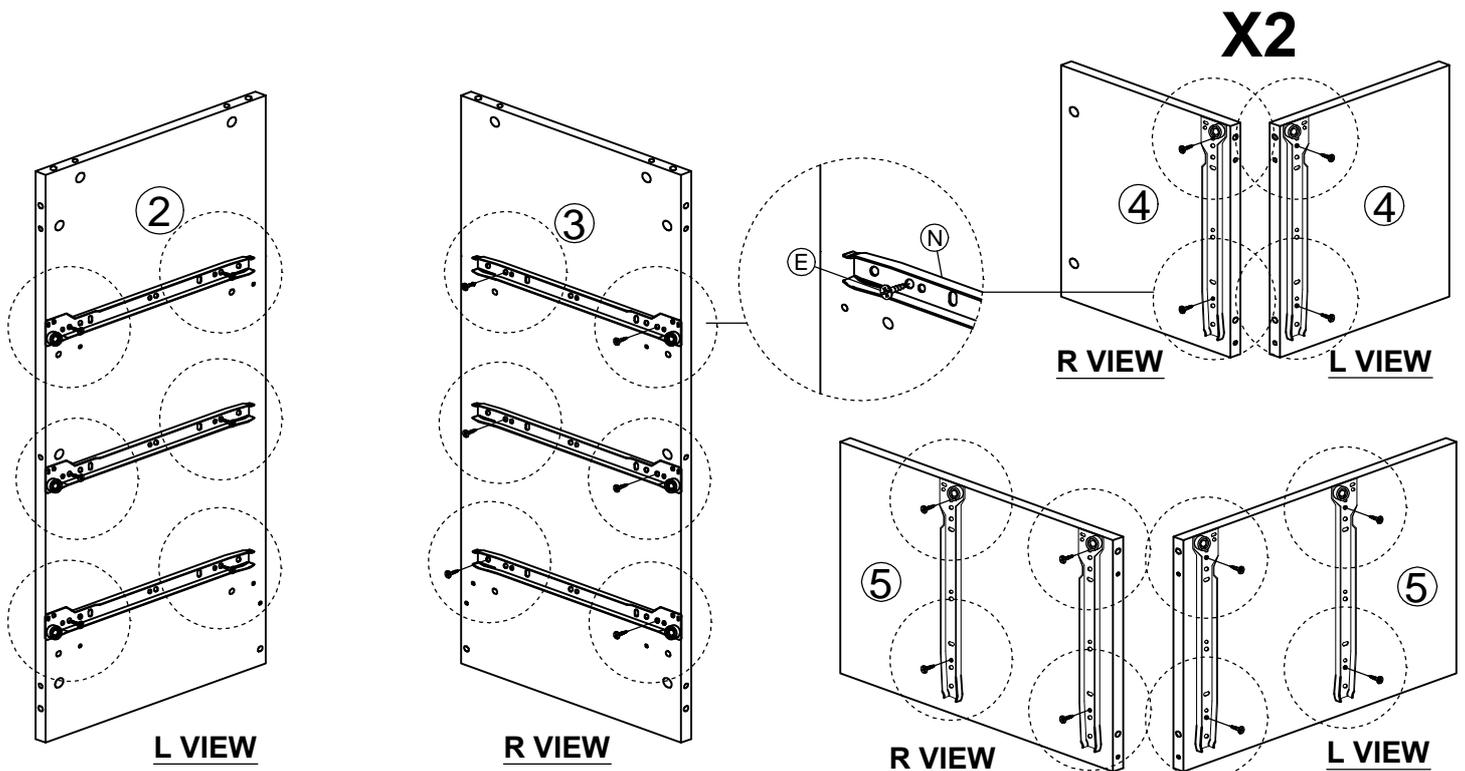


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 7

B		CAM NUT	6
D		CAM CAP	6
J		ALLEY KEY M4	1

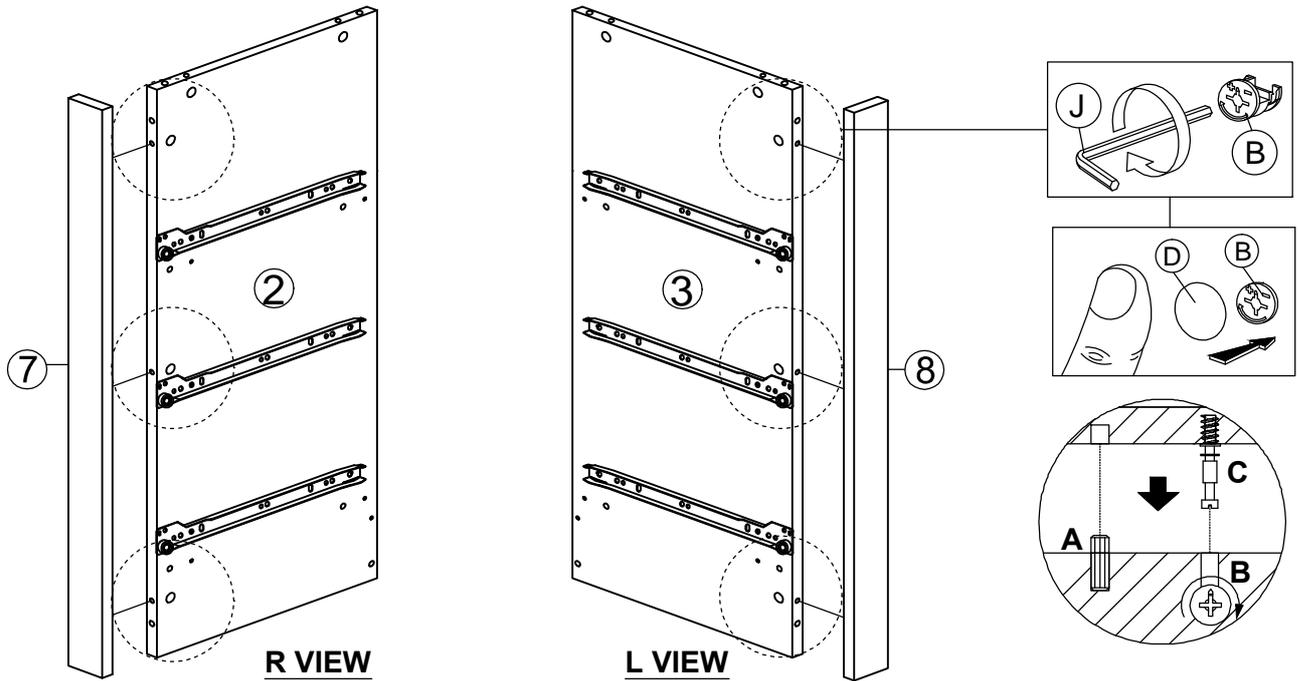

STEP 8

G		CSK CAP WOOD M6 X 60MM	4
J		ALLEY KEY M4	1

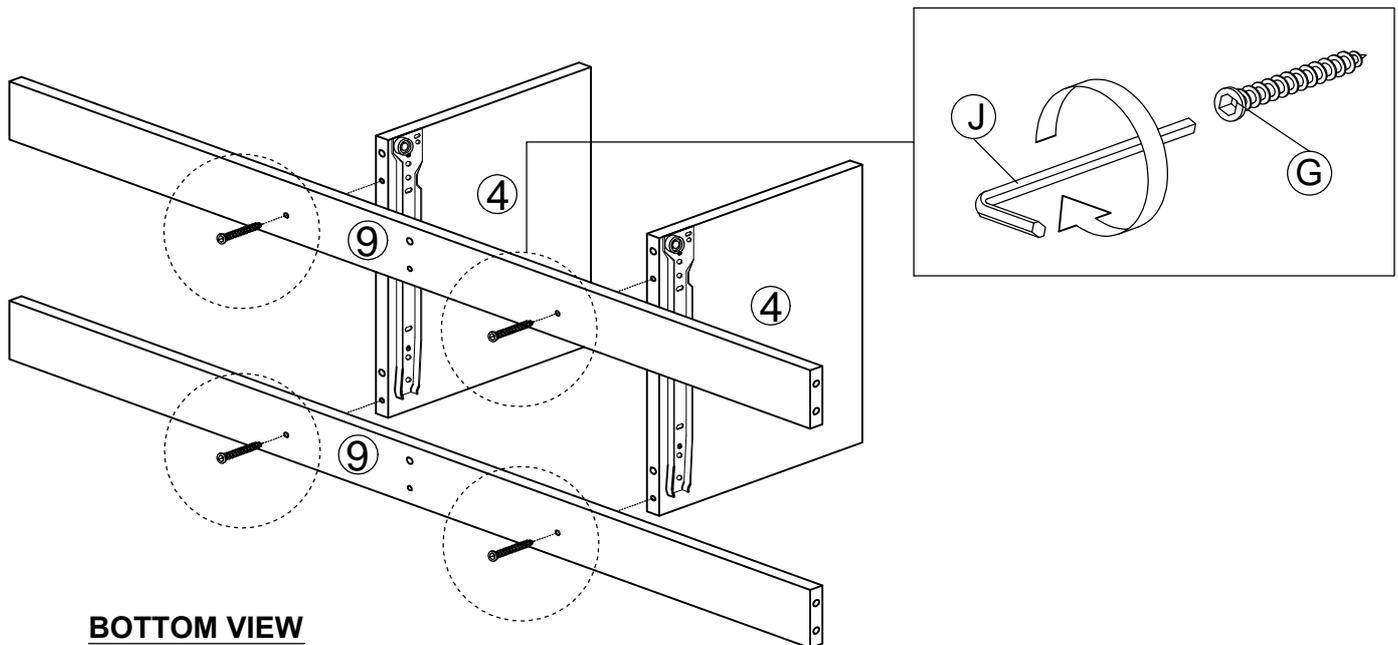


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 9

G		CSK CAP WOOD M6 X 60MM	4
J		ALLEY KEY M4	1




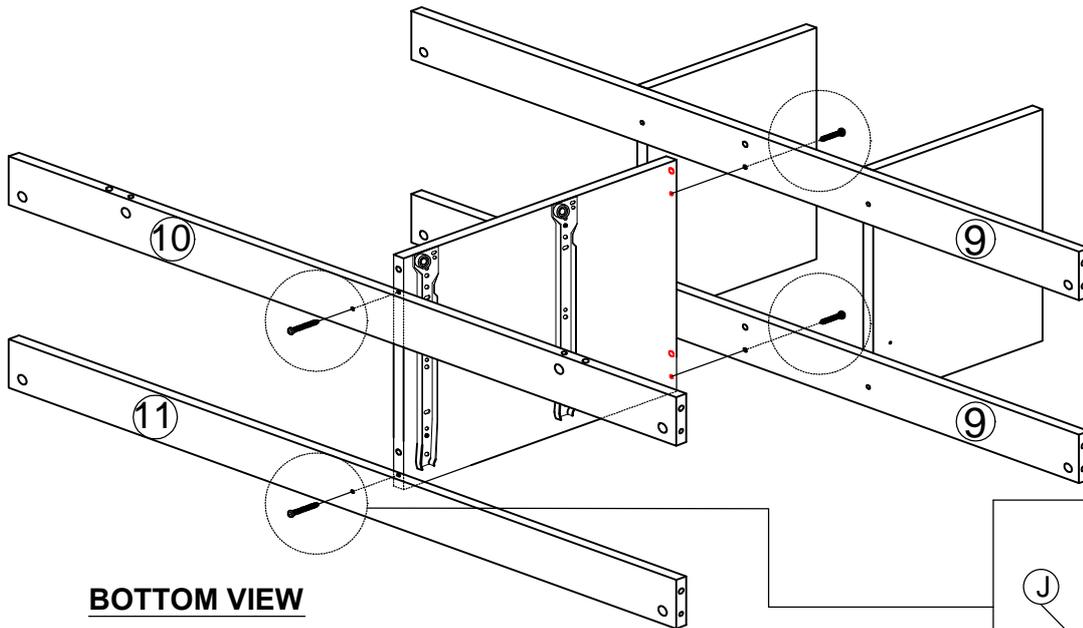


BOTTOM VIEW

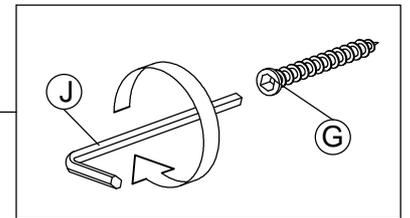

STEP 10

B		CAM NUT	5
D		CAM CAP	5
J		ALLEY KEY M4	1

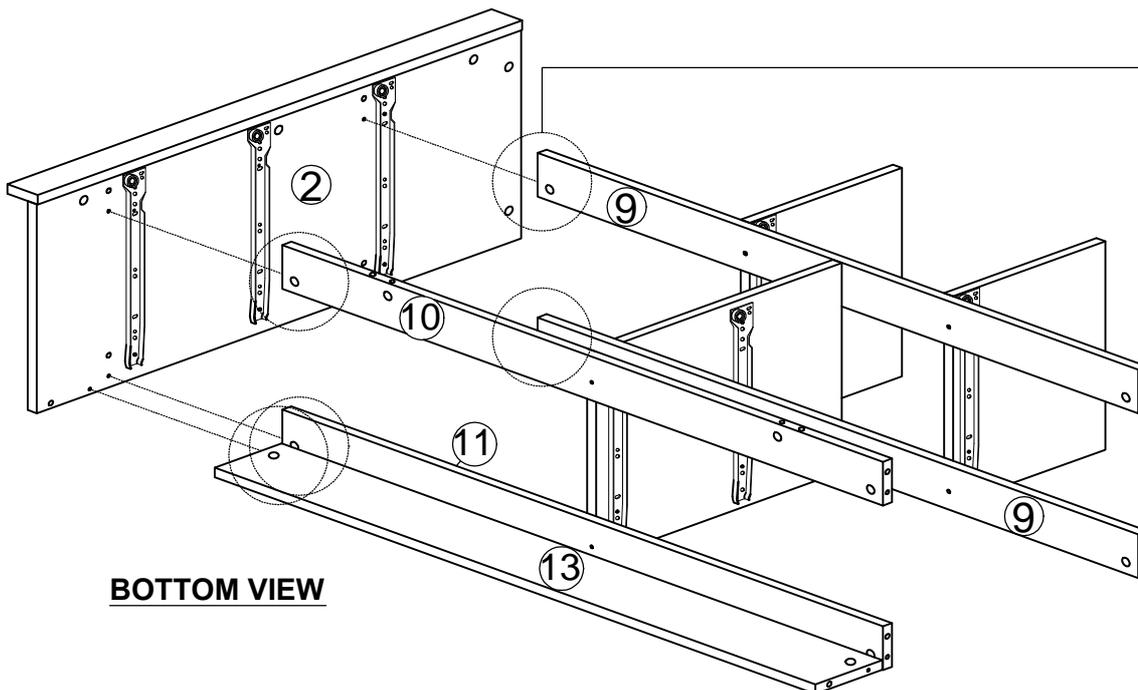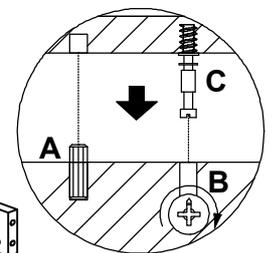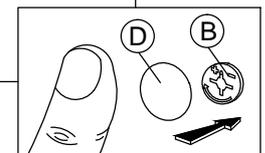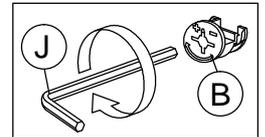





BOTTOM VIEW

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.







STEP 11

B		CAM NUT	7
D		CAM CAP	7
J		ALLEY KEY M4	1

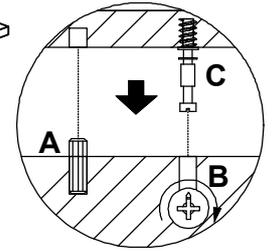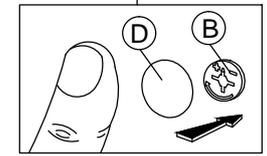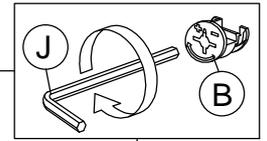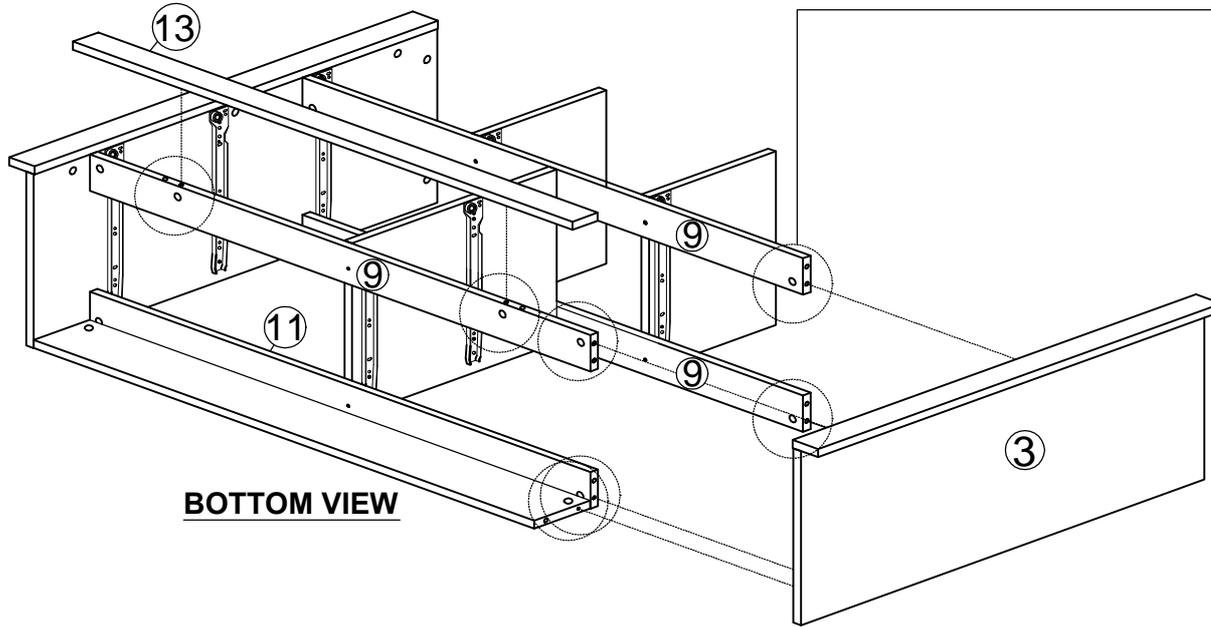

STEP 12

B		CAM NUT	3
D		CAM CAP	3
J		ALLEY KEY M4	1
K		PVC NAIL WITH PIN 5/8	4

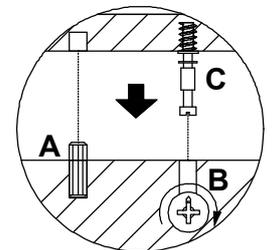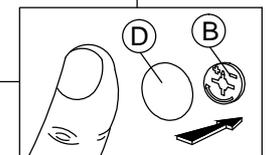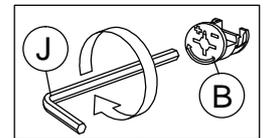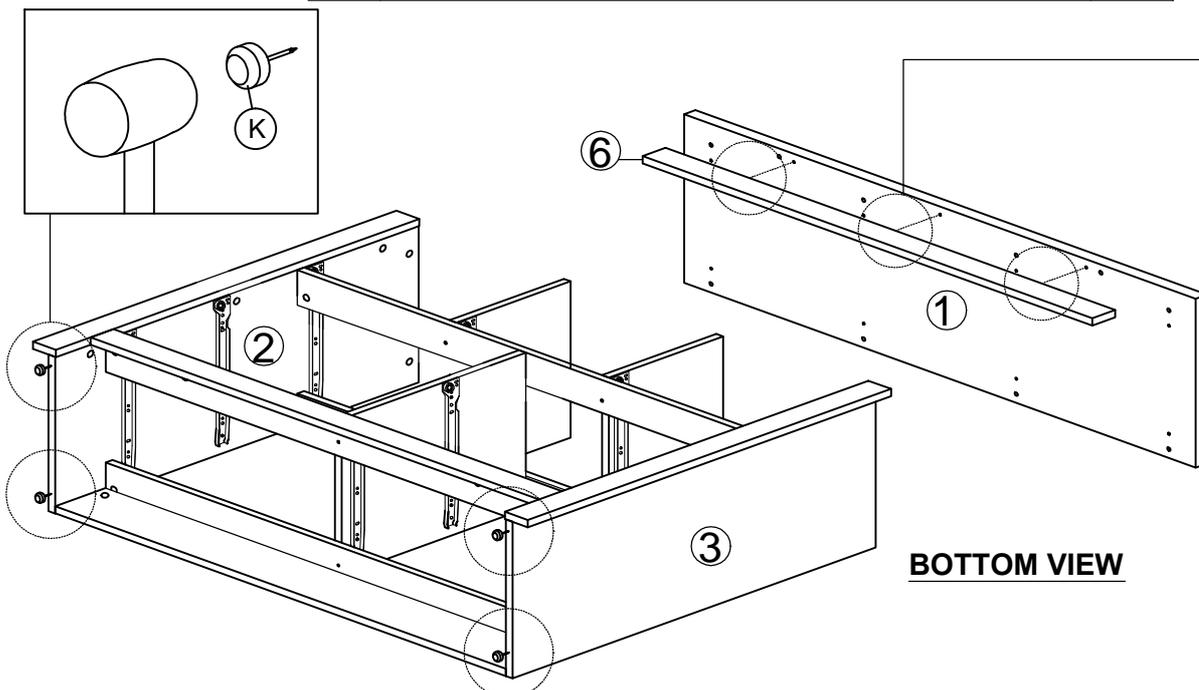


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 13

B		CAM NUT	8
D		CAM CAP	8
J		ALLEY KEY M4	1

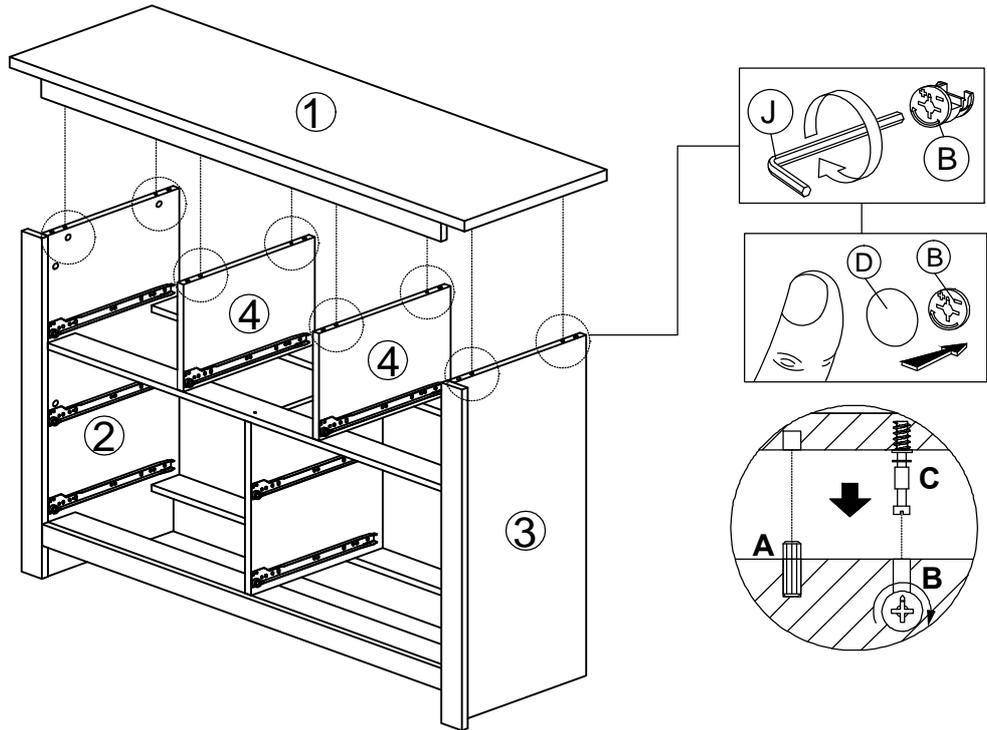

STEP 14


L		NAIL 5/8	20
---	---	----------	----

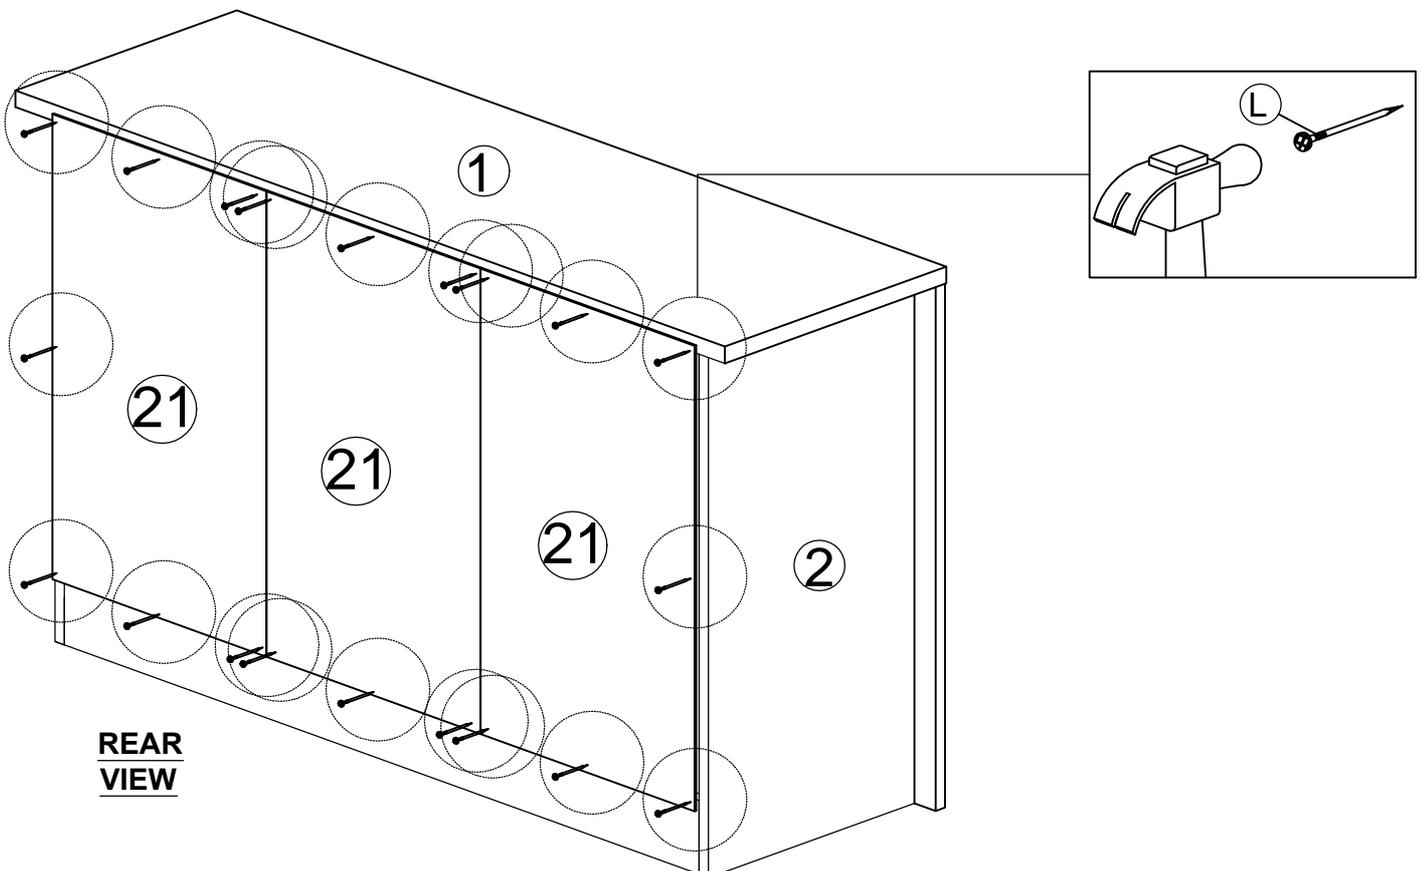


THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.



STEP 15

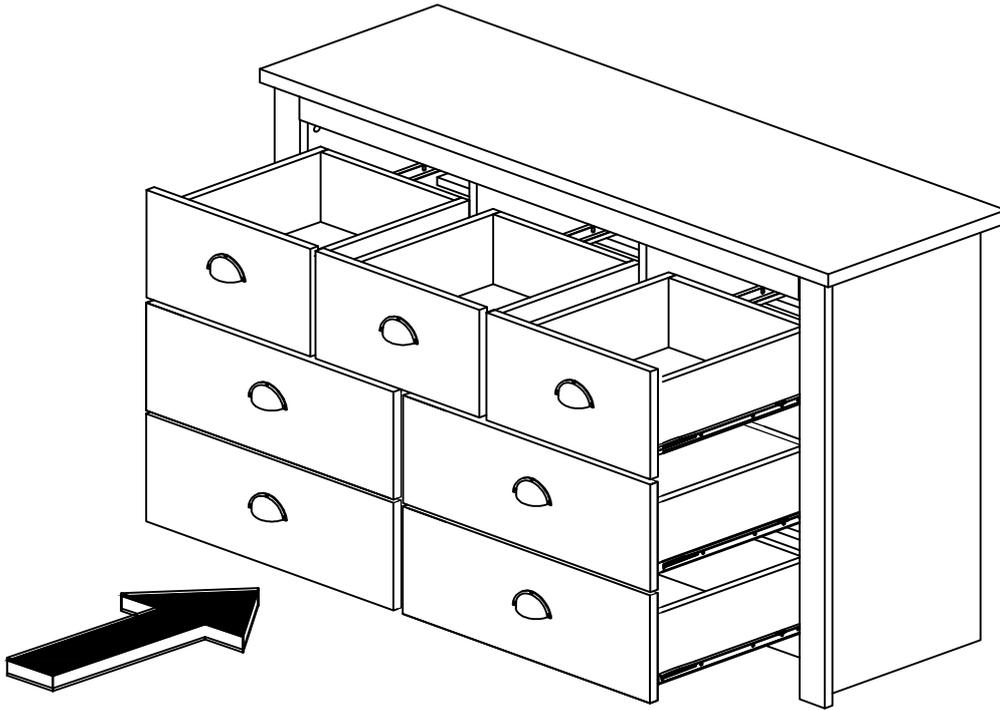

COMPLETED

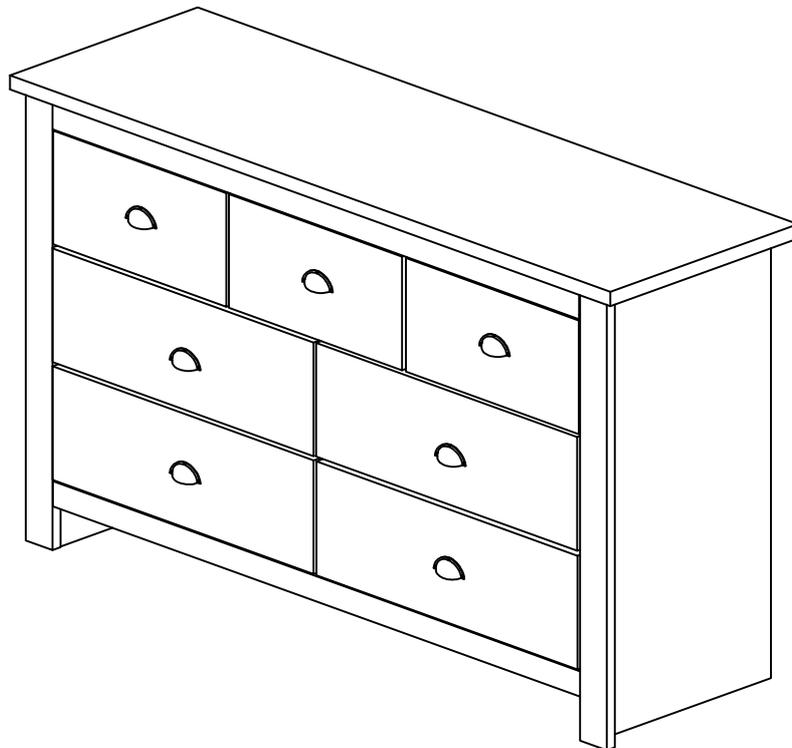

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

